

Contents

1	GENERAL INFORMATION AND MAINTENANCE	1-2 HOW TO USE THIS BOOK	1-13 ROUTINE MAINTENANCE
		1-3 TOOLS AND EQUIPMENT	1-33 FLUIDS AND LUBRICANTS
		1-6 SERVICING YOUR VEHICLE SAFELY	1-45 JUMP STARTING A DEAD BATTERY
		1-7 FASTENERS, MEASUREMENTS AND CONVERSIONS	1-46 JACKING
		1-11 SERIAL NUMBER IDENTIFICATION	
2	ENGINE ELECTRICAL	2-2 DISTRIBUTOR IGNITION	2-8 CHARGING SYSTEM
		2-6 DISTRIBUTORLESS IGNITION SYSTEM	2-10 STARTING SYSTEM
		2-8 FIRING ORDERS	2-10 SENDING UNITS AND SENSORS
3	ENGINE AND ENGINE OVERHAUL	3-2 ENGINE MECHANICAL	3-43 ENGINE RECONDITIONING
		3-42 EXHAUST SYSTEM	
4	DRIVEABILITY AND EMISSION CONTROLS	4-2 EMISSION CONTROLS	4-17 TROUBLE CODES—EEC IV SYSTEM
		4-6 ELECTRONIC ENGINE CONTROLS	4-21 TROUBLE CODES—EEC V SYSTEM (OBD-II)
		4-14 COMPONENT LOCATIONS	4-27 VACUUM DIAGRAMS
5	FUEL SYSTEM	5-2 BASIC FUEL SYSTEM DIAGNOSIS	5-4 GASOLINE FUEL INJECTION SYSTEM
		5-2 FUEL LINES AND FITTINGS	5-11 FUEL TANK
6	CHASSIS ELECTRICAL	6-2 UNDERSTANDING AND TROUBLESHOOTING ELECTRICAL SYSTEMS	6-16 ENTERTAINMENT SYSTEMS
		6-7 BATTERY CABLES	6-19 WINDSHIELD WIPERS AND WASHERS
		6-7 AIR BAG (SUPPLEMENTAL RESTRAINT SYSTEM)	6-21 INSTRUMENTS AND SWITCHES
		6-9 HEATING AND AIR CONDITIONING	6-23 LIGHTING
		6-15 CRUISE CONTROL	6-29 CIRCUIT PROTECTION
			6-41 WIRING DIAGRAMS