

1-10 GENERAL INFORMATION AND MAINTENANCE

Click (Breakaway) Type

See Figure 28

Another popular design of torque wrench is the click type. To use the click type wrench you pre-adjust it to a torque setting. Once the torque is reached, the wrench has a reflex signaling feature that causes a momentary breakaway of the torque wrench body, sending an impulse to the operator's hand.

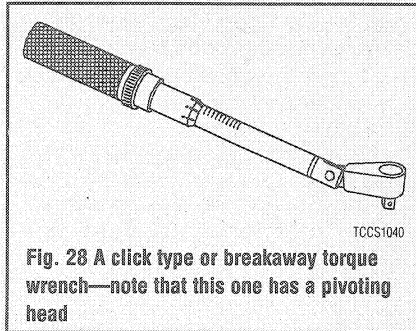


Fig. 28 A click type or breakaway torque wrench—note that this one has a pivoting head

Pivot Head Type

See Figures 28 and 29

Some torque wrenches (usually of the click type) may be equipped with a pivot head that can allow it to be used in areas of limited access. BUT, it must be used properly. To hold a pivot head wrench, grasp the handle lightly, and as you pull on the handle, it should be floated on the pivot point. If the handle comes in contact with the yoke extension during the process of pulling, there is a very good chance the torque readings will be inaccurate because this could alter the wrench loading point. The design of the handle is usually such as to make it inconvenient to deliberately misuse the wrench.

It should be mentioned that the use of any U-joint, wobble or extension will have an effect on the torque readings, no matter what type of wrench you are using. For the most accurate readings, install the socket directly on the wrench driver. If necessary, straight extensions (which hold a socket directly under the wrench driver) will have the least effect on the torque reading. Avoid any extension that alters the length of the wrench from the handle to the head/driving point (such as a crow's foot). U-joint or wobble extensions can greatly affect the readings; avoid their use at all times.

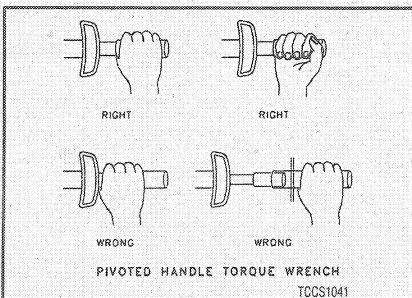


Fig. 29 Torque wrenches with pivoting heads must be grasped and used properly to prevent an incorrect reading

Rigid Case (Direct Reading)

See Figure 30

A rigid case or direct reading torque wrench is equipped with a dial indicator to show torque values. One advantage of these wrenches is that they can be held at any position on the wrench without affecting accuracy. These wrenches are often preferred because they tend to be compact, easy to read and have a great degree of accuracy.

TORQUE ANGLE METERS

See Figure 31

Because the frictional characteristics of each fastener or threaded hole will vary, clamp loads, which are based strictly on torque, will vary as well. In most applications, this variance is not significant enough to cause worry. But, in certain applications, a manufacturer's engineers may determine that more precise clamp loads are necessary (such is the case with many aluminum cylinder heads). In these cases, a torque angle method of installation would be specified. When installing fasteners which are torque angle tightened, a predetermined seating torque and standard torque wrench are usually used first to remove any compliance from the joint. The fastener is then tightened the specified additional portion of a turn measured in degrees. A torque angle gauge (mechanical protractor) is used for these applications.

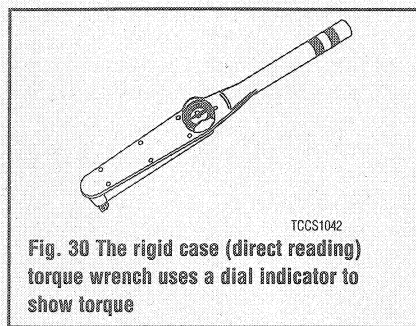


Fig. 30 The rigid case (direct reading) torque wrench uses a dial indicator to show torque

factorer's engineers may determine that more precise clamp loads are necessary (such is the case with many aluminum cylinder heads). In these cases, a torque angle method of installation would be specified. When installing fasteners which are torque angle tightened, a predetermined seating torque and standard torque wrench are usually used first to remove any compliance from the joint. The fastener is then tightened the specified additional portion of a turn measured in degrees. A torque angle gauge (mechanical protractor) is used for these applications.

Standard and Metric Measurements

See Figure 32

Throughout this manual, specifications are given to help you determine the condition of various com-

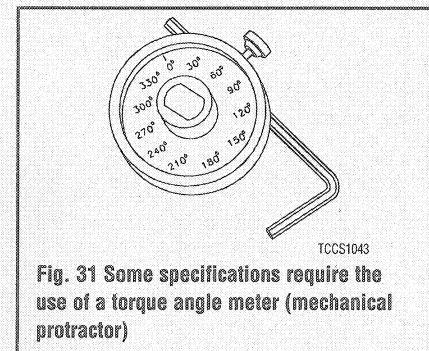


Fig. 31 Some specifications require the use of a torque angle meter (mechanical protractor)

CONVERSION FACTORS

LENGTH-DISTANCE

Inches (in.)	x 25.4	= Millimeters (mm)	x 0.0394	= Inches
Feet (ft.)	x .305	= Meters (m)	x 3.281	= Feet
Miles	x 1.609	= Kilometers (km)	x .621	= Miles

VOLUME

Cubic Inches (in ³)	x 16.387	= Cubic Centimeters	x .061	= in ³
IMP Pints (IMP pt.)	x .568	= Liters (L)	x 1.76	= IMP pt.
IMP Quarts (IMP qt.)	x 1.137	= Liters (L)	x .88	= IMP qt.
IMP Gallons (IMP gal.)	x 4.546	= Liters (L)	x .22	= IMP gal.
IMP Quarts (IMP qt.)	x 1.201	= US Quarts (US qt.)	x .833	= IMP qt.
IMP Gallons (IMP gal.)	x 1.201	= US Gallons (US gal.)	x .833	= IMP gal.
FL. Ounces	x 29.573	= Milliliters	x .034	= Ounces
US Pints (US pt.)	x .473	= Liters (L)	x 2.113	= Pints
US Quarts (US qt.)	x .946	= Liters (L)	x 1.057	= Quarts
US Gallons (US gal.)	x 3.785	= Liters (L)	x .264	= Gallons

MASS-WEIGHT

Ounces (oz.)	x 28.35	= Grams (g)	x .035	= Ounces
Pounds (lb.)	x .454	= Kilograms (kg)	x 2.205	= Pounds

PRESSURE

Pounds Per Sq. In. (psi)	x 6.895	= Kilopascals (kPa)	x .145	= psi
Inches of Mercury (Hg)	x .4912	= psi	x 2.036	= Hg
Inches of Mercury (Hg)	x 3.377	= Kilopascals (kPa)	x .2961	= Hg
Inches of Water (H ₂ O)	x .07355	= Inches of Mercury	x 13.783	= H ₂ O
Inches of Water (H ₂ O)	x .03613	= psi	x 27.684	= H ₂ O
Inches of Water (H ₂ O)	x .248	= Kilopascals (kPa)	x 4.026	= H ₂ O

TORQUE

Pounds-Force Inches (in-lb)	x .113	= Newton Meters (N·m)	x 8.85	= in-lb
Pounds-Force Feet (ft-lb)	x 1.356	= Newton Meters (N·m)	x 7.38	= ft-lb

VELOCITY

Miles Per Hour (MPH)	x 1.609	= Kilometers Per Hour (KPH)	x .621	= MPH
----------------------	---------	-----------------------------	--------	-------

POWER

Horsepower (Hp)	x .745	= Kilowatts	x 1.34	= Horsepower
-----------------	--------	-------------	--------	--------------

FUEL CONSUMPTION*

Miles Per Gallon IMP (MPG)	x .354	= Kilometers Per Liter (Km/L)
Kilometers Per Liter (Km/L)	x 2.352	= IMP MPG
Miles Per Gallon US (MPG)	x .425	= Kilometers Per Liter (Km/L)
Kilometers Per Liter (Km/L)	x 2.352	= US MPG

*It is common to convert from miles per gallon (mpg) to liters/100 kilometers (l/100 km), where mpg (IMP) x 1/100 km = 282 and mpg (US) x 1/100 km = 235.

TEMPERATURE

Degree Fahrenheit (°F)	= (°C x 1.8) + 32
Degree Celsius (°C)	= (°F - 32) x .56

TCCS1044

Fig. 32 Standard and metric conversion factors chart