


ROUTINE MAINTENANCE

UNDERHOOD COMPONENT MAINTENANCE LOCATIONS—3.8L ENGINE

- | | | |
|-----------------------|---------------------------------------|----------------------------------|
| 1. Battery | 6. PCV valve | 11. Radiator cap |
| 2. Air Cleaner | 7. Spark plug wires | 12. Power steering fill cap |
| 3. Radiator hose | 8. Accessory drive (Serpentine belt) | 13. Oil fill cap |
| 4. Master cylinder | 9. Coolant tank | 14. Oil dipstick |
| 5. Transaxle dipstick | 10. Windshield washer fluid reservoir | 15. Spark plugs (3 on each side) |

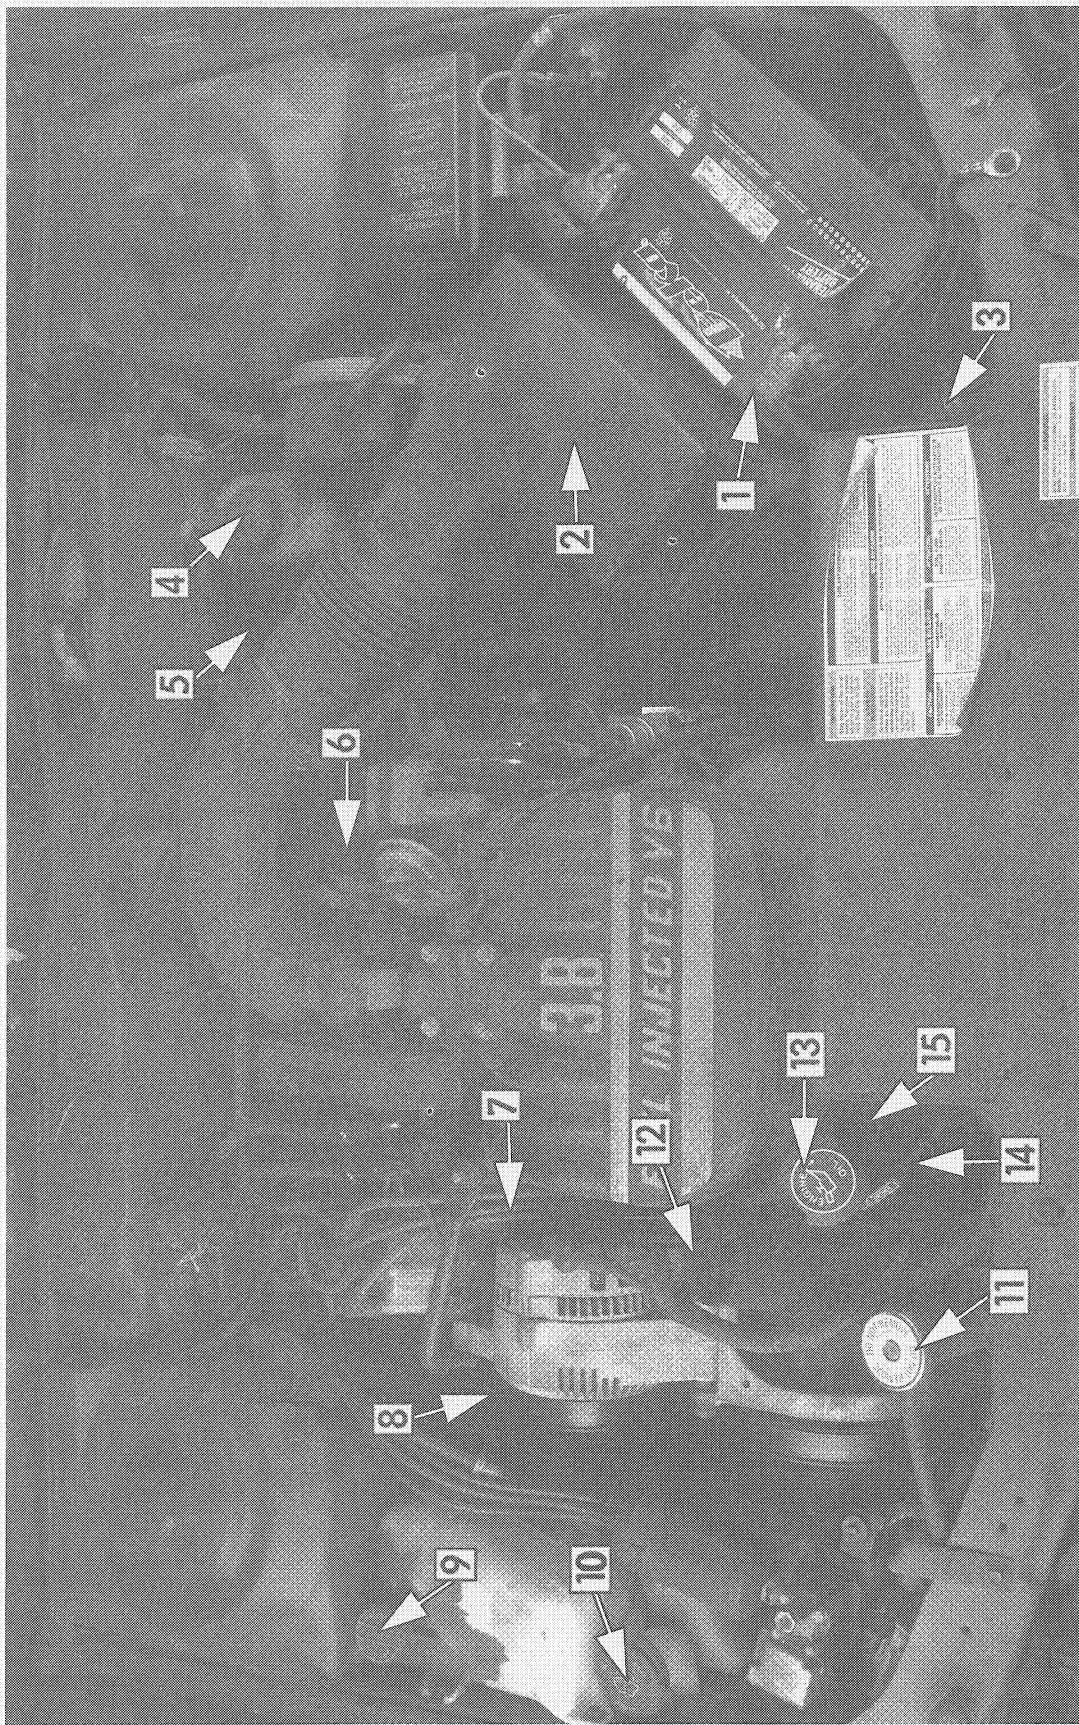

83T41P41