

UNDERHOOD COMPONENT MAINTENANCE LOCATIONS—4.6L ENGINE

- | | | |
|--------------------------|---------------------------------------|----------------------------------|
| 1. Battery | 6. PCV valve | 11. Radiator cap |
| 2. Air Cleaner | 7. Spark plug wires | 12. Power steering fill cap |
| 3. Radiator hose (Upper) | 8. Accessory drive (Serpentine belt) | 13. Oil fill cap |
| 4. Master cylinder | 9. Coolant tank | 14. Oil dipstick |
| 5. Transmission dipstick | 10. Windshield washer fluid reservoir | 15. Spark plugs (4 on each side) |

