

DISTRIBUTOR IGNITION 2-2

- GENERAL INFORMATION 2-2
 - THICK FILM INTEGRATED (TFI-IV) IGNITION SYSTEM 2-2
- DIAGNOSIS AND TESTING 2-2
 - SECONDARY SPARK TEST 2-2
 - CYLINDER DROP TEST 2-3
- ADJUSTMENTS 2-3
- IGNITION COIL 2-3
 - TESTING 2-3
 - REMOVAL & INSTALLATION 2-4
- IGNITION MODULE 2-4
 - REMOVAL & INSTALLATION 2-4
- DISTRIBUTOR 2-5
 - REMOVAL & INSTALLATION 2-5

DISTRIBUTORLESS IGNITION SYSTEM 2-6

- GENERAL INFORMATION 2-6
 - ELECTRONIC DISTRIBUTORLESS IGNITION SYSTEM (EDIS) 2-6
 - OBD II—EEC V 2-6
- DIAGNOSIS AND TESTING 2-6
- ADJUSTMENTS 2-6
- IGNITION COIL PACK 2-6
 - TESTING 2-6
 - REMOVAL & INSTALLATION 2-6
- IGNITION MODULE 2-7
 - REMOVAL & INSTALLATION 2-7
- CRANKSHAFT AND CAMSHAFT POSITION SENSORS 2-8

FIRING ORDERS 2-8

CHARGING SYSTEM 2-8

- ALTERNATOR PRECAUTIONS 2-8
- ALTERNATOR 2-8
 - TESTING 2-8
 - REMOVAL & INSTALLATION 2-9
- REGULATOR 2-9
 - REMOVAL & INSTALLATION 2-9

STARTING SYSTEM 2-10

- STARTER 2-10
 - TESTING 2-10
 - REMOVAL & INSTALLATION 2-10
- SOLENOID/RELAY REPLACEMENT 2-10

SENDING UNITS AND SENSORS 2-10

- SENDING UNITS AND SENSORS 2-10
- COOLANT TEMPERATURE SENSOR 2-10
 - TESTING 2-10
 - REMOVAL & INSTALLATION 2-10
- OIL PRESSURE SENDER/SWITCH 2-11
 - TESTING 2-11
 - REMOVAL & INSTALLATION 2-11
- LOW OIL LEVEL SENSOR 2-11
 - TESTING 2-11
 - REMOVAL & INSTALLATION 2-11
- ELECTRIC FAN SWITCH 2-12
 - TESTING 2-12
 - REMOVAL & INSTALLATION 2-12

2

ENGINE ELECTRICAL

- DISTRIBUTOR IGNITION 2-2
- DISTRIBUTORLESS IGNITION SYSTEM 2-6
- FIRING ORDERS 2-8
- CHARGING SYSTEM 2-8
- STARTING SYSTEM 2-10
- SENDING UNITS AND SENSORS 2-10