

ENGINE MECHANICAL 3-2

- ENGINE 3-4
 - REMOVAL & INSTALLATION 3-4
- ROCKER ARM (VALVE) COVER 3-8
 - REMOVAL & INSTALLATION 3-8
- ROCKER ARMS/ROLLER FOLLOWERS 3-10
 - REMOVAL & INSTALLATION 3-10
- THERMOSTAT 3-10
 - REMOVAL & INSTALLATION 3-10
- INTAKE MANIFOLD 3-11
 - REMOVAL & INSTALLATION 3-11
- EXHAUST MANIFOLD 3-16
 - REMOVAL & INSTALLATION 3-16
- RADIATOR 3-18
 - REMOVAL & INSTALLATION 3-18
- ENGINE FAN 3-20
 - REMOVAL & INSTALLATION 3-20
- WATER PUMP 3-21
 - REMOVAL & INSTALLATION 3-21
- CYLINDER HEAD 3-24
 - REMOVAL & INSTALLATION 3-24
- OIL PAN 3-29
 - REMOVAL & INSTALLATION 3-29
- OIL PUMP 3-31
 - REMOVAL & INSTALLATION 3-31
- CRANKSHAFT DAMPER 3-32
 - REMOVAL & INSTALLATION 3-32
- TIMING CHAIN COVER 3-34
 - REMOVAL & INSTALLATION 3-34
 - REMOVAL & INSTALLATION 3-35
- TIMING CHAIN AND GEARS 3-35
 - REMOVAL & INSTALLATION 3-35
- CAMSHAFT, BEARINGS AND LIFTERS 3-38
 - REMOVAL & INSTALLATION 3-38
 - INSPECTION 3-39
- BALANCE SHAFT 3-40
 - REMOVAL & INSTALLATION 3-40
- REAR MAIN SEAL 3-40
 - REMOVAL & INSTALLATION 3-40
- FLYWHEEL/FLEXPLATE 3-41
 - REMOVAL & INSTALLATION 3-41
- EXHAUST SYSTEM 3-42**
 - INSPECTION 3-42
 - REPLACEMENT 3-42
- ENGINE RECONDITIONING 3-43**
 - DETERMINING ENGINE CONDITION 3-43
 - COMPRESSION TEST 3-43
 - BUY OR REBUILD? 3-44
 - ENGINE OVERHAUL TIPS 3-44
 - TOOLS 3-44
 - OVERHAUL TIPS 3-44
 - CLEANING 3-44
 - REPAIRING DAMAGED THREADS 3-45
 - ENGINE PREPARATION 3-46
 - CYLINDER HEAD 3-46
 - DISASSEMBLY 3-46
 - INSPECTION 3-48

- REFINISHING & REPAIRING 3-49
 - ASSEMBLY 3-50
- ENGINE BLOCK 3-51
 - GENERAL INFORMATION 3-51
 - DISASSEMBLY 3-51
 - INSPECTION 3-52
 - REFINISHING 3-53
 - ASSEMBLY 3-53
- ENGINE START-UP AND BREAK-IN 3-56
 - STARTING THE ENGINE 3-56
 - BREAKING IT IN 3-56
 - KEEP IT MAINTAINED 3-56
- SPECIFICATIONS CHARTS**
 - ENGINE MECHANICAL SPECIFICATIONS 3-2
 - TORQUE SPECIFICATIONS 3-57

3

ENGINE AND ENGINE OVERHAUL

ENGINE MECHANICAL 3-2
EXHAUST SYSTEM 3-42
ENGINE RECONDITIONING 3-43