

EMISSION CONTROLS 4-2

POSITIVE CRANKCASE VENTILATION
SYSTEM 4-2

OPERATION 4-2

TESTING 4-2

REMOVAL & INSTALLATION 4-2

EVAPORATIVE EMISSION

CONTROLS 4-2

OPERATION 4-2

REMOVAL & INSTALLATION 4-3

EXHAUST GAS RECIRCULATION SYSTEM
4-3

OPERATION 4-3

COMPONENT TESTING 4-4

REMOVAL & INSTALLATION 4-4

ELECTRONIC ENGINE

CONTROLS 4-6

POWERTRAIN CONTROL MODULE

(PCM) 4-6

OPERATION 4-6

OXYGEN SENSOR 4-6

OPERATION 4-6

TESTING 4-7

REMOVAL & INSTALLATION 4-7

IDLE AIR CONTROL VALVE 4-8

OPERATION 4-8

TESTING 4-8

REMOVAL & INSTALLATION 4-8

ENGINE COOLANT TEMPERATURE (ECT)

SENSOR 4-8

OPERATION 4-8

TESTING 4-8

REMOVAL & INSTALLATION 4-9

INTAKE AIR TEMPERATURE

SENSOR 4-10

OPERATION 4-10

TESTING 4-10

REMOVAL & INSTALLATION 4-10

MASS AIRFLOW SENSOR 4-10

OPERATION 4-10

TESTING 4-11

REMOVAL & INSTALLATION 4-11

MANIFOLD AIR PRESSURE (MAP)

SENSOR 4-11

OPERATION 4-11

TESTING 4-11

REMOVAL & INSTALLATION 4-12

THROTTLE POSITION SENSOR 4-12

OPERATION 4-12

TESTING 4-12

REMOVAL & INSTALLATION 4-12

CAMSHAFT POSITION SENSOR 4-12

TESTING 4-12

REMOVAL & INSTALLATION 4-12

CRANKSHAFT POSITION SENSOR 4-13

OPERATION 4-13

TESTING 4-13

REMOVAL & INSTALLATION 4-13

COMPONENT LOCATIONS 4-14

TROUBLE CODES —EEC-IV

SYSTEM 4-17

GENERAL INFORMATION 4-17

FAILURE MODE EFFECTS

MANAGEMENT (FMEM) 4-17

HARDWARE LIMITED OPERATION

STRATEGY (HLOS) 4-17

DIAGNOSTIC LINK CONNECTOR 4-17

HAND-HELD SCAN TOOLS 4-17

ELECTRICAL TOOLS 4-17

READING CODES 4-18

VISUAL INSPECTION 4-18

ELECTRONIC TESTING 4-18

CLEARING CODES 4-21

CONTINUOUS MEMORY

CODES 4-21

KEEP ALIVE MEMORY 4-21

TROUBLE CODES —EEC-V SYSTEM

(OBD-II) 4-21

GENERAL INFORMATION 4-21

MALFUNCTION INDICATOR LAMP 4-22

DATA LINK CONNECTOR 4-22

ELECTRICAL TOOLS 4-22

READING CODES 4-22

CLEARING CODES 4-22

CONTINUOUS MEMORY

CODES 4-22

KEEP ALIVE MEMORY 4-22

EEC-V DIAGNOSTIC TROUBLE CODES

(DTC'S) 4-22

VACUUM DIAGRAMS 4-27

COMPONENT LOCATIONS

COMMON EMISSIONS AND
ELECTRONIC ENGINE CONTROL
COMPONENT LOCATIONS—3.8L
ENGINE 4-14

COMMON EMISSIONS AND
ELECTRONIC ENGINE CONTROL
COMPONENT LOCATIONS—4.6L
ENGINE 4-15

COMMON EMISSIONS AND
ELECTRONIC ENGINE CONTROL
COMPONENT LOCATIONS—5.0L
ENGINE 4-16

4

DRIVEABILITY AND EMISSIONS CONTROLS

EMISSION CONTROLS 4-2
ELECTRONIC ENGINE CONTROLS 4-6
COMPONENT LOCATIONS 4-14
TROUBLE CODES—EEC IV
SYSTEM 4-17
TROUBLE CODES—EEC V SYSTEM
(OBD-II) 4-21
VACUUM DIAGRAMS 4-27