

- P0144** O2 Sensor Circuit High Voltage (Bank 1 Sensor 3)
- P0145** O2 Sensor Circuit Slow Response (Bank 1 Sensor 3)
- P0146** O2 Sensor Circuit No Activity Detected (Bank 1 Sensor 3)
- P0147** O2 Sensor Heater Circuit Malfunction (Bank 1 Sensor 3)
- P0150** O2 Sensor Circuit Malfunction (Bank 2 Sensor 1)
- P0151** O2 Sensor Circuit Low Voltage (Bank 2 Sensor 1)
- P0152** O2 Sensor Circuit High Voltage (Bank 2 Sensor 1)
- P0153** O2 Sensor Circuit Slow Response (Bank 2 Sensor 1)
- P0154** O2 Sensor Circuit No Activity Detected (Bank 2 Sensor 1)
- P0155** O2 Sensor Heater Circuit Malfunction (Bank 2 Sensor 1)
- P0156** O2 Sensor Circuit Malfunction (Bank 2 Sensor 2)
- P0157** O2 Sensor Circuit Low Voltage (Bank 2 Sensor 2)
- P0158** O2 Sensor Circuit High Voltage (Bank 2 Sensor 2)
- P0159** O2 Sensor Circuit Slow Response (Bank 2 Sensor 2)
- P0160** O2 Sensor Circuit No Activity Detected (Bank 2 Sensor 2)
- P0161** O2 Sensor Heater Circuit Malfunction (Bank 2 Sensor 2)
- P0162** O2 Sensor Circuit Malfunction (Bank 2 Sensor 3)
- P0163** O2 Sensor Circuit Low Voltage (Bank 2 Sensor 3)
- P0164** O2 Sensor Circuit High Voltage (Bank 2 Sensor 3)
- P0165** O2 Sensor Circuit Slow Response (Bank 2 Sensor 3)
- P0166** O2 Sensor Circuit No Activity Detected (Bank 2 Sensor 3)
- P0167** O2 Sensor Heater Circuit Malfunction (Bank 2 Sensor 3)
- P0170** Fuel Trim Malfunction (Bank 1)
- P0171** System Too Lean (Bank 1)
- P0172** System Too Rich (Bank 1)
- P0173** Fuel Trim Malfunction (Bank 2)
- P0174** System Too Lean (Bank 2)
- P0175** System Too Rich (Bank 2)
- P0180** Fuel Temperature Sensor "A" Circuit Malfunction
- P0181** Fuel Temperature Sensor "A" Circuit Range/Performance
- P0182** Fuel Temperature Sensor "A" Circuit Low Input
- P0183** Fuel Temperature Sensor "A" Circuit High Input
- P0184** Fuel Temperature Sensor "A" Circuit Intermittent
- P0185** Fuel Temperature Sensor "B" Circuit Malfunction
- P0186** Fuel Temperature Sensor "B" Circuit Range/Performance
- P0187** Fuel Temperature Sensor "B" Circuit Low Input
- P0188** Fuel Temperature Sensor "B" Circuit High Input
- P0189** Fuel Temperature Sensor "B" Circuit Intermittent
- P0190** Fuel Rail Pressure Sensor Circuit Malfunction
- P0191** Fuel Rail Pressure Sensor Circuit Range/Performance
- P0192** Fuel Rail Pressure Sensor Circuit Low Input
- P0193** Fuel Rail Pressure Sensor Circuit High Input
- P0194** Fuel Rail Pressure Sensor Circuit Intermittent
- P0200** Injector Circuit Malfunction
- P0201** Injector Circuit Malfunction —Cylinder 1
- P0202** Injector Circuit Malfunction —Cylinder 2
- P0203** Injector Circuit Malfunction —Cylinder 3
- P0204** Injector Circuit Malfunction —Cylinder 4
- P0205** Injector Circuit Malfunction —Cylinder 5
- P0206** Injector Circuit Malfunction —Cylinder 6
- P0207** Injector Circuit Malfunction —Cylinder 7
- P0208** Injector Circuit Malfunction —Cylinder 8
- P0215** Engine Shutoff Solenoid Malfunction
- P0217** Engine Over Temperature Condition
- P0218** Transmission Over Temperature Condition
- P0219** Engine Over Speed Condition
- P0220** Throttle/Pedal Position Sensor/Switch "B" Circuit Malfunction
- P0221** Throttle/Pedal Position Sensor/Switch "B" Circuit Range/Performance Problem
- P0222** Throttle/Pedal Position Sensor/Switch "B" Circuit Low Input
- P0223** Throttle/Pedal Position Sensor/Switch "B" Circuit High Input
- P0224** Throttle/Pedal Position Sensor/Switch "B" Circuit Intermittent
- P0225** Throttle/Pedal Position Sensor/Switch "C" Circuit Malfunction
- P0226** Throttle/Pedal Position Sensor/Switch "C" Circuit Range/Performance Problem
- P0227** Throttle/Pedal Position Sensor/Switch "C" Circuit Low Input
- P0228** Throttle/Pedal Position Sensor/Switch "C" Circuit High Input
- P0229** Throttle/Pedal Position Sensor/Switch "C" Circuit Intermittent
- P0230** Fuel Pump Primary Circuit Malfunction
- P0231** Fuel Pump Secondary Circuit Low
- P0232** Fuel Pump Secondary Circuit High
- P0233** Fuel Pump Secondary Circuit Intermittent
- P0261** Cylinder 1 Injector Circuit Low
- P0262** Cylinder 1 Injector Circuit High
- P0263** Cylinder 1 Contribution/Balance Fault
- P0264** Cylinder 2 Injector Circuit Low
- P0265** Cylinder 2 Injector Circuit High
- P0266** Cylinder 2 Contribution/Balance Fault
- P0267** Cylinder 3 Injector Circuit Low
- P0268** Cylinder 3 Injector Circuit High
- P0269** Cylinder 3 Contribution/Balance Fault
- P0270** Cylinder 4 Injector Circuit Low
- P0271** Cylinder 4 Injector Circuit High
- P0272** Cylinder 4 Contribution/Balance Fault
- P0273** Cylinder 5 Injector Circuit Low
- P0274** Cylinder 5 Injector Circuit High
- P0275** Cylinder 5 Contribution/Balance Fault
- P0276** Cylinder 6 Injector Circuit Low
- P0277** Cylinder 6 Injector Circuit High
- P0278** Cylinder 6 Contribution/Balance Fault
- P0279** Cylinder 7 Injector Circuit Low
- P0280** Cylinder 7 Injector Circuit High
- P0281** Cylinder 7 Contribution/Balance Fault
- P0282** Cylinder 8 Injector Circuit Low
- P0283** Cylinder 8 Injector Circuit High
- P0284** Cylinder 8 Contribution/Balance Fault
- P0300** Random/Multiple Cylinder Misfire Detected
- P0301** Cylinder 1 —Misfire Detected
- P0302** Cylinder 2 —Misfire Detected
- P0303** Cylinder 3 —Misfire Detected
- P0304** Cylinder 4 —Misfire Detected
- P0305** Cylinder 5 —Misfire Detected
- P0306** Cylinder 6 —Misfire Detected
- P0307** Cylinder 7 —Misfire Detected
- P0308** Cylinder 8 —Misfire Detected
- P0320** Ignition/Distributor Engine Speed Input Circuit Malfunction
- P0321** Ignition/Distributor Engine Speed Input Circuit Range/Performance
- P0322** Ignition/Distributor Engine Speed Input Circuit No Signal
- P0323** Ignition/Distributor Engine Speed Input Circuit Intermittent
- P0325** Knock Sensor 1 —Circuit Malfunction (Bank 1 or Single Sensor)
- P0326** Knock Sensor 1 —Circuit Range/Performance (Bank 1 or Single Sensor)
- P0327** Knock Sensor 1 —Circuit Low Input (Bank 1 or Single Sensor)
- P0328** Knock Sensor 1 —Circuit High Input (Bank 1 or Single Sensor)
- P0329** Knock Sensor 1 —Circuit Input Intermittent (Bank 1 or Single Sensor)
- P0330** Knock Sensor 2 —Circuit Malfunction (Bank 2)
- P0331** Knock Sensor 2 —Circuit Range/Performance (Bank 2)
- P0332** Knock Sensor 2 —Circuit Low Input (Bank 2)
- P0333** Knock Sensor 2 —Circuit High Input (Bank 2)
- P0334** Knock Sensor 2 —Circuit Input Intermittent (Bank 2)
- P0335** Crankshaft Position Sensor "A" Circuit Malfunction
- P0336** Crankshaft Position Sensor "A" Circuit Range/Performance
- P0337** Crankshaft Position Sensor "A" Circuit Low Input
- P0338** Crankshaft Position Sensor "A" Circuit High Input
- P0339** Crankshaft Position Sensor "A" Circuit Intermittent
- P0340** Camshaft Position Sensor Circuit Malfunction
- P0341** Camshaft Position Sensor Circuit Range/Performance
- P0342** Camshaft Position Sensor Circuit Low Input
- P0343** Camshaft Position Sensor Circuit High Input
- P0344** Camshaft Position Sensor Circuit Intermittent
- P0350** Ignition Coil Primary/Secondary Circuit Malfunction
- P0351** Ignition Coil "A" Primary/Secondary Circuit Malfunction
- P0352** Ignition Coil "B" Primary/Secondary Circuit Malfunction
- P0353** Ignition Coil "C" Primary/Secondary Circuit Malfunction
- P0354** Ignition Coil "D" Primary/Secondary Circuit Malfunction