

P0600 Serial Communication Link Malfunction
P0601 Internal Control Module Memory Check Sum Error
P0602 Control Module Programming Error
P0603 Internal Control Module Keep Alive Memory (KAM) Error
P0604 Internal Control Module Random Access Memory (RAM) Error
P0605 Internal Control Module Read Only Memory (ROM) Error
P0606 PCM Processor Fault
P0608 Control Module VSS Output "A" Malfunction
P0609 Control Module VSS Output "B" Malfunction
P0620 Generator Control Circuit Malfunction
P0621 Generator Lamp "L" Control Circuit Malfunction
P0622 Generator Field "F" Control Circuit Malfunction
P0650 Malfunction Indicator Lamp (MIL) Control Circuit Malfunction
P0654 Engine RPM Output Circuit Malfunction
P0655 Engine Hot Lamp Output Control Circuit Malfunction
P0656 Fuel Level Output Circuit Malfunction
P0700 Transmission Control System Malfunction
P0701 Transmission Control System Range/Performance
P0702 Transmission Control System Electrical
P0703 Torque Converter/Brake Switch "B" Circuit Malfunction
P0704 Clutch Switch Input Circuit Malfunction
P0705 Transmission Range Sensor Circuit Malfunction (PRNDL Input)
P0706 Transmission Range Sensor Circuit Range/Performance
P0707 Transmission Range Sensor Circuit Low Input
P0708 Transmission Range Sensor Circuit High Input
P0709 Transmission Range Sensor Circuit Intermittent
P0710 Transmission Fluid Temperature Sensor Circuit Malfunction
P0711 Transmission Fluid Temperature Sensor Circuit Range/Performance
P0712 Transmission Fluid Temperature Sensor Circuit Low Input
P0713 Transmission Fluid Temperature Sensor Circuit High Input
P0714 Transmission Fluid Temperature Sensor Circuit Intermittent
P0715 Input/Turbine Speed Sensor Circuit Malfunction
P0716 Input/Turbine Speed Sensor Circuit Range/Performance
P0717 Input/Turbine Speed Sensor Circuit No Signal
P0718 Input/Turbine Speed Sensor Circuit Intermittent
P0719 Torque Converter/Brake Switch "B" Circuit Low
P0720 Output Speed Sensor Circuit Malfunction
P0721 Output Speed Sensor Circuit Range/Performance
P0722 Output Speed Sensor Circuit No Signal
P0723 Output Speed Sensor Circuit Intermittent

P0724 Torque Converter/Brake Switch "B" Circuit High
P0725 Engine Speed Input Circuit Malfunction
P0726 Engine Speed Input Circuit Range/Performance
P0727 Engine Speed Input Circuit No Signal
P0728 Engine Speed Input Circuit Intermittent
P0730 Incorrect Gear Ratio
P0731 Gear 1 Incorrect Ratio
P0732 Gear 2 Incorrect Ratio
P0733 Gear 3 Incorrect Ratio
P0734 Gear 4 Incorrect Ratio
P0735 Gear 5 Incorrect Ratio
P0736 Reverse Incorrect Ratio
P0740 Torque Converter Clutch Circuit Malfunction
P0741 Torque Converter Clutch Circuit Performance or Stuck Off
P0742 Torque Converter Clutch Circuit Stuck On
P0743 Torque Converter Clutch Circuit Electrical
P0744 Torque Converter Clutch Circuit Intermittent
P0745 Pressure Control Solenoid Malfunction
P0746 Pressure Control Solenoid Performance or Stuck Off
P0747 Pressure Control Solenoid Stuck On
P0748 Pressure Control Solenoid Electrical
P0749 Pressure Control Solenoid Intermittent
P0750 Shift Solenoid "A" Malfunction
P0751 Shift Solenoid "A" Performance or Stuck Off
P0752 Shift Solenoid "A" Stuck On
P0753 Shift Solenoid "A" Electrical
P0754 Shift Solenoid "A" Intermittent
P0755 Shift Solenoid "B" Malfunction
P0756 Shift Solenoid "B" Performance or Stuck Off
P0757 Shift Solenoid "B" Stuck On
P0758 Shift Solenoid "B" Electrical
P0759 Shift Solenoid "B" Intermittent
P0760 Shift Solenoid "C" Malfunction
P0761 Shift Solenoid "C" Performance or Stuck Off
P0762 Shift Solenoid "C" Stuck On
P0763 Shift Solenoid "C" Electrical
P0764 Shift Solenoid "C" Intermittent
P0765 Shift Solenoid "D" Malfunction
P0766 Shift Solenoid "D" Performance or Stuck Off
P0767 Shift Solenoid "D" Stuck On
P0768 Shift Solenoid "D" Electrical
P0769 Shift Solenoid "D" Intermittent
P0770 Shift Solenoid "E" Malfunction
P0771 Shift Solenoid "E" Performance or Stuck Off
P0772 Shift Solenoid "E" Stuck On
P0773 Shift Solenoid "E" Electrical
P0774 Shift Solenoid "E" Intermittent
P0780 Shift Malfunction
P0781 1-2 Shift Malfunction
P0782 2-3 Shift Malfunction
P0783 3-4 Shift Malfunction
P0784 4-5 Shift Malfunction
P0785 Shift/Timing Solenoid Malfunction
P0786 Shift/Timing Solenoid Range/Performance
P0787 Shift/Timing Solenoid Low
P0788 Shift/Timing Solenoid High
P0789 Shift/Timing Solenoid Intermittent
P0790 Normal/Performance Switch Circuit Malfunction

P0801 Reverse Inhibit Control Circuit Malfunction
P0803 1-4 Upshift (Skip Shift) Solenoid Control Circuit Malfunction
P0804 1-4 Upshift (Skip Shift) Lamp Control Circuit Malfunction
P1000 OBD II Monitor Testing Not Complete More Driving Required
P1001 Key On Engine Running (KOER) Self-Test Not Able To Complete, KOER Aborted
P1100 Mass Air Flow (MAF) Sensor Intermittent
P1101 Mass Air Flow (MAF) Sensor Out Of Self-Test Range
P1111 System Pass 49 State
P1112 Intake Air Temperature (IAT) Sensor Intermittent
P1116 Engine Coolant Temperature (ECT) Sensor Out Of Self-Test Range
P1117 Engine Coolant Temperature (ECT) Sensor Intermittent
P1120 Throttle Position (TP) Sensor Out Of Range (Low)
P1121 Throttle Position (TP) Sensor Inconsistent With MAF Sensor
P1124 Throttle Position (TP) Sensor Out Of Self-Test Range
P1125 Throttle Position (TP) Sensor Circuit Intermittent
P1127 Exhaust Not Warm Enough, Downstream Heated Oxygen Sensors (HO₂S) Not Tested
P1128 Upstream Heated Oxygen Sensors (HO₂S) Swapped From Bank To Bank
P1129 Downstream Heated Oxygen Sensors (HO₂S) Swapped From Bank To Bank
P1130 Lack Of Upstream Heated Oxygen Sensor (HO₂S 11) Switch, Adaptive Fuel At Limit (Bank #1)
P1131 Lack Of Upstream Heated Oxygen Sensor (HO₂S 11) Switch, Sensor Indicates Lean (Bank #1)
P1132 Lack Of Upstream Heated Oxygen Sensor (HO₂S 11) Switch, Sensor Indicates Rich (Bank#1)
P1137 Lack Of Downstream Heated Oxygen Sensor (HO₂S 12) Switch, Sensor Indicates Lean (Bank#1)
P1138 Lack Of Downstream Heated Oxygen Sensor (HO₂S 12) Switch, Sensor Indicates Rich (Bank#1)
P1150 Lack Of Upstream Heated Oxygen Sensor (HO₂S 21) Switch, Adaptive Fuel At Limit (Bank #2)
P1151 Lack Of Upstream Heated Oxygen Sensor (HO₂S 21) Switch, Sensor Indicates Lean (Bank#2)
P1152 Lack Of Upstream Heated Oxygen Sensor (HO₂S 21) Switch, Sensor Indicates Rich (Bank #2)
P1157 Lack Of Downstream Heated Oxygen Sensor (HO₂S 22) Switch, Sensor Indicates Lean (Bank #2)
P1158 Lack Of Downstream Heated Oxygen Sensor (HO₂S 22) Switch, Sensor Indicates Rich (Bank#2)
P1169 (HO₂S 12) Signal Remained Unchanged For More Than 20 Seconds After Closed Loop
P1170 (HO₂S 11) Signal Remained Unchanged For More Than 20 Seconds After Closed Loop