

GENERAL INFORMATION AND MAINTENANCE 1-47

MANUFACTURER RECOMMENDED SEVERE MAINTENANCE INTERVALS VEHICLE MAINTENANCE INTERVAL

Component	Type of Service	Miles (x1000)	3	6	9	12	15	18	21	24	27	30	33	36	39	42	45	48	51	54	57	60	
		km (x1000)	5	10	15	20	25	30	35	40	45	50	55	60	65	70	75	80	85	90	95	100	
Engine oil and filter	Replace	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
Tires	Rotate		✓		✓		✓		✓		✓		✓		✓		✓		✓		✓		✓
Air cleaner	Replace											✓											✓
Spark plugs ①	Replace																						✓
Drive belt	Inspect																						✓
Cooling system	Inspect					✓						✓					✓						✓
Coolant	Replace																	✓					✓
PCV valve	Replace																						✓
Automatic transmission fluid & filter	Replace								✓							✓							
Exhaust heat shields	Inspect											✓											✓
Brake linings and drums	Inspect				✓			✓			✓			✓			✓			✓			✓
Brake pads and rotors	Inspect				✓			✓			✓			✓			✓			✓			✓
Fuel filter	Replace					✓						✓											
Lubricate suspension	Inspect					✓						✓					✓						✓
Brake line hoses and connections	Inspect					✓						✓					✓						✓
Front suspension	Inspect					✓						✓					✓						✓
Bolts and nuts on chassis body	Inspect					✓						✓					✓						✓
Steering linkage operation	Inspect					✓						✓					✓						✓

Perform maintenance at the same intervals for mileage beyond that on this chart

Follow the severe service interval schedule if the vehicle is driven in the following conditions:

- towing a trailer or using a car-top carrier
- operating in severe dust conditions
- extensive idling such as a police car, taxi, or delivery service
- short trips of less than 10 miles when outside temperatures remain below 0°F (-18°C)

① Except on the 4.6L engines. Replace every 100,000 miles on the 4.6L engines.