

**BASIC FUEL SYSTEM**

**DIAGNOSIS 5-2**

**FUEL LINES AND FITTINGS 5-2**

- HAIRPIN CLIP FITTING 5-2
  - REMOVAL & INSTALLATION 5-2
- DUCKBILL CLIP FITTING 5-2
  - REMOVAL & INSTALLATION 5-2
- SPRING LOCK COUPLING 5-2
  - REMOVAL & INSTALLATION 5-2

**GASOLINE FUEL INJECTION SYSTEM 5-4**

- GENERAL INFORMATION 5-4
  - FUEL SYSTEM SERVICE PRECAUTIONS 5-5
- RELIEVING FUEL SYSTEM PRESSURE 5-5
- FUEL PUMP 5-5
  - TESTING 5-5
  - REMOVAL & INSTALLATION 5-5
- THROTTLE BODY 5-5
  - REMOVAL & INSTALLATION 5-5
- FUEL RAIL AND FUEL INJECTOR(S) 5-7
  - REMOVAL & INSTALLATION 5-7
  - TESTING 5-9
- FUEL PRESSURE REGULATOR 5-10
  - REMOVAL & INSTALLATION 5-10
- PRESSURE RELIEF VALVE 5-11
  - REMOVAL & INSTALLATION 5-11
- FUEL TANK 5-11**
  - TANK ASSEMBLY 5-11
    - REMOVAL & INSTALLATION 5-11
  - ELECTRIC FUEL PUMP 5-11
    - REMOVAL & INSTALLATION 5-11

# 5

## FUEL SYSTEM

- BASIC FUEL SYSTEM DIAGNOSIS 5-2
- BASIC FUEL LINES AND FITTINGS 5-2
- GASOLINE FUEL INJECTION SYSTEM 5-4
- FUEL TANK 5-11