

5-12 FUEL SYSTEM

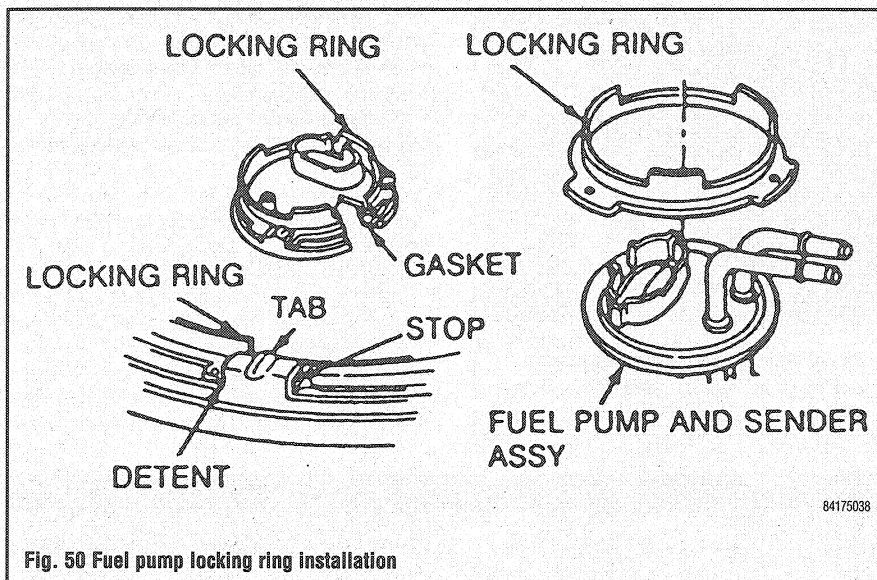


Fig. 50 Fuel pump locking ring installation

14. Rotate the locking ring clockwise until the ring is against the stops.
15. Install the fuel tank into the vehicle.
16. Lower the vehicle.
17. If equipped with air suspension, turn the air suspension switch to the **ON** position.
18. Add a minimum of 10 gallons of fuel to the tank and check for leaks.
19. Reconnect the negative battery cable.
20. Turn the ignition switch to the **RUN** position several times to pressurize the fuel system. Check for fuel leaks and correct as necessary.
21. Start the engine and check for leaks.
22. Road test the vehicle and check for proper operation.