

**UNDERSTANDING AND
TROUBLESHOOTING ELECTRICAL
SYSTEMS 6-2**

BASIC ELECTRICAL THEORY 6-2
HOW DOES ELECTRICITY WORK: THE
WATER ANALOGY 6-2
OHM'S LAW 6-2

ELECTRICAL COMPONENTS 6-2

POWER SOURCE 6-2
GROUND 6-3
PROTECTIVE DEVICES 6-3
SWITCHES & RELAYS 6-3
LOAD 6-3
WIRING & HARNESSSES 6-4
CONNECTORS 6-4
TEST EQUIPMENT 6-4
JUMPER WIRES 6-4
TEST LIGHTS 6-5
MULTIMETERS 6-5

**TROUBLESHOOTING ELECTRICAL
SYSTEMS 6-5**

TESTING 6-6
OPEN CIRCUITS 6-6
SHORT CIRCUITS 6-6
VOLTAGE 6-6
VOLTAGE DROP 6-6
RESISTANCE 6-6

WIRE AND CONNECTOR REPAIR 6-7

BATTERY CABLES 6-7

DISCONNECTING THE CABLES 6-7

**AIR BAG (SUPPLEMENTAL
RESTRAINT SYSTEM) 6-7**

GENERAL INFORMATION 6-7
SERVICE PRECAUTIONS 6-7
DISARMING THE SYSTEM 6-8
ARMING THE SYSTEM 6-9

**HEATING AND AIR
CONDITIONING 6-9**

BLOWER MOTOR 6-9
REMOVAL & INSTALLATION 6-9
HEATER CORE 6-11
REMOVAL & INSTALLATION 6-11

AIR CONDITIONING COMPONENTS 6-15
REMOVAL & INSTALLATION 6-15

CRUISE CONTROL 6-15

ENTERTAINMENT SYSTEMS 6-16

RADIO RECEIVER/AMPLIFIER/TAPE
PLAYER/CD PLAYER 6-16
REMOVAL & INSTALLATION 6-16

SPEAKERS 6-17
REMOVAL & INSTALLATION 6-17

**WINDSHIELD WIPERS AND
WASHERS 6-19**

WINDSHIELD WIPER BLADE AND
ARM 6-19
REMOVAL & INSTALLATION 6-19
WINDSHIELD WIPER MOTOR 6-20
REMOVAL & INSTALLATION 6-20

**INSTRUMENTS AND
SWITCHES 6-21**

INSTRUMENT CLUSTER 6-21
REMOVAL & INSTALLATION 6-21
GAUGES 6-23
REMOVAL & INSTALLATION 6-23

LIGHTING 6-23

HEADLIGHTS 6-23
REMOVAL & INSTALLATION 6-23
AIMING THE HEADLIGHTS 6-24
SIGNAL AND MARKER LIGHTS 6-25
REMOVAL & INSTALLATION 6-25

CIRCUIT PROTECTION 6-29

FUSES 6-29
REPLACEMENT 6-29
FUSIBLE LINKS 6-29
REPLACEMENT 6-30

CIRCUIT BREAKERS 6-31

FLASHERS 6-31

WIRING DIAGRAMS 6-41

TROUBLESHOOTING CHARTS

CRUISE CONTROL
TROUBLESHOOTING 6-15

6

CHASSIS ELECTRICAL

UNDERSTANDING AND
TROUBLESHOOTING ELECTRICAL
SYSTEMS 6-2
BATTERY CABLES 6-7
AIR BAG (SUPPLEMENTAL
RESTRAINT SYSTEM) 6-7
HEATING AND AIR CONDITIONING 6-9
CRUISE CONTROL 6-15
ENTERTAINMENT SYSTEMS 6-16
WINDSHIELD WIPERS AND
WASHERS 6-19
INSTRUMENTS AND SWITCHES 6-21
LIGHTING 6-23
WIRING DIAGRAMS 6-41