



6-22 CHASSIS ELECTRICAL

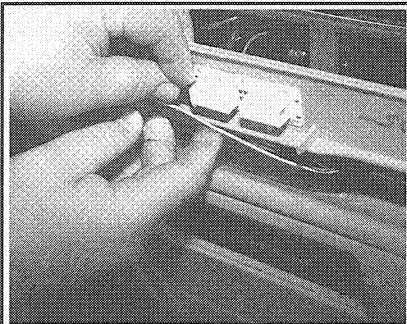


93140P03

Fig. 43 Unplug the sockets from the housings

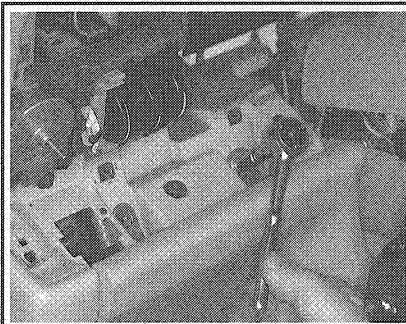

93146P09

Fig. 44 Unbolt the lower dash panel (knee brace) . . .

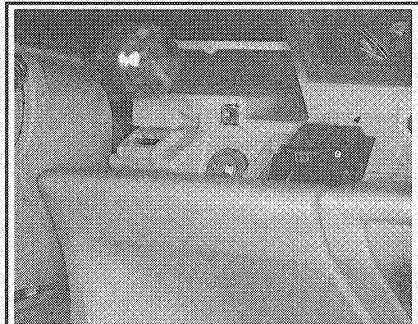


93146P07

Fig. 45 . . . on the left and right side of the steering column . . .




93146P06

Fig. 46 . . . and at the bottom of the panel . . .

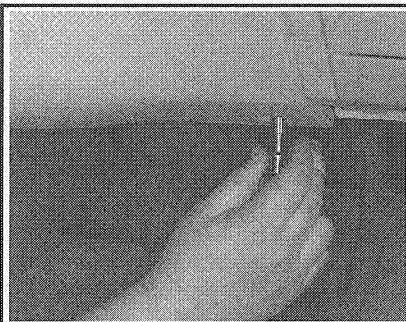


93146P20

Fig. 47 . . . on both sides of the column

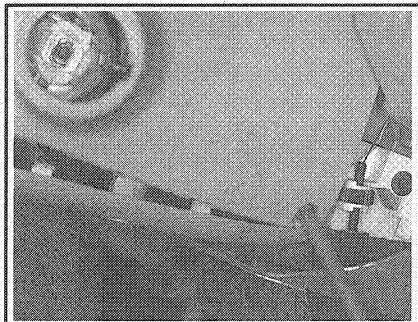


93146P05

Fig. 48 Remove the steering column shroud retaining screws and remove the shrouds

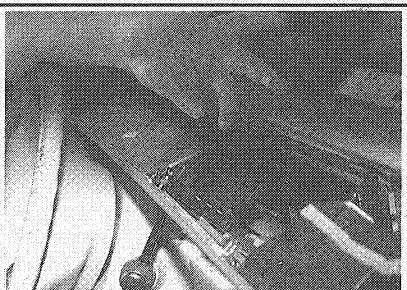


93140P59

Fig. 49 Remove the trim screws from the dash trim, unsnap the top and flip it down and away from the instrument cluster. Slide it out from behind the steering wheel

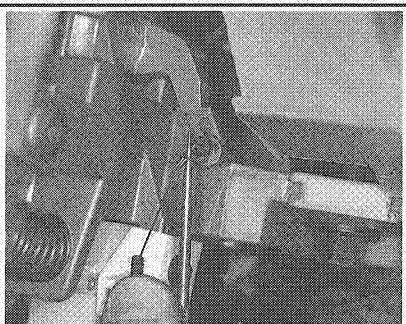


93146P22

Fig. 50 With the lower panel removed, you can disengage the PRNDL cable . . .

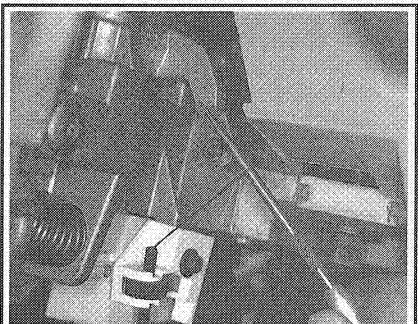

93146P21

Fig. 51 . . . using a seal pick or another thin tool, pick the cable off the stud

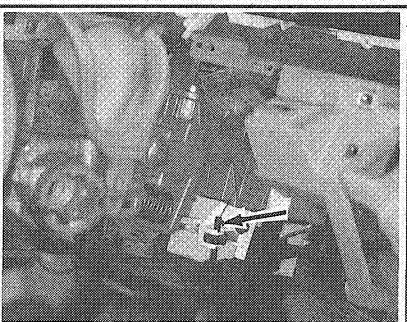


93146P23

Fig. 52 With the cable removed, the adjuster is now easy to access



93146P24

Fig. 53 Remove the mounting screw, and release the adjuster from the column stand. Let it hang. Do not turn the adjusting star, and you won't have to adjust it when it is installed

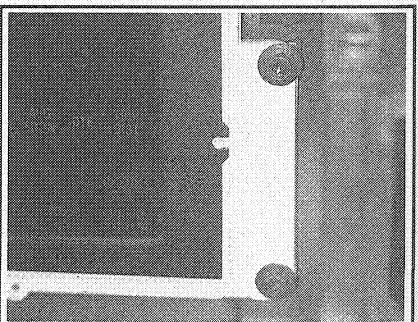

93146P12

Fig. 54 Remove these two screws on the right side of the cluster . . .