

6-26 CHASSIS ELECTRICAL

too is faulty or there is a problem in the bulb circuit or switch. Correct if necessary.

6. If applicable, install the socket and bulb assembly into the rear of the lens housing; otherwise, install the lens over the bulb.

High-mount Brake Light and Side Marker Light

◆ See Figures 70 thru 75

1. Disengage the bulb and socket assembly from the lens housing.

2. Gently grasp the light bulb and pull it straight out of the socket.

To install:

3. Before installing the light bulb into the socket, ensure that all electrical contact surfaces are free of corrosion or dirt.

4. Line up the base of the light bulb with the socket, then insert the light bulb into the socket until it is fully seated.

5. To ensure that the replacement bulb functions properly, activate the applicable switch to illuminate the bulb which was just replaced. If the

replacement light bulb does not illuminate, either it too is faulty or there is a problem in the bulb circuit or switch. Correct as necessary.

6. Install the socket and bulb assembly into the lens housing.

Rear Turn Signal, Brake and Parking Lights

◆ See Figures 76 and 77

1. Open the trunk and remove the luggage compartment trim.

2. Remove the eight nuts retaining the reflector to lower back of luggage compartment

3. Remove the rear panel reflector assembly from the vehicle.

To install:

4. Installation is the reversal of the removal procedure.

Dome Light

◆ See Figures 78, 79, 80, 81 and 82

1. Using a small prytool, carefully remove the cover lens from the lamp assembly.

2. Remove the bulb from its retaining clip contacts. If the bulb has tapered ends, gently depress the spring clip/metal contact and disengage the light bulb, then pull it free of the two metal contacts.

To install:

3. Before installing the light bulb into the metal contacts, ensure that all electrical conducting surfaces are free of corrosion or dirt.

4. Position the bulb between the two metal contacts. If the contacts have small holes, be sure that the tapered ends of the bulb are situated in them.

5. To ensure that the replacement bulb functions properly, activate the applicable switch to illuminate the bulb which was just replaced. If the replacement light bulb does not illuminate, either it is faulty or there is a problem in the bulb circuit or switch. Correct as necessary.

6. Install the cover lens until its retaining tabs are properly engaged.

License Plate Lights

TOWN CAR

1. Remove the two screws retaining the lamp assembly to the rear bumper/ bumper cover.

2. Pull the lamp assembly from the bumper/bumper cover.

3. Grasp and twist the socket 1/4 turn counterclockwise and remove the socket from the lamp housing.


CONTINENTAL AND MARK

◆ See Figures 83 and 84

1. Remove the socket from the lamp. Remove the old bulb.


To install:

2. Install the new bulb into the socket. Install the socket into the lamp.

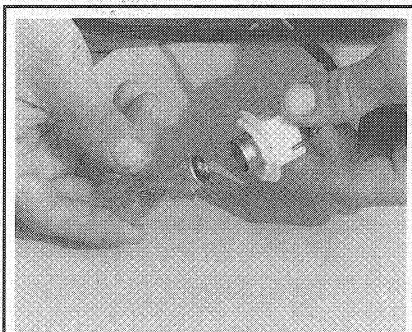


TCCA6P13

Fig. 69 Depress and twist this type of bulb counterclockwise, then pull the bulb straight from its socket

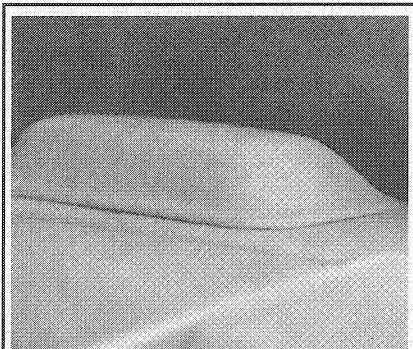


93146P65

Fig. 70 This is the finish panel that covers the high-mount brake light assembly. It is a removable housing

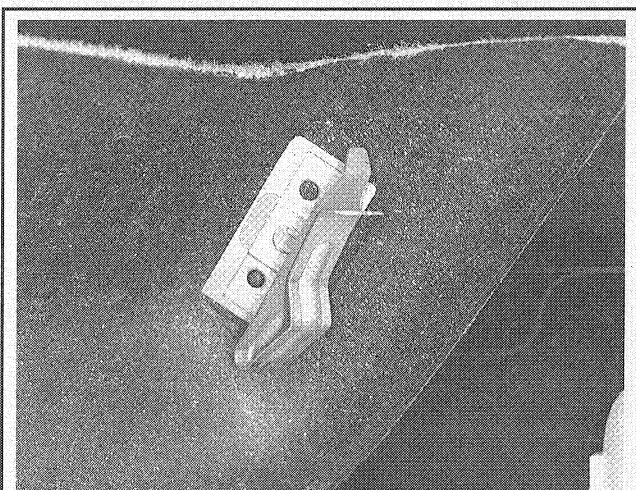

93146P64

Fig. 71 This panel slides off. Other panels may be held in place by a couple of retaining screws. There are two retaining clips that slide onto the ears of the housing and hold it in place

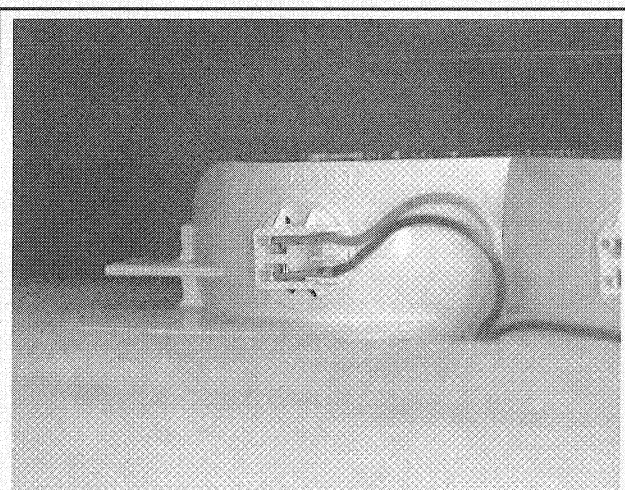

93146P61

Fig. 72 Once the panel is removed, the rear of the sockets are visible in the housing