



93146P62

Fig. 73 Give the sockets a quarter twist . .

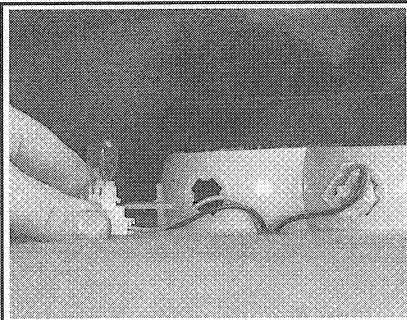

93146P63

Fig. 74 . . . to extract them from the housing. The bulbs pull straight out

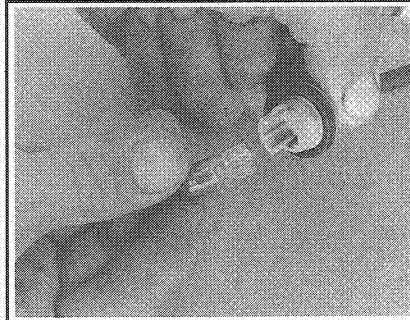


TCC6P14

Fig. 75 Simply pull this side marker light bulb straight from its socket




93146P43

Fig. 76 Pull the trunk trim away from the lamp housing assembly

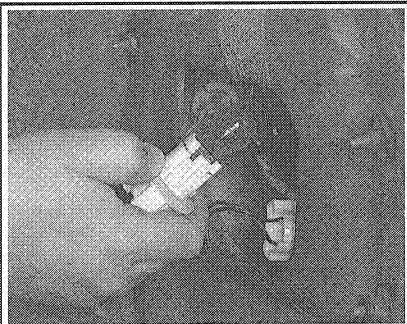


93146P44

Fig. 77 Twist the socket assembly and remove it from the housing

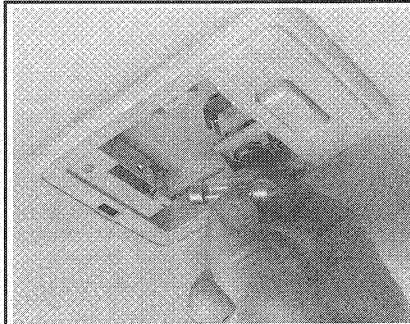


TCC6P15

Fig. 78 Disengage the spring clip that retains one tapered end of this dome light bulb, then withdraw the bulb

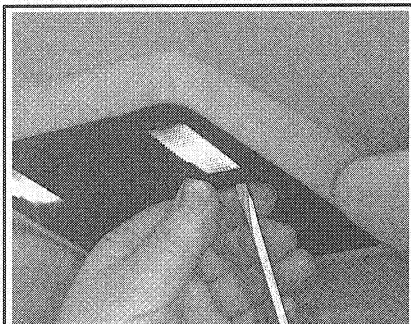


93146P90

Fig. 79 Use a small pry tool to "pop" out the lens assembly

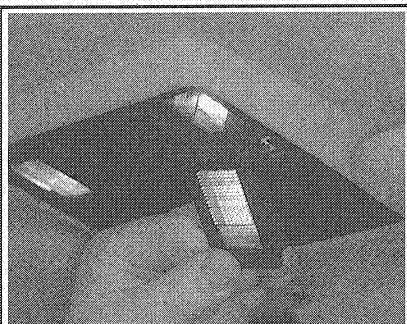


93146P81

Fig. 80 The lens assembly comes free from the housing and reveals the dome light bulb

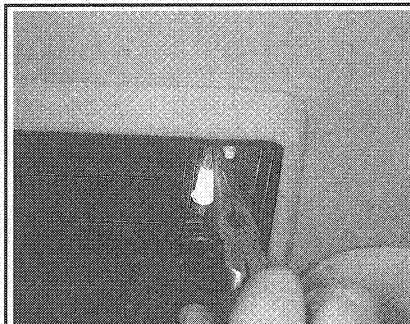


93146P82

Fig. 81 The dome light sits in its own special socket and housing. Easier to remove if you use a long nose pliers

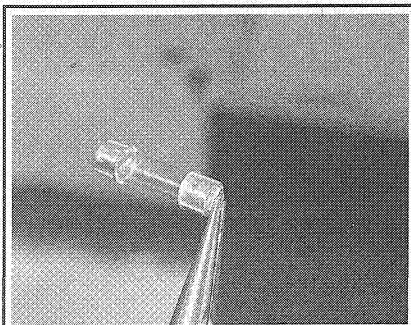


93146P83

Fig. 82 Be careful in handling the bulb, they get very hot very quickly!

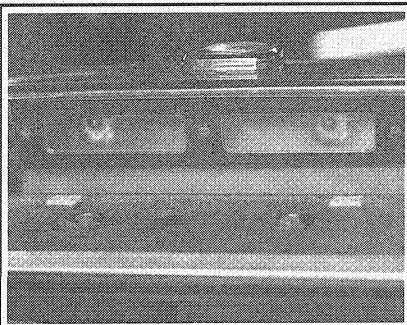

93146P45

Fig. 83 This is the location of the license plate lamps

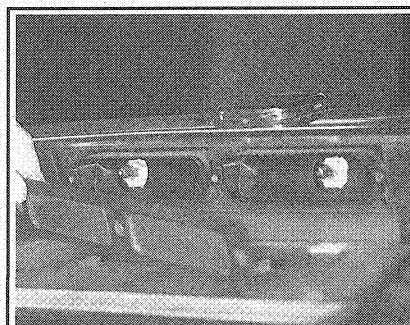

93146P46

Fig. 84 Remove the three screws to gain access to the bulbs. The bulbs pull straight out