

# 6-32 CHASSIS ELECTRICAL

Fuse Position	Amps	Circuits Protected
1	15	Memory Seats, Clock, Radio, Instrument Panel, Heated Windshield, Air Suspension, Antenna Module, Daytime Running Lamps
2	8.25 c.b.	Wiper/Washer, Windshield Wiper Module
3	—	Not Used
4	10	Instrument Panel, Air Suspension, Heated Windshield, Warning Chime, Air Bag
5	10	Power Mirrors
8	10	Radio, Warning Chime, Dome/Reading/Map Lamps, Window Regulator Safety Relay, Antenna Module, Clock
7	5	Illumination Lamps
8	15	Neutral Safety Switch, Keyless Entry, Daytime Running Lamps, ATC Mode Switch, Day/Nite Sensor, Electronic Day/Night Mirror
9	30	ATC Blower Motor
10	30	Cigar Lighters
11	20	Exterior Lamps, Delay Exit Relay, Anti-theft, Keyless Entry
12	20 c.b.	Trunk Lid Release Switch
13	15	Ignition Coil, TFI Ignition Module
14	—	Not Used
15	5	Rear Window Defroster, Trailer Adapter, Anti-theft
16	20	Stop/Hazard Lamps, HEGO Sensors, Multi-function Switch
17	10	Courtesy Lamps, Automatic Temperature Control Blower Switch, Power Door Locks, Instrument Panel, Power Mirrors, Keyless Entry
18	5	Anti-lock Brakes

93146G09

The interior fuse box locations—1988-1990 Town Car

Fuse Position	Amps	Circuits Protected
1	15	Stop/Hazard Lamps
2	6 c.b.	Windshield Wiper/Washer and Governor, Washer Fluid Level Warning
3	—	Not Used
4	15	Exterior Lamps, Headlamps, Load on Fuses 13 and 15, Autolamps
5	15	Turn Signals, Backup Lamps, Keyless Entry, Rear Window Defrost, Daytime Running Lamp, Air Bags
6	15	Electronic Compass, Lamp Out Warning, Reading Lamps, Anti-theft, Warning Chime, Trunk Lid Release, Outside Temp. Display, Automatic Temperature Control
7	10	Heated Mirrors
8	15	Courtesy Lamps, Radio, Reading Lamps, Instrument Panel Illumination Dimming Control, Warning Indicators, Keyless Entry, Power Mirrors, Power Antenna
9	30	Blower Motor, Automatic Temperature Control
10	15	Air Bags
11	15	Radio, Power Antenna, Mobile Telephone
12	20 c.b.	Cigar Lighters, Horn
13	5	Instrument Illumination
14	20 c.b.	Power Windows, Moonroof
15	10	Exterior Lamps
16	4	Trip Meter, Digital Instrument Cluster
17	4	Trip Meter Module, Instrument Cluster
18	10	Roof Console, Autolamp Sensor, Warning Chime, Low Oil Level Relay, Analog Instrument Cluster, Warning Indicators, Electronic Day/Night Mirror, Outside Temperature/Compass Module

93146G28

The interior fuse box locations—1991-92 Mark VII

FUSE POSITION	AMPS	CIRCUITS PROTECTED
1	15	Memory Seats, Clock Memory, Radio Memory, Instrument Cluster, Warning Indicators (Door Aler, Anti-theft), Air Suspension, Heated Windshield, Air Suspension, Power Antenna, Daytime Running Lamps
2	8.25 c.b.	Interval Wiper/Washer System
3	—	Not Used
4	10	Instrument Cluster, Air Suspension, Heated Windshield, Warning Chime, Air Bag, EVG Steering
5	10	Heated Mirrors
6	10	Radio, Warning Chime, Dome/Reading/Map Lamps, Power Antenna, Clock, Speed Control, Power Windows
7	5	Instrument Panel Illumination Lamps
8	15	Backup/Neutral Safety Switch, Keyless Entry, Daytime Running Lamps, ATC Module, Electronic Day/Night Mirror, Autolamps
9	30	Blower Motor
10	30	Cigar Lighters
11	20	Exterior Lamps, Courtesy Lamps, Anti-theft, Autolamps
12	20 c.b.	Trunk Lid Release
13	15	Ignition Coils, EEC System
14	—	Not Used
15	15	Rear Window Defroster, Trailer Adapter, Anti-theft, Headlamp Flash-to-Pass, Turn Signals, A/C Compressor Clutch
16	15	HEGO Sensors
17	10	Courtesy Lamps, ATC Control Module, Power Door Locks, Instrument Panel, Power Mirrors, Keyless Entry
18	5	Anti-lock Brake System

93146G25

The interior fuse box locations—1991 Town Car

FUSIBLE LINKS

A AIR SUSPENSION MOTOR  
B SHOCK ADJUSTERS  
C ANTI-LOCK BRAKE CONTROL MODULE  
D ANTI-LOCK BRAKE MOTOR  
E REAR WINDOW DEFROST CONTROL  
F IGNITION COIL/T.F.I., DISTRIBUTOR  
G ELECTRONIC ENGINE CONTROL  
H FUSE PANEL  
I MAIN LIGHT SWITCH  
J FUSE PANEL  
K POWER LOCK WINDOW/SEAT CONTROLS  
L INTEGRATED CONTROL MODULE  
M/IGNITION SWITCH  
N LOOSEN BOLTS FOR SERVICE

CONTINENTAL

POWER DISTRIBUTION BOX MOUNTED IN THE ENGINE COMPARTMENT

High Current Fuse Value Amps	Color Code
30A Cartridge	Pink
40A Cartridge	Green
60A Cartridge	Yellow
30A Bolt-in	Pink
60A Bolt-in	Yellow
80A Bolt-in	Black

MAXI-FUSE CARTRIDGE TOP VIEW

GOOD BLOWN

93146G29

The engine compartment fuse box locations—1991-92 Mark VII

FUSE LINK CARTRIDGE	AMPS	CIRCUITS PROTECTED
A	50	Lamps
B	50	Anti-lock Brakes
C	50	Ignition Switch
D	40	Rear Window Defrost/Heated Mirrors
E	50	Ignition Switch
Y	40	Heated Windshield

FUSE	AMPS	CIRCUITS PROTECTED
F	30 c.b.	Power Windows/Moonroof
G	—	NOT USED
H	30 c.b.	Power Seats/Door Locks/Fuel Filler Door Release/Trunk Lid Pull-Down
J	10	Alternator
K	10	Air Bag Restraints
L	15	Horn
M	20	Turn/Stop/Hazard Lamps
N	20	Fuel Pump/Fuel Gauge Sender
P	25	Ignition Switch
R	25	Radio Amplifier
S	30	Anti-lock Brakes
T	30	Electronic Engine Control
U	30	Air Suspension
V	30	Trailer Tow Battery Charging
W	30	Trailer Tow Brakes
X	30	Trailer Tow Lamps

93146G24

The engine compartment fuse box locations—1991 Town Car

FUSE POSITION	AMPS	CIRCUITS PROTECTED
1	15	CD Changer, Clock Memory, Radio Memory, Instrument Cluster, Trunk Lid Pull-down, Cellular Telephone Connector, Heated Windshield, Air Suspension, Power Antenna, Daytime Running Lamps
2	8.25 c.b.	Interval Wiper/Washer System
3	—	Not Used
4	10	Instrument Cluster, Warning Lamps, Heated Windshield, Warning Chime, Air Bag, EVG Steering
5	10	Heated Mirrors
6	10	Radio, Warning Chime, Dome/Reading/Map Lamps, Power Antenna, Clock, Speed Control, Power Windows, Shift Lock
7	5	Instrument Panel Illumination Lamps
8	15	Manual Lever Position Sensor, Keyless Entry, Daytime Running Lamps, ATC Module, Electronic Day/Night Mirror, Autolamps, Air Suspension/EVG Steering, Anti-theft
9	30	Blower Motor
10	30	Cigar Lighters
11	20	Exterior Lamps, Courtesy Lamps, Anti-theft, Autolamps
12	15	Speed Control, Stop Lamps, Hazard Flashers, Warning Lamps
13	15	Ignition Coils, EEC System
14	—	Not Used
15	15	Rear Window Defroster, Trailer Adapter, Headlamp Flash-to-Pass, Turn Signals, A/C Compressor Clutch
16	15	HEGO Sensors
17	10	Courtesy Lamps, ATC Control Module, Power Door Locks, Warning Lamps, Power Mirrors, Keyless Entry, Memory Seats
18	5	Anti-lock Brake System

93146G26

The interior fuse box locations—1992 Town Car