

ENGINE COMPARTMENT FUSE BOX

FUSE LINK CARTRIDGE	AMPS	CIRCUITS PROTECTED
A	50	Lamps
B	40	Anti-lock Brakes
C	50	Ignition Switch
D	40	Rear Window Defrost/Heated Mirrors
E	40	Ignition Switch
Y	40	Heated Windshield

FUSE	AMPS	CIRCUITS PROTECTED
F	30 c.b.	Power Windows/Moonroof
G	-	NOT USED
H	30 c.b.	Power Seats/Door Locks/Fuel Filter Door Release/Trunk Lid Pull-down/ Trunk Lid Release Switch
J	10	Alternator
K	10	Air Bag Restraints
L	15	Horn
M	-	NOT USED
N	20	Fuel Pump
P	25	Ignition Switch
R	25	Radio Amplifier
S	30	Anti-lock Brakes
T	30	Electronic Engine Control
U	30	Air Suspension
V	30	Trailer Tow Battery Charging
W	30	Trailer Tow Brakes
X	30	Trailer Tow Lamps

AMPERE RATING HOUSING COLOR

AMPERE RATING	HOUSING COLOR
10	Red
15	Blue
20	Yellow
30	Green

MAXI-FUSE

AMPERE RATING	HOUSING COLOR
20	Light Blue
30	Pink
40	Green
50	Red
60	Yellow
80	Black
100	Dark Blue

93146G27

The engine compartment fuse box locations—1992 Town Car

FUSE	AMPS	CIRCUITS PROTECTED
1	30	Blower Motor Speed Controller
2	-	Not Used
3	30	Interval Wiper/Washer System
4	25	Park Lamp Relay, Main Light Switch
5	10	EATC Module, Shift Lock Actuator, Temperature Blend Actuator, Rear Window Defrost, Trunk Assist
6	15	Autism Switch-Pulse Width Dimming Module, Anti-Theft System, Keyless Entry System, Power Seats, Power Mirrors, Memory Mirror System
7	10	Start Interupt Relay, Power Antenna Switch, Left Memory Seat Module, Memory Mirror Module
8	20	Cigar Lighters
9	10	Electronic Day/Night Mirror, Shock Dampening Control, Transmission Control Switch, Day/Night Sensor/Amplifier
10	15	Multi-Function Switch, Air Bag System, Anti-Lock Brakes, Air Suspension, Manual Lever Position Switch, Daytime Running Lamps, Electronic Flasher, Back-up Lamps
11	10	Multi-Function Switch, Brake ON/OFF (BOC) Switch, Brake Pressure Switch, Hazard Flasher
12	20 c.b.	Power Seats, Shock Dampening Control Relays, Remote Keyless Entry, Fuel Filter Door and Trunk Lid Release Switches
13	10	Rear Window Defrost/Heated Mirrors
14	20 c.b.	Master Window Control Switch, Moonroof Control Switch, Right Front Window Switch, One Touch Window Down Module
15	10	Instrument Cluster, Warning Chime Module, IP Warning Indicator Display, Delayed Accessory Module
16	10	Radio, Power Antenna, Message Center, Air Bag System, EATC Module, IP Warning Indicator
17	10A	Power Antenna Switch, Warning Chime Module, Message Center, Anti-Theft Control Module, Mobile Telephone Transceiver Radio, Memory Seat Modules, Keyless Entry Module, Compass Module
18	10	Exterior Lamps, Warning Chime Module

93146G12

93146G12

The interior fuse box locations—1993-98 Mark VIII

FUSE POSITION	AMPS	CIRCUITS PROTECTED
1	15	CD Changer, Clock Memory, Radio Memory, Instrument Cluster, Trunk Lid Pull-down, Cellular Telephone Connector, Air Suspension, Power Antenna, Daytime Running Lamps
2	8.25 c.b.	Interval Wiper/Washer System
3	-	Not Used
4	10	Instrument Cluster, Warning Lamps, Warning Chime, Air Bag, EVO Steering
5	10	Heated Mirrors
6	10	Radio, Warning Chime, Dome/Reading/Map Lamps, Power Antenna, Clock, Power Windows, Shift Lock, Remote Keyless Entry, Anti-theft
7	5	Instrument Panel Illumination Lamps
8	15	Manual Lever Position Sensor, Remote Keyless Entry, Daytime Running Lamps, EATC Control Module, Electronic Day/Night Mirror, Autolamps, Air Suspension/EVO Steering, Anti-theft
9	30	Blower Motor
10	30	Cigar Lighters
11	20	Exterior Lamps, Courtesy Lamps, Anti-theft, Autolamps
12	15	Speed Control, Step Lamps, Hazard Flashers, Warning Lamps
13	15	Ignition Coils, EEC System
14	-	Not Used
15	15	Rear Window Defrost, Trailer Adapter, Headlamp Flash-to-Pass, Turn Signals, A/C Compressor Clutch
16	15	HO2S Sensors
17	10	Courtesy Lamps, EATC Control Module, Warning Lamps, Power Mirrors, Remote Keyless Entry, Memory Seats
18	5	Anti-lock Brake System

93146G10

93146G10

The interior fuse box locations—1993-94 Town Car

ENGINE COMPARTMENT FUSE BOX

MAXI-FUSE	AMPS	CIRCUITS PROTECTED
IGN. COIL	20	Fuel Pump Relay, Ignition Coils, Radio Noise Capacitors, Variable Control Relay Module (VCRM)
PR SND/CELL PH	20	Radio Amplifier, Cellular Phone
AIR COMP	50	Air Compressor Relay
F/PNL	40	See Fuses 6 and 11
IGN SW	40	Ignition, Delayed Accessory Module
F/PNL	50	See Fuses 4, 8, 16 and Circuit Breaker 12
COOL FAN	40	Variable Control Relay Module (VCRM)
REAR DEF	40	Rear Window Defrost Control
HEADLAMPS	40	Main Light Switch
ABS MOTOR	40	Anti-Lock Pump Motor Relay
IGN SW	50	Ignition Switch
ABS	30	Anti-Lock Brake Relay, Anti-Lock Brake Control Module
EEC/VCRM	20	High Speed Fuel Pump Relay, Variable Control Relay Module (VCRM), Powertrain Control Module (PCM)

FUSE	AMPS	CIRCUITS PROTECTED
SP CTRL/HEGO	10	Speed Control Amplifier, Heated Oxygen Sensors
SSM MDL	15	Air Suspension/EVO Steering Module
ALT	20	Integral Alternator Regulator
HORN/DRL	25	Horn Relay, Daytime Running Lamps (DRL) Resistor (if equipped)

93146G14

93146G14

The engine compartment fuse box locations—1993-98 Mark VIII

ENGINE COMPARTMENT FUSE BOX

FUSE LINK CARTRIDGE	AMPS	CIRCUITS PROTECTED
A	50	Lamps
B	40	Anti-lock Brakes
C	50	Ignition Switch
D	40	Rear Window Defrost/Heated Mirrors
E	40	Ignition Switch

FUSE	AMPS	CIRCUITS PROTECTED
F	30 c.b.	Power Windows/Moonroof
G	-	NOT USED
H	30 c.b.	Power Seats/Door Locks/Fuel Filter Door Release/Trunk Lid Pull-down/ Trunk Lid Release Switch
J	10	Alternator
K	10	Air Bag Restraints
L	15	Horn
N	20	Fuel Pump
M	15	Daytime Running Lamp
P	25	Ignition Switch
R	25	Radio Amplifier
S	30	Anti-lock Brakes
T	30	Powertrain Control Module (PCM)
U	30	Air Suspension
V	30	Trailer Tow Battery Charging
W	30	Trailer Tow Brakes
X	30	Trailer Tow Lamps

AMPERE RATING HOUSING COLOR

AMPERE RATING	HOUSING COLOR
10	Red
15	Blue
20	Yellow
30	Green

MAXI-FUSE

AMPERE RATING	HOUSING COLOR
20	Light Blue
30	Pink
40	Green
50	Red
60	Yellow
80	Black
100	Dark Blue

93146G11

The engine compartment fuse box locations—1993-94 Town Car

Fuse Position	Amperage	Circuits Protected
1	15	Stop/Hazard Lamps
2	8.25 c.b.	Interval Governor, Windshield Wiper Motor
4	15	Exterior Lamps, Main Light Switch, Automatic Headlamps, Lamp Out Warning, and load on Fuses 13 and 15, Instrument Panel Illumination, Keyless Entry
5	15	Turn Lamps, Backup Lamps, Keyless Entry, Variable Assist Power Steering Module, EATC, Manual Lever Position Sensor, Steering Rack Sensor, Air Suspension Electronic Control Module, Rear Window Defrost, Electronic/Rear View Mirror, DRL, Air Bag Diagnostic Module, Air Suspension, Shift Lock Actuator, Illuminated Entry Timer
6	15	LCD Dimming Relay, Moonroof, Anti-Theft Module, Reading Lamps, Main Light Switch, Compass, Warning Chime Module, Window Safety Relay, Trunk Lid Release Switch, Cellular Phone
7	10	Mirror Heater
8	15	Courtesy Lamp, Clock, Radio, Power Mirrors, Hood and Trunk Lamps, Memory Seats, Keyless Entry, Anti-Theft Control Module, C.D. Player, Power Antenna Module, Illumination Dimming Control, Glove Box Lamp, Dimming Module
9	30	Blower Motor
10	20	Horn, Fuel Filter Door, Cigar Lighters
11	15	Radio, Power Antenna, Premium Sound & JBL Amplifiers
12	15	Air Bag Module
13	5	Instrument Panel Dimming Rheostat, Overhead Console, Radio, CD Player, Electronic Automatic Temperature Control Module
14	15	Electronic Automatic Temperature Control (EATC)
15	10	License Lamp, Side Marker Lamps, Tail Lamps, Rear Side Marker Lamp
16	5	Instrument Cluster, Electronic Automatic Temperature Control (EATC)
17	20	Flash to Pass, Daytime Running Lamps, Auto Dimmer Relay, Trunk Lid Pull-down Motor
18	15	Instrument Cluster, Warning Chime Module, Light Sensor/Amplifier, Warning Lamp Module

93146G15

93146G15

The interior fuse box locations—1993-94 Continental