



FUSE	AMPS	CIRCUITS PROTECTED	FUSE	AMPS	CIRCUITS PROTECTED
1	10	Lighting Control Module; Anti-Theft Indicator Lamp; PWM Dimming Output Illumination Lamps for Microphone, RH and LH Door Ashtray; Ignition Key; Message Center Switches; Speed Control Switches; Cigar Lighter; Console and Ashtray; Navigation Display Module and Navigation Switches	19	10	Lighting Control Module (LCM); Left Headlamp, DRL
2	10	Front Control Unit, Mobile Telephone Transceiver, Clock	20	10	Multi-Function Switch; Flash to Pass; Cornering Lamps
3	10	Power Door Locks and Power Windows Switch, Conquest Lamps	21	10	ABS EVMC and Fill Connector, ABS Control Module
4	10	Radio Control Unit, Mobile Telephone Transceiver, Lighting Control Module, Electronic Day/Night Mirror, Compass Module, Clock	22	-	NOT USED
5	10	Front Control Unit, Visual Image Instrument Cluster, Air Bag Diagnostic Monitor, Traction Control Switch, Lighting Control Module (LCM), Light Sensor Amplifier	23	-	NOT USED
6	5	SCP Bus +	24	5	SCP Bus -
7	15	Lighting Control Module (LCM), LF Turn Lamps, Left Turn Indicator (VCI), Multi-Function Switch, LF and RF Side Marker Lamps, RF and LF Park Lamps, RH and LH Tail Lamps, RH Stop/Turn Lamps and Fuel Filter Release Switch, Trunk Lid Relay, Navigation Module	25	10	Lighting Control Module (LCM); Right Headlamp
8	30	Air Bag Diagnostic Monitor, EATC Module, Blower Motor Relay	26	10	Visual Image Instrument Cluster, EATC Module
9	10	Windshield Wiper Motor, Wiper Control Module	27	-	NOT USED
10	30	Ignition Coils; Radio Interference Capacitor; PCM Power Relay	28	10	Shift Lock Actuator; Vehicle Dynamic Module; Visual Image Instrument Cluster; Rear Window Defrost Control
11	5	SCP Bus +	29	10	Remote Chassis Unit, Navigation Module
12	5	SCP Bus -	30	10	Heated Mirrors
13	15	Lighting Control Module (LCM), RF Turn Lamps, Right Turn Indicator (VCI), Multi-Function Switch, RF Side Marker Lamps, RF and LF Park Lamps, RH and LH Tail Lamps, RH Stop/Turn Lamps and Fuel Filter Release Switch, Trunk Lid Relay, Navigation Module	31	15	Lighting Control Module (LCM); FCL; Navigation Display Module; Electronic Day/Night Mirror; RH and LH IP Courtesy Lamp; Door Courtesy Lamp; RH and LH Side Marker Lamps; LH Heating Stair; Air Bag Diagnostic Monitor; Trunk Lid Lamp; Glove Box Lamp;
14	15	Cigar Lighter	32	15	Speed Control DEAC Switch, Brake ON/OFF (BOO) Switch
15	15	Heated Seat Switch Assembly, Navigation Module, Navigation Display Module	33	-	NOT USED
16	30	Meatcoof Switch	34	15	EATC Module, Transmission Range Sensor, Speed Control Safety Amplifier Assembly, DRL Module, Intake Manifold Runner Control
17	-	NOT USED	35	20	Heated Seat Modules
18	5	SCP Bus -	36	-	NOT USED
			37	-	NOT USED
			38	10	Data Link Connector (DLC)
			39	10	Power Door Locks, Power Seats, Power Mirrors, Keyless Entry, Memory Seat/Mirror, LF Seat Module, LF Door Module
			40	10	Blend Door Actuator, Low Tire Pressure Sensor (LTPS)
			41	20	LF Door Module

93146334

The interior fuse box locations—1995-96 Continental

MEGA-FUSE	AMPS	CIRCUITS PROTECTED	MINI-FUSES	AMPS	CIRCUITS PROTECTED
-	175	Generator/Voltage Regulator	15	30A	Subwoofer Amplifier, Remote Chassis Unit, CD Changer
MAIN-FUSE	AMPS	CIRCUITS PROTECTED	16	30A	H Beam Relay, Daytime Running Lamps (DRL) Module
1	40	Blower Motor Relay	17	20A	Horn Relay
2	60	Constant Control Relay Module (CCRM), Engine Cooling Fans	18	10A	Air Bag Diagnostic Monitor
3	60	Compressor Relay	19	-	NOT USED
4	60	Anti-Lock Brake Control Module, ABS EVMC and Fill Connector	20	10A	Powertrain Control Module
5	60	IP Fuse Panel	21	10A	Generator/Voltage Regulator
6	60	IP Fuse Panel	22	-	NOT USED
7	30	Vehicle Dynamic Module	MAIN-FUSES	AMPS	CIRCUITS PROTECTED
8	40	Rear Window Defrost Control	23	RELAY	Headlamps
9	40	IP Fuse Panel, LF Door Module, LH Window Switch	24	20	Constant Control Relay Module, Fuel Pump
10	40	RR Window Switch, RF Window Switch	25	20	Electronic Air Management Relay, Electronic Management Control Switch
11	40	Ignition Switch	26	RELAY	Blower Motor
12	40	Ignition Switch	27	30	Powertrain Control Module (PCM), Power Distribution Box
13	30	IP Fuse Panel, LF Away Power Lumbar Switch, LF Seat Module, Heated Seat	28	-	NOT USED
14	30	RF Away Power Lumbar Switch, RF Seat Control Switch	29	RELAY	Horn
			30	RELAY	Powertrain Control Module (PCM)

93146335

The engine compartment fuse box locations—1995-96 Continental