


FUSE	Amps	Circuits Protected
1	10	Lighting Control Module (LCM)
2	30	EATC Blower Motor
3	10	Lighting Control Module (LCM)
4	7.5	Instrument Cluster
5	7.5	Lighting Control Module (LCM)
6	15	EATC Heated Seats
7	15	Lighting Control Module (LCM), Day/Night Sensor/Amplifier
8	10	Shift Lock, Speed Control, Air Suspension, Steering Wheel Retraction Sensor
9	20	Lighting Control Module (LCM), Multi-Function Switch
10	20	Brake Pedal Position (BPP) Switch, Brake Pressure Switch
11	10	Electronic Death Sensor
12	15	Instrument Cluster, Anti-Theft, Ignition Switch, Ignition Coils
13	10	Anti-Lock Brake Module, Traction Control Switch
14	7.5	Transmission Control Switch, Lighting Control Module
15	20	Multi-Function Switch
16	7.5	Wiper Control Module (PCM), Wash/Wiper Motor
17	10	Digital Transmission Range (DTR) Sensor
18	10	Transmission Control Unit, Cellular Telephone Transceiver, Electronic Day/Night Mirror, Compass Module
19	10	EATC, Clock, Instrument Cluster, PCM
20	7.5	Lighting Control Module, ABS, Shift Lock
21	20	Multi-Function Switch
22	20	Multi-Function Switch, High Mount Stop Lamps
23	20	Data Link Connector, IP Cogar Lighter
24	5	Front Radio Control Unit
25	15	Lighting Control Module (LCM)
26	5	Digital Transmission Range (DTR) Sensor
27	20	Fuel Filler Door Release Switch
28	10	Heated Mirrors
29	20	L.F. Door Module
30	7.5	L.F. Seat Module, Trunk Lid Release Switch, Door Lock Switches, L.F. Seat Control Switch, L.F. Door Module, Power Mirror Switch
31	7.5	Main Light Switch, Lighting Control Module (LCM)
33	15	Front Radio Control Unit, Digital Compact Disc Changer, Cellular Telephone Transceiver
RELAY POSITION		RELAY
1		ACCY Delay Relay (Signature/Center), Power Window Relay (Executive)

8314632

The interior fuse box locations—1998 Town Car

MAXI FUSE	Amps	Circuits Protected
1	50	Ignition Switch
2	40	Ignition Switch
3	50	Cooling Fan (Hi-Speed)
4	30	PCM Power Relay
5	40	IP Fuse Panel, Fuses 10, 19, 21, 23, 25, 27
6	30	Starting System
7	50	IP Fuse Panel, Fuses 1, 3, 5, 7, 9, 31
8	30	Driver's Power Seat, IP Fuse Panel, Fuse 30
9	50	Anti-Lock Brakes
10	40	Rear Defrost
11	40	ACCY Delay Relay (LT/Signature/Center), Power Window Relay (Executive), IP Fuse Panel, Fuse 29
12	30	Air Suspension
25	30	Power Lumbar, Passenger Power Seat
26	30 c.b.	Cooling Fan (Lo-Speed)
27	—	NOT USED
MINI FUSE		Circuits Protected
13	15	Charging System
14	20	Fuel Pump
15	10	Air Bags
16	30	Heated Seats
17	10	Air Suspension
18	15	Horn
19	30	Subwoofer, IP Fuse Panel, Fuse 23
20	15	Fuel Injectors, PCM
21	15	Heated Oxygen Sensor, Trans Solenoids
22	—	NOT USED
23	20	Auxiliary Power Outlet
RELAY POSITION		RELAY
1		Fuel Pump Relay
2		AC Clutch Relay
3		PCM Power Relay
4		Air Suspension Relay
5		Rear Defrost Relay

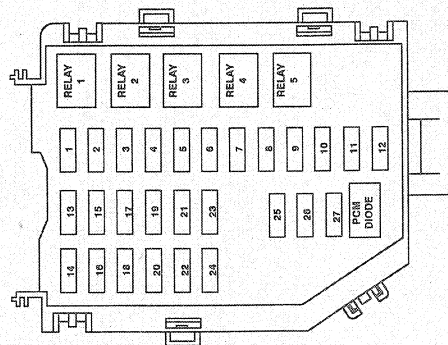

POWER DISTRIBUTION BOX

8314633

The engine compartment fuse box locations—1998 Town Car