


FUSE	AMPS	CIRCUITS PROTECTED	FUSE	AMPS	CIRCUITS PROTECTED
1	10	Lighting Control Module (LCM); Right Turn Lamp; Power Windows; Rear Defrost Control Switch; EATC Control Panel; Message Center; Airflow; Speed Control Switches; Cigar Lighter; Console and Auxiliary	20	15	Multi-Function Switch; Flash to Park; and Hazard Warning Input
2	10	Data Link Connector (DLC); Powertrain Control Module (PCM)	21	—	NOT USED
3	15	Multi-Function Switch; Convenience Lamps; High Beam and Turn Signal	22	—	NOT USED
4	10	Power Door Locks and Power Windows Switch; Backlight; Front and Rear Defrost Control Unit; Mobile Telephone Transceiver; Lighting Control Module (LCM); (RUVACC Sensor); RESCU; Electronic Day/Night Mirror (RUNSTART Sensor); Light Sensor/Amplifier	23	10	Digital Transmission Range (DTR) Sensor
5	10	Virtual Image Instrument Cluster; Lighting Control Module (LCM)	24	10	Virtual Image Instrument Cluster (VIC); LF Park/Turn Lamp
6	10	Virtual Image Instrument Cluster; RF Park/Turn Lamp	25	10	Lighting Control Module (LCM); Right Headlamp
7	20	Power Panel	26	10	Virtual Image Instrument Cluster (VIC); ETC Module
8	20	Fuel Filler Door Release Switch; Trunk Lid Relay	27	—	NOT USED
9	10	Air Bag Diagnostic Monitor; EATC Module; Blower Motor Relay	28	10	Shift Lock Actuator; Vehicle Dynamic Module; Virtual Image Instrument Cluster; Rear Window Defrost; Heated Seat Switch; Airflow; Air Intake Pressure Module; Speed Control Servo / Amplifier Assembly
10	30	Windshield Wiper Motor; Windshield Wiper Module	29	10	Front Control Unit (Rear)
11	10	Ignition Coils; Radio Interference Capacitor; PCM Power Relay; Passive Anti-Theft System (PATIS) Module	30	10	Heater Mirrors
12	10	Lighting Control Module (LCM)	31	15	Lighting Control Module (LCM); FCU; Electronic Day/Night Mirror; Map Lamps; RR and LR Reading Lamps; RH and LH Mirror; Storage Bin Lamp; Trunk Lid Lamp; Glove Box Lamp; Light Sensor Amplifier
13	15	Lighting Control Module (LCM); RF Turn Lamp; Right Turn Indicator (VIC); RR Side Mirror Lamps; Tail Lamps; License Lamps; LR Side Mirror Lamps; (RUC) Switch Restriction	32	15	Speed Control DEAC Switch; Brake Pedal Position (BPP) Switch
14	20	Cigar Lighter	33	—	NOT USED
15	10	ABS ECU and ET Connector	34	15	Console Shift Illumination; A/C Clutch Cycling Pressure Switch; A/C Clutch Relay; DTR Sensor; Intake Manifold Runner Control
16	30	Moonroof Switch	35	—	NOT USED
17	—	NOT USED	36	—	NOT USED
18	10	Lighting Control Module (LCM)	37	30	Subwoofer Amplifier; Front Control Unit (Radio)
19	10	Lighting Control Module (LCM); Left Headlamp; DRL	38	10	Digital Clock; CD Player; Mobile Telephone Transceiver; RESCU
			39	10	Power Door Locks; Power Seats; Power Mirrors; Keyless Entry; LF Seat Module; LF Door Module
			40	10	Multi-Function Switch; Convenience Lamps
			41	20	LF Door Module

80146539

The interior fuse box locations—1998 Continental

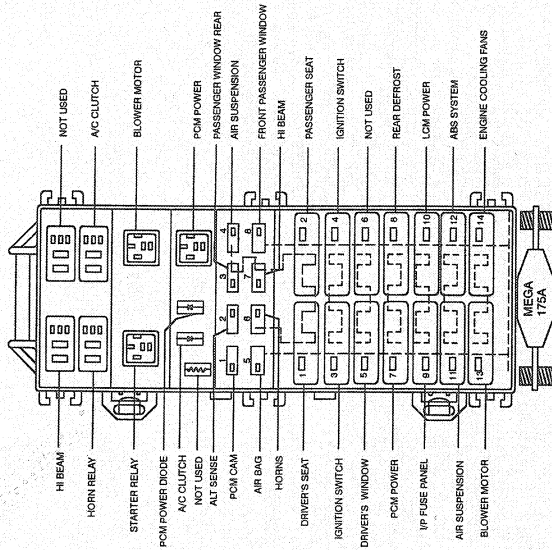

MEGA-FUSE	AMPS	CIRCUITS PROTECTED	MINI-FUSES	AMPS	CIRCUITS PROTECTED
—	175	Generator/Voltage Regulator	1	30	PCM Components; AXIN Transceiver; A/C Clutch Relay
MAIN-FUSE	AMPS	CIRCUITS PROTECTED	2	10	Generator/Voltage Regulator
1	30	Driver's Seat Module; LF Heated Seat Module; LF Power Lumbar	3	30	Rear Passenger Window
2	30	Passenger's Seat Module; RF Heated Seat Module; RF Power Lumbar	4	30	Air Suspension
3	40	Ignition Switch	5	10	Air Bag Diagnostic Monitor
4	40	Ignition Switch; Starter Relay	6	20	Horn Relay
5	40	Driver Window; LF Door Module	7	15	H Beam Relay
6	—	NOT USED	8	30	Front Passenger Window
7	30	PCM Power			
8	40	Rear Window Defrost Control			
9	60	IP Fuse Panel			
10	60	LCM Power; Power Point			
11	60	Compressor Relay			
12	60	Anti-Lock Brake Control Module; ABS E/MC and ET Connector			
13	40	Blower Motor Relay			
14	60	Dual Auxiliary Relay Box			

80146539

The engine compartment fuse box locations—1998 Continental