


FUSE	Amps	Circuits Protected
1	10	Lighting Control Module (LCM)
2	30	EATC Blower Motor
3	10	Lighting Control Module (LCM)
4	7.5	Instrument Cluster
5	7.5	Lighting Control Module (LCM)
6	15	EATC, Heated Seats
7	15	Lighting Control Module (LCM), Day/Night Sensor/Amplifier
8	10	Shift Lock, Speed Control, Air Suspension, Steering Wheel Rotation Sensor
9	20	Lighting Control Module (LCM), Multifunction Switch
10	20	Brake Pedal Position (BPP) Switch, Brake Pressure Switch
11	10	Restraint Control Module (RCM)
12	15	Instrument Cluster, Anti-Theft, Ignition Calls
13	10	Anti-Lock Brake Module, Traction Control Switch
14	7.5	Transmission Control Switch (TCS), Lighting Control Module (LCM)
15	20	Multifunction Switch
16	30	Wiper Control Module (WCM), Windshield Wiper Motor
17	10	Digital Transmission Range (DTR) Sensor
18	7.5	Lighting Control Module (LCM), Front Radio Control Unit, Cellular Telephone Transceiver, Electronic Day/Night Mirror, Compass Module
19	10	EATC, Clock, Instrument Cluster, PCM
20	7.5	Lighting Control Module (LCM), ABS, Shift Lock
21	20	Multifunction Switch
22	20	Multifunction Switch, High Mounted Stoplamps
23	20	Data Link Connector (DLC), IP, Cigar Lighter
24	5	Front Radio Control Unit
25	15	Lighting Control Module (LCM)
26	5	Digital Transmission Range (DTR) Sensor
27	20	Fuel Filler Door Release Switch
28	10	Heated Mirrors
29	20	L <sup>F</sup> Door Middle
30	7.5	L <sup>F</sup> Seat Module, Luggage Compartment Lid Release Switch, Door Lock Switches, L <sup>F</sup> Seat Control Switch, L <sup>F</sup> Door Module, Exterior Rear View Mirror Switch
31	7.5	Main Light Switch, Lighting Control Module (LCM)
33	15	Front Radio Control Unit, Digital Compact Disc (CD) Changer, Cellular Telephone Transceiver

93146617

The interior fuse box locations—1999-00 Town Car

MAXI FUSE	Amps	Circuits Protected
1	50	Ignition Switch
2	40	Ignition Switch
3	50	Cooling Fan (High Speed)
4	30	PCM Power Relay
5	40	Fuse Junction Panel, Fuses 10, 19, 21, 23, 25, 27
6	30	Starting System
7	50	Fuse Junction Panel, Fuses 1, 3, 5, 7, 9, 31
8	30	Driver Power Seat, Fuse Junction Panel, Fuse 30
9	50	Anti-Lock Brakes
10	40	Shift Detect
11	40	Accessory Power Relay (Stays/Run/Control), Power Window Accessory Power Relay (Access/Run), Fuse Junction Panel, Fuse 29
12	30	Air Suspension
13	30	Power Umbrella, Passenger Power Seat
14	30	NOT USED
15	30	NOT USED
16	30	NOT USED
17	10	Air Suspension
18	15	Hom
19	30	Subwoofer, Fuse Junction Panel, Fuse 33
20	15	Fuel Injectors, PCM
21	15	Heated Oxygen Sensor, Torq Solenoid, EVAP Canister Vent Solenoid Valve, EGR Vacuum Regulator, EVAP Canister Purge Solenoid
22	-	NOT USED
23	-	NOT USED
24	20	Auxiliary Power Outlet

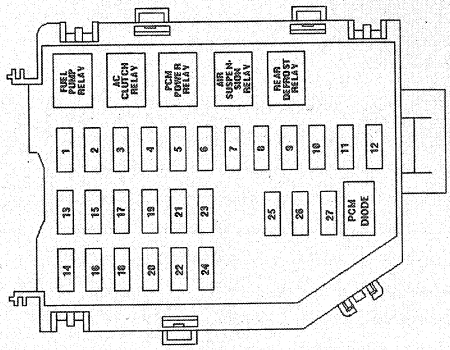

93146618

The engine compartment fuse box locations—1999-00 Town Car