

WHEELS 8-2

- WHEELS 8-2
 - REMOVAL & INSTALLATION 8-2
 - INSPECTION 8-2
- WHEEL LUG STUDS 8-2
 - REMOVAL & INSTALLATION 8-2

FRONT SUSPENSION 8-4

- COIL SPRINGS 8-4
 - REMOVAL & INSTALLATION 8-4
- SHOCK ABSORBERS 8-5
 - REMOVAL & INSTALLATION 8-5
 - TESTING 8-5
- MACPHERSON STRUTS 8-5
 - REMOVAL & INSTALLATION 8-5
- UPPER BALL JOINT 8-8
 - INSPECTION 8-8
 - REMOVAL & INSTALLATION 8-8
- LOWER BALL JOINT 8-9
 - INSPECTION 8-9
 - REMOVAL & INSTALLATION 8-9
- STABILIZER BAR 8-9
 - REMOVAL & INSTALLATION 8-9
- UPPER CONTROL ARM 8-9
 - REMOVAL & INSTALLATION 8-9
 - CONTROL ARM BUSHING REPLACEMENT 8-10
- LOWER CONTROL ARM 8-10
 - REMOVAL & INSTALLATION 8-10
 - CONTROL ARM BUSHING REPLACEMENT 8-11
- SPINDLE 8-11
 - REMOVAL & INSTALLATION 8-11
- FRONT WHEEL BEARINGS 8-11
 - REPLACEMENT 8-11
- WHEEL ALIGNMENT 8-12
 - CASTER 8-12
 - CAMBER 8-12
 - TOE 8-12

REAR SUSPENSION 8-12

- COIL SPRINGS 8-12
 - REMOVAL & INSTALLATION 8-12
- AIR SPRINGS 8-14
 - REMOVAL & INSTALLATION 8-14
- SHOCK ABSORBERS 8-17
 - REMOVAL & INSTALLATION 8-17
 - TESTING 8-18
- CONTROL ARMS 8-18
 - REMOVAL & INSTALLATION 8-18
- STABILIZER BAR 8-18
 - REMOVAL & INSTALLATION 8-18

STEERING 8-18

- STEERING WHEEL 8-18
 - REMOVAL & INSTALLATION 8-18
- MULTI-FUNCTION/COMBINATION SWITCH 8-19
 - REMOVAL & INSTALLATION 8-19
- WINDSHIELD WIPER SWITCH 8-20
 - REMOVAL & INSTALLATION 8-20

- IGNITION SWITCH 8-20
 - REMOVAL & INSTALLATION 8-20
- IGNITION LOCK CYLINDER 8-21
 - REMOVAL & INSTALLATION 8-21
- STEERING LINKAGE 8-22
 - REMOVAL & INSTALLATION 8-22
- POWER STEERING GEAR 8-24
 - REMOVAL & INSTALLATION 8-24
- POWER STEERING PUMP 8-25
 - REMOVAL & INSTALLATION 8-25
 - BLEEDING 8-25
- POWER RACK AND PINION STEERING GEAR 8-26
 - REMOVAL & INSTALLATION 8-26
- SPECIFICATIONS CHART**
 - TORQUE SPECIFICATIONS 8-28

8

SUSPENSION AND STEERING

WHEELS 8-2
FRONT SUSPENSION 8-4
REAR SUSPENSION 8-12
STEERING 8-18