

BRAKE OPERATING SYSTEM 9-2

BASIC OPERATING PRINCIPLES 9-2

DISC BRAKES 9-2

DRUM BRAKES 9-2

POWER BOOSTERS 9-3

BRAKE LIGHT SWITCH 9-3

REMOVAL & INSTALLATION 9-3

MASTER CYLINDER 9-3

REMOVAL & INSTALLATION 9-3

BRAKE PRESSURE CONTROL VALVE 9-4

REMOVAL & INSTALLATION 9-4

METERING VALVE 9-4

REMOVAL & INSTALLATION 9-4

BLEEDING THE BRAKE SYSTEM 9-4

DISC BRAKES 9-5

BRAKE PADS 9-5

REMOVAL & INSTALLATION 9-5

INSPECTION 9-7

BRAKE CALIPER 9-7

REMOVAL & INSTALLATION 9-7

BRAKE DISC (ROTOR) 9-8

REMOVAL & INSTALLATION 9-8

INSPECTION 9-9

DRUM BRAKES 9-10

BRAKE DRUMS 9-11

REMOVAL & INSTALLATION 9-11

INSPECTION 9-11

BRAKE SHOES 9-11

INSPECTION 9-11

REMOVAL & INSTALLATION 9-11

ADJUSTMENTS 9-14

WHEEL CYLINDERS 9-14

INSPECTION 9-14

REMOVAL & INSTALLATION 9-14

PARKING BRAKE 9-15

BRAKE SHOES (PARKING) 9-15

REMOVAL & INSTALLATION 9-15

ANTI-LOCK BRAKE SYSTEM 9-16

GENERAL INFORMATION 9-16

SYSTEM COMPONENTS 9-16

ABS MODULE 9-16

REMOVAL & INSTALLATION 9-16

HYDRAULIC CONTROL UNIT 9-17

REMOVAL & INSTALLATION 9-17

SPEED SENSORS 9-17

REMOVAL & INSTALLATION 9-17

BLEEDING THE ABS SYSTEM 9-19

COMPONENT LOCATIONS

REAR DRUM BRAKE

COMPONENTS 9-10

SPECIFICATIONS CHART

BRAKE SPECIFICATIONS 9-20

9

BRAKES

BRAKE OPERATING SYSTEM 9-2

DISC BRAKES 9-5

DRUM BRAKES 9-10

PARKING BRAKE 9-15

ANTI-LOCK BRAKE SYSTEM 9-16