

EXTERIOR 10-2

- DOORS 10-2
 - ADJUSTMENT 10-2
- HOOD 10-2
 - REMOVAL & INSTALLATION 10-2
- TRUNK LID 10-3
 - ALIGNMENT 10-3
- OUTSIDE MIRRORS 10-3
 - REMOVAL & INSTALLATION 10-3
- ANTENNA 10-4
 - REPLACEMENT 10-4

INTERIOR 10-6

- INSTRUMENT PANEL AND PAD 10-6
 - REMOVAL & INSTALLATION 10-6
 - CENTER CONSOLE 10-9
 - REMOVAL & INSTALLATION 10-9
 - OVERHEAD CONSOLE 10-10
 - REMOVAL & INSTALLATION 10-10
 - DOOR PANELS 10-10
 - REMOVAL & INSTALLATION 10-10
 - DOOR LOCKS 10-13
 - REMOVAL & INSTALLATION 10-13
 - DOOR GLASS AND REGULATOR 10-15
 - REMOVAL & INSTALLATION 10-15
 - DOOR WINDOW REGULATOR 10-17
 - REMOVAL & INSTALLATION 10-17
 - POWER WINDOW MOTOR 10-18
 - REMOVAL & INSTALLATION 10-18
 - INSIDE REAR VIEW MIRROR 10-18
 - REMOVAL & INSTALLATION 10-18
 - SEATS 10-19
 - REMOVAL & INSTALLATION 10-19
- SPECIFICATIONS CHART**
TORQUE SPECIFICATIONS 10-20

10

BODY AND TRIM

EXTERIOR 10-2
INTERIOR 10-6