

2. Remove the mirror by pushing the mirror upward and away from the mounting bracket.
3. Installation is the reverse of the removal procedure.

Seats

REMOVAL & INSTALLATION

Power Front Seat

1. Disconnect the negative battery cable.
2. Remove the access covers from the lower shields, if equipped, or insulators, if equipped, to expose the nuts and washers and/or bolts.
3. Remove the nuts and washers and/or bolts retaining the seat track to the floorpan.
4. Lift the seat up enough to disconnect the seat harness connector and disconnect the connector.
5. On certain models, remove the bolt(s) attaching the seat belts to the floor.
6. Remove the seat and track assembly from the vehicle.
7. Installation is the reverse of the removal procedure.

Rear Seat

▶ See Figures 70 and 71

1. Apply knee pressure to the lower front portion of the rear seat cushion. Push rearward to disengage the seat cushion from the retainer brackets.

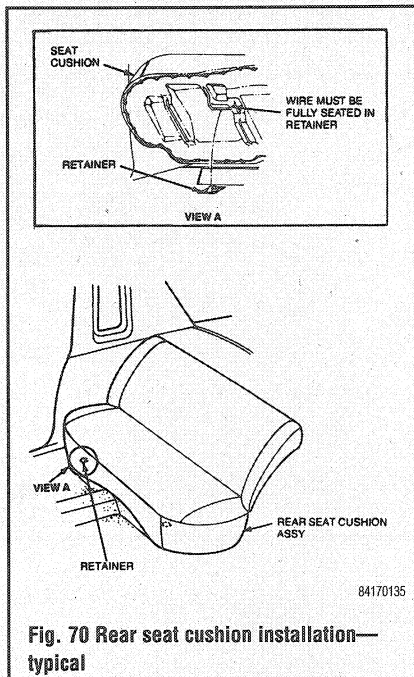


Fig. 70 Rear seat cushion installation—typical

2. Remove the outer seat belt and seat back lower retaining screws.
3. Grasp the seat back at the bottom and lift up to disengage the hanger wire from the retainer brackets.
4. Remove the seat back from the vehicle.

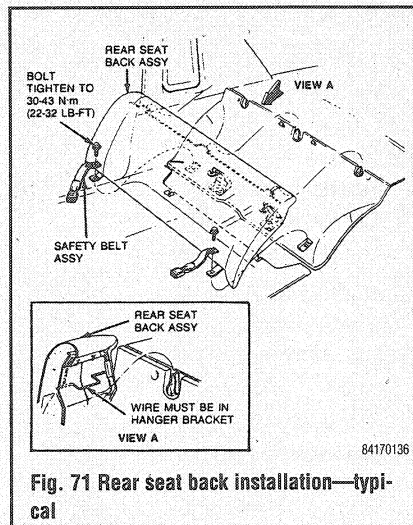


Fig. 71 Rear seat back installation—typical

To install:

5. Position the seat back into the vehicle so that the hanger wire is engaged with the retaining brackets.
6. Install the outer seat belt and seat back lower retainer screws. Tighten to 22–32 ft. lbs. (30–43 Nm).
7. Position the seat cushion into the vehicle. Apply knee pressure to the lower portion of the seat cushion, pushing rearward and down to lock the cushion into position.
8. Check the rear seat cushion to make sure it is secured into the floor retainer.