Condition

Section/Item Number

2

SECTION 4. WHEELS, TIRES, STEERING AND SUSPENSION (continued)

E. Driving Noises and Vibrations

A.	*	23	

HAIDO	
Vehicle makes a clicking noise when driven	4-E, 1
Vehicle makes a clunking or knocking noise over bumps	4-E, :
Vehicle makes a low pitched rumbling noise when driven	4-E, :
Vehicle makes a squeaking noise over bumps	4-E,

Vibrations

Vehicle vibrates when driven		

SECTION 5. ELECTRICAL ACCESSORIES

A Headlights

One headlight only works on high or low beam	5-A, 1
Headlight does not work on high or low beam	5-A, 2
Headlight(s) very dim	5-A, 3

B. Tail, Running and Side Marker Lights

Tail light, running light or side marker light inoperative 5-B	3, 1	
Tail light, running light or side marker light works intermittently 5-B.	3, 2	
Tail light, running light or side marker light very dim 5-B	3, 3	

C. Interior Lights

Interior light inoperative					5-C, 1
Interior light works intermitter	ntly				5-C, 2
Interior light very dim					5-C, 3

D. Brake Lights

				5-D. 1
One brake light inoperative				
				5-D. 2
Both brake lights inoperative				
One or both brake lights very of				5-D. 3

E. Warning Lights

Ignition, Battery and Alternator Warning Lights, Check Engine Light, Anti-Lock Braking System (ABS) Light, Brake Warning Light, Oil Pressure Warning Light, and Parking Brake Warning Light

C .	n recours reasoning Light, and reaking breaks reasoning Light		
	Warning light(s) remains on after the engine is started	5-E, 1	
	Warning light(s) flickers on and off when driving	5-E, 2	
	Warning light(s) inoperative with ignition on, and engine not started	5-E, 3	j

F. Turn Signal and 4-Way Hazard Lights

Turn signals or hazard lights come on, but do not flash	5-F, 1
Turn signals or hazard lights do not function on either side	5-F, 2
Turn signals or hazard lights only work on one side	5-F, 3
One signal light does not work	5-F, 4
Turn signals flash too slowly	5-F, 5
Turn signals flash too fast	5-F, 6
Four-way hazard flasher indicator light inoperative	5-F, 7
Turn signal indicator light(s) do not work in either direction	5-F, 8
One turn signal indicator light does not work	5-F, 9