

11-6 TROUBLESHOOTING

Condition	Section/Item Number
SECTION 5. ELECTRICAL ACCESSORIES (continued)	
G. Horn	
Horn does not operate	5-G, 1
Horn has an unusual tone	5-G, 2
H. Windshield Wipers	
Windshield wipers do not operate	5-H, 1
Windshield wiper motor makes a humming noise, gets hot or blows fuses	5-H, 2
Windshield wiper motor operates but one or both wipers fail to move	5-H, 3
Windshield wipers will not park	5-H, 4
SECTION 6. INSTRUMENTS AND GAUGES	
A. Speedometer (Cable Operated)	
Speedometer does not work	6-A, 1
Speedometer needle fluctuates when driving at steady speeds	6-A, 2
Speedometer works intermittently	6-A, 3
B. Speedometer (Electronically Operated)	
Speedometer does not work	6-B, 1
Speedometer works intermittently	6-B, 2
C. Fuel, Temperature and Oil Pressure Gauges	
Gauge does not register	6-C, 1
Gauge operates erratically	6-C, 2
Gauge operates fully pegged	6-C, 3
SECTION 7. CLIMATE CONTROL	
A. Air Conditioner	
No air coming from air conditioner vents	7-A, 1
Air conditioner blows warm air	7-A, 2
Water collects on the interior floor when the air conditioner is used	7-A, 3
Air conditioner has a moldy odor when used	7-A, 4
B. Heater	
Blower motor does not operate	7-B, 1
Heater blows cool air	7-B, 2
Heater steams the windshield when used	7-B, 3