

ABS MODULE 9-16
REMOVAL & INSTALLATION 9-16
ADJUSTMENTS (AUTOMATIC TRANSAXLE) 7-4
SHIFT LINKAGE 7-4
THROTTLE CABLE 7-4
THROTTLE VALVE CONTROL LINKAGE 7-4
ADJUSTMENTS (DISTRIBUTOR IGNITION) 2-3
ADJUSTMENTS (DISTRIBUTORLESS IGNITION SYSTEM) 2-6
AIR BAG (SUPPLEMENTAL RESTRAINT SYSTEM) 6-7
AIR CLEANER 1-16
REMOVAL & INSTALLATION 1-16
AIR CONDITIONING COMPONENTS 6-15
REMOVAL & INSTALLATION 6-15
AIR CONDITIONING SYSTEM 1-29
PREVENTIVE MAINTENANCE 1-30
SYSTEM INSPECTION 1-30
SYSTEM SERVICE & REPAIR 1-29
AIR SPRINGS 8-14
REMOVAL & INSTALLATION 8-14
ALTERNATOR 2-8
REMOVAL & INSTALLATION 2-9
TESTING 2-8
ALTERNATOR PRECAUTIONS 2-8
ANTENNA 10-4
REPLACEMENT 10-4
ANTI-LOCK BRAKE SYSTEM 9-16
AODE TORQUE SPECIFICATIONS 7-14
AUTOMATIC TRANSAXLE (DRIVE TRAIN) 7-4
AUTOMATIC TRANSAXLE (FLUIDS AND LUBRICANTS) 1-36
FLUID RECOMMENDATIONS 1-36
LEVEL CHECK 1-37
AUTOMATIC TRANSMISSION 7-2
AUTOMATIC TRANSMISSION ASSEMBLY 7-3
REMOVAL & INSTALLATION 7-3
AUTOMATIC TRANSMISSIONS 1-37
FLUID RECOMMENDATIONS 1-37
PAN & FILTER SERVICE 1-37
AVOIDING THE MOST COMMON MISTAKES 1-2
AVOIDING TROUBLE 1-2
AX4N TORQUE SPECIFICATIONS 7-14
AXLE HOUSING 7-12
REMOVAL & INSTALLATION 7-12
AXLE SHAFT, BEARING AND SEAL 7-10
REMOVAL & INSTALLATION 7-10
AXODE (AX4S) TORQUE SPECIFICATIONS 7-13
BALANCE SHAFT 3-40
REMOVAL & INSTALLATION 3-40
BASIC ELECTRICAL THEORY 6-2
HOW DOES ELECTRICITY WORK: THE WATER ANALOGY 6-2
OHM'S LAW 6-2
BASIC FUEL SYSTEM DIAGNOSIS 5-2
BASIC OPERATING PRINCIPLES 9-2
DISC BRAKES 9-2
DRUM BRAKES 9-2
POWER BOOSTERS 9-3
BATTERY 1-18
BATTERY FLUID 1-18
CABLES 1-19
CHARGING 1-20
GENERAL MAINTENANCE 1-18
PRECAUTIONS 1-18
REPLACEMENT 1-20
BATTERY CABLES 6-7
BELTS 1-20
ADJUSTING 1-20
INSPECTION 1-20
REMOVAL AND INSTALLATION 1-21
BLEEDING THE ABS SYSTEM 9-19
BLEEDING THE BRAKE SYSTEM 9-4
BLOWER MOTOR 6-9
REMOVAL & INSTALLATION 6-9

MASTER INDEX