

11-30 MASTER INDEX

- BOLTS, NUTS AND OTHER THREADED RETAINERS 1-7
- BRAKE CALIPER 9-7
 - REMOVAL & INSTALLATION 9-7
- BRAKE DISC (ROTOR) 9-8
 - INSPECTION 9-9
 - REMOVAL & INSTALLATION 9-8
- BRAKE DRUMS 9-11
 - INSPECTION 9-11
 - REMOVAL & INSTALLATION 9-11
- BRAKE LIGHT SWITCH 9-3
 - REMOVAL & INSTALLATION 9-3
- BRAKE OPERATING SYSTEM 9-2**
- BRAKE PADS 9-5
 - INSPECTION 9-7
 - REMOVAL & INSTALLATION 9-5
- BRAKE PRESSURE CONTROL VALVE 9-4
 - REMOVAL & INSTALLATION 9-4
- BRAKE SHOES 9-11
 - ADJUSTMENTS 9-14
 - INSPECTION 9-11
 - REMOVAL & INSTALLATION 9-11
- BRAKE SHOES (PARKING) 9-15
 - REMOVAL & INSTALLATION 9-15
- BRAKE SPECIFICATIONS 9-20
- BUY OR REBUILD? 3-44
- CAMSHAFT, BEARINGS AND LIFTERS 3-38
 - INSPECTION 3-39
 - REMOVAL & INSTALLATION 3-38
- CAMSHAFT POSITION SENSOR 4-12
 - REMOVAL & INSTALLATION 4-12
 - TESTING 4-12
- CAPACITIES 1-48
- CENTER CONSOLE 10-9
 - REMOVAL & INSTALLATION 10-9
- CHARGING SYSTEM 2-8**
- CHASSIS GREASING 1-43
- CIRCUIT BREAKERS 6-31
- CIRCUIT PROTECTION 6-29**
- CLEARING CODES (TROUBLE CODES—EEC-IV SYSTEM) 4-21
 - CONTINUOUS MEMORY CODES 4-21
 - KEEP ALIVE MEMORY 4-21
- CLEARING CODES (TROUBLE CODES—EEC-V SYSTEM (OBD-II)) 4-22
 - CONTINUOUS MEMORY CODES 4-22
 - KEEP ALIVE MEMORY 4-22
- COIL SPRINGS (FRONT SUSPENSION) 8-4
 - REMOVAL & INSTALLATION 8-4
- COIL SPRINGS (REAR SUSPENSION) 8-12
 - REMOVAL & INSTALLATION 8-12
- COMMON EMISSIONS AND ELECTRONIC ENGINE CONTROL COMPONENT LOCATIONS—3.8L ENGINE 4-14
- COMMON EMISSIONS AND ELECTRONIC ENGINE CONTROL COMPONENT LOCATIONS—4.6L ENGINE 4-15
- COMMON EMISSIONS AND ELECTRONIC ENGINE CONTROL COMPONENT LOCATIONS—5.0L ENGINE 4-16
- COMPONENT LOCATIONS**
- COMMON EMISSIONS AND ELECTRONIC ENGINE CONTROL COMPONENT LOCATIONS—3.8L ENGINE 4-14
- COMMON EMISSIONS AND ELECTRONIC ENGINE CONTROL COMPONENT LOCATIONS—4.6L ENGINE 4-15
- COMMON EMISSIONS AND ELECTRONIC ENGINE CONTROL COMPONENT LOCATIONS—5.0L ENGINE 4-16
- REAR DRUM BRAKE COMPONENTS 9-10
- UNDERHOOD COMPONENT LOCATIONS—3.8L ENGINE 1-13
- UNDERHOOD COMPONENT LOCATIONS—4.6L ENGINE 1-14
- UNDERHOOD COMPONENT LOCATIONS—5.0L ENGINE 1-15
- CONTROL ARMS 8-18
 - REMOVAL & INSTALLATION 8-18
- COOLANT TEMPERATURE SENSOR 2-10
 - REMOVAL & INSTALLATION 2-10
 - TESTING 2-10
- COOLING SYSTEM 1-40
 - DRAIN & REFILL 1-41
 - FLUID RECOMMENDATION 1-40
 - FLUSHING & CLEANING THE SYSTEM 1-42
 - LEVEL CHECK 1-40
 - TESTING FOR LEAKS 1-40
- CRANKSHAFT AND CAMSHAFT POSITION SENSORS 2-8
- CRANKSHAFT DAMPER 3-32
 - REMOVAL & INSTALLATION 3-32
- CRANKSHAFT POSITION SENSOR 4-13
 - OPERATION 4-13
 - REMOVAL & INSTALLATION 4-13
 - TESTING 4-13
- CRUISE CONTROL 6-15**
- CRUISE CONTROL TROUBLESHOOTING 6-15
- CV-BOOTS 1-22
 - INSPECTION 1-22
- CYLINDER HEAD (ENGINE MECHANICAL) 3-24
 - REMOVAL & INSTALLATION 3-24
- CYLINDER HEAD (ENGINE RECONDITIONING) 3-46
 - ASSEMBLY 3-50
 - DISASSEMBLY 3-46
 - INSPECTION 3-48
 - REFINISHING & REPAIRING 3-49
- DATA LINK CONNECTOR 4-22
 - ELECTRICAL TOOLS 4-22
- DETERMINING ENGINE CONDITION 3-43
 - COMPRESSION TEST 3-43
- DIAGNOSIS AND TESTING (DISTRIBUTOR IGNITION) 2-2
 - CYLINDER DROP TEST 2-3
 - SECONDARY SPARK TEST 2-2
- DIAGNOSIS AND TESTING (DISTRIBUTORLESS IGNITION SYSTEM) 2-6
- DIAGNOSTIC LINK CONNECTOR 4-17
 - ELECTRICAL TOOLS 4-17
 - HAND-HELD SCAN TOOLS 4-17
- DISC BRAKES 9-5**
- DISCONNECTING THE CABLES 6-7
- DISTRIBUTOR 2-5
 - REMOVAL & INSTALLATION 2-5
- DISTRIBUTOR CAP AND ROTOR 1-27
 - INSPECTION 1-27
 - REMOVAL AND INSTALLATION 1-27
- DISTRIBUTOR IGNITION 2-2**
- DISTRIBUTORLESS IGNITION SYSTEM 2-6**
- DO'S 1-6
- DO NOT'S 1-6
- DOOR GLASS AND REGULATOR 10-15
 - REMOVAL & INSTALLATION 10-15
- DOOR LOCKS 10-13
 - REMOVAL & INSTALLATION 10-13
- DOOR PANELS 10-10
 - REMOVAL & INSTALLATION 10-10
- DOOR WINDOW REGULATOR 10-17
 - REMOVAL & INSTALLATION 10-17
- DOORS 10-2
 - ADJUSTMENT 10-2
- DRIVE AXLE (FLUIDS AND LUBRICANTS) 1-38
 - DRAIN AND REFILL 1-39
 - FLUID RECOMMENDATIONS 1-38
 - LEVEL CHECK 1-39
- DRIVE AXLE (SERIAL NUMBER IDENTIFICATION) 1-11
- DRIVELINE 7-9**
- DRIVESHAFT AND U-JOINTS 7-9
 - REMOVAL & INSTALLATION 7-9
 - U-JOINT REPLACEMENT 7-10