

DRUM BRAKES 9-10

- DUCKBILL CLIP FITTING 5-2
 - REMOVAL & INSTALLATION 5-2
- EEC-V DIAGNOSTIC TROUBLE CODES (DTC'S) 4-22
- ELECTRIC FAN SWITCH 2-12
 - REMOVAL & INSTALLATION 2-12
 - TESTING 2-12
- ELECTRIC FUEL PUMP 5-11
 - REMOVAL & INSTALLATION 5-11
- ELECTRICAL COMPONENTS 6-2
 - CONNECTORS 6-4
 - GROUND 6-3
 - LOAD 6-3
 - POWER SOURCE 6-2
 - PROTECTIVE DEVICES 6-3
 - SWITCHES & RELAYS 6-3
 - WIRING & HARNESSSES 6-4

ELECTRONIC ENGINE CONTROLS 4-6

EMISSION CONTROLS 4-2

- ENGINE (ENGINE MECHANICAL) 3-4
 - REMOVAL & INSTALLATION 3-4
- ENGINE (FLUIDS AND LUBRICANTS) 1-33
 - CHANGING OIL & FILTER 1-34
 - OIL LEVEL CHECK 1-33
- ENGINE BLOCK 3-51
 - ASSEMBLY 3-53
 - DISASSEMBLY 3-51
 - GENERAL INFORMATION 3-51
 - INSPECTION 3-52
 - REFINISHING 3-53
- ENGINE COOLANT TEMPERATURE (ECT) SENSOR 4-8
 - OPERATION 4-8
 - REMOVAL & INSTALLATION 4-9
 - TESTING 4-8
- ENGINE FAN 3-20
 - REMOVAL & INSTALLATION 3-20
- ENGINE IDENTIFICATION AND SPECIFICATIONS 1-12
- ENGINE MECHANICAL 3-2**
- ENGINE MECHANICAL SPECIFICATIONS 3-2
- ENGINE NUMBER 1-11
- ENGINE OVERHAUL TIPS 3-44
 - CLEANING 3-44
 - OVERHAUL TIPS 3-44
 - REPAIRING DAMAGED THREADS 3-45
 - TOOLS 3-44
- ENGINE PREPARATION 3-46

ENGINE RECONDITIONING 3-43

- ENGINE START-UP AND BREAK-IN 3-56
 - BREAKING IT IN 3-56
 - KEEP IT MAINTAINED 3-56
 - STARTING THE ENGINE 3-56

ENTERTAINMENT SYSTEMS 6-16

- EVAPORATIVE CANISTER 1-18
 - SERVICING 1-18
- EVAPORATIVE EMISSION CONTROLS 4-2
 - OPERATION 4-2
 - REMOVAL & INSTALLATION 4-3
- EXHAUST GAS RECIRCULATION SYSTEM 4-3
 - COMPONENT TESTING 4-4
 - OPERATION 4-3
 - REMOVAL & INSTALLATION 4-4
- EXHAUST MANIFOLD 3-16
 - REMOVAL & INSTALLATION 3-16
- EXHAUST SYSTEM 3-42**
- EXTENSION HOUSING SEAL 7-3
 - REMOVAL & INSTALLATION 7-3

EXTERIOR 10-2

FASTENERS, MEASUREMENTS AND CONVERSIONS 1-7

FIRING ORDERS 2-8

- FLASHERS 6-31
- FLUID DISPOSAL 1-33
- FLUID PAN 7-4
 - REMOVAL & INSTALLATION 7-4
- FLUID PAN AND FILTER SERVICE 7-2
 - REMOVAL & INSTALLATION 7-2
- FLUIDS AND LUBRICANTS 1-33**
- FLYWHEEL/FLEXPLATE 3-41
 - REMOVAL & INSTALLATION 3-41
- FRONT SUSPENSION 8-4**
- FRONT WHEEL BEARINGS 8-11
 - REPLACEMENT 8-11
- FUEL AND ENGINE OIL RECOMMENDATIONS 1-33
 - FUEL 1-33
 - OIL 1-33
- FUEL FILTER 1-16
 - REMOVAL & INSTALLATION 1-16
- FUEL LINES AND FITTINGS 5-2**
- FUEL PRESSURE REGULATOR 5-10
 - REMOVAL & INSTALLATION 5-10
- FUEL PUMP 5-5
 - REMOVAL & INSTALLATION 5-5
 - TESTING 5-5
- FUEL RAIL AND FUEL INJECTOR(S) 5-7
 - REMOVAL & INSTALLATION 5-7
 - TESTING 5-9
- FUEL TANK 5-11**
- FUSES 6-29
 - REPLACEMENT 6-29
- FUSIBLE LINKS 6-29
 - REPLACEMENT 6-30
- GASOLINE ENGINE TUNE-UP SPECIFICATIONS 1-29
- GASOLINE FUEL INJECTION SYSTEM 5-4**
- GAUGES 6-23
 - REMOVAL & INSTALLATION 6-23
- GENERAL INFORMATION (AIR BAG) 6-7
 - ARMING THE SYSTEM 6-9
 - DISARMING THE SYSTEM 6-8
 - SERVICE PRECAUTIONS 6-7
- GENERAL INFORMATION (ANTI-LOCK BRAKE SYSTEM) 9-16
 - SYSTEM COMPONENTS 9-16
- GENERAL INFORMATION (DISTRIBUTOR IGNITION) 2-2
 - THICK FILM INTEGRATED (TFI-IV) IGNITION SYSTEM 2-2
- GENERAL INFORMATION (DISTRIBUTORLESS IGNITION SYSTEM) 2-6
 - ELECTRONIC DISTRIBUTORLESS IGNITION SYSTEM (EDIS) 2-6
 - OBD II—EEC V 2-6
- GENERAL INFORMATION (GASOLINE FUEL INJECTION SYSTEM) 5-4
 - FUEL SYSTEM SERVICE PRECAUTIONS 5-5
- GENERAL INFORMATION (TROUBLE CODES—EEC-IV SYSTEM) 4-17
 - FAILURE MODE EFFECTS MANAGEMENT (FMEM) 4-17
 - HARDWARE LIMITED OPERATION STRATEGY (HLOS) 4-17
- GENERAL INFORMATION (TROUBLE CODES—EEC-V SYSTEM) 4-21
- HAIRPIN CLIP FITTING 5-2
 - REMOVAL & INSTALLATION 5-2
- HALFSHAFTS 7-6
 - REMOVAL & INSTALLATION 7-7
- HEADLIGHTS 6-23
 - AIMING THE HEADLIGHTS 6-24
 - REMOVAL & INSTALLATION 6-23
- HEATER CORE 6-11
 - REMOVAL & INSTALLATION 6-11
- HEATING AND AIR CONDITIONING 6-9**