

# 11-32 MASTER INDEX

- HOOD 10-2
  - REMOVAL & INSTALLATION 10-2
- HOSES 1-21
  - INSPECTION 1-21
  - REMOVAL & INSTALLATION 1-22
- HOW TO USE THIS BOOK 1-2**
- HYDRAULIC CONTROL UNIT 9-17
  - REMOVAL & INSTALLATION 9-17
- IDLE AIR CONTROL VALVE 4-8
  - OPERATION 4-8
  - REMOVAL & INSTALLATION 4-8
  - TESTING 4-8
- IDLE SPEED AND MIXTURE ADJUSTMENTS 1-28
  - ADJUSTMENT 1-28
- IGNITION COIL 2-3
  - REMOVAL & INSTALLATION 2-4
  - TESTING 2-3
- IGNITION COIL PACK 2-6
  - REMOVAL & INSTALLATION 2-6
  - TESTING 2-6
- IGNITION LOCK CYLINDER 8-21
  - REMOVAL & INSTALLATION 8-21
- IGNITION MODULE (DISTRIBUTOR IGNITION) 2-4
  - REMOVAL & INSTALLATION 2-4
- IGNITION MODULE (DISTRIBUTORLESS IGNITION SYSTEM) 2-7
  - REMOVAL & INSTALLATION 2-7
- IGNITION SWITCH 8-20
  - REMOVAL & INSTALLATION 8-20
- IGNITION TIMING 1-27
  - INSPECTION & ADJUSTMENT 1-28
- INSIDE REAR VIEW MIRROR 10-18
  - REMOVAL & INSTALLATION 10-18
- INSPECTION 3-42
  - REPLACEMENT 3-42
- INSTRUMENT CLUSTER 6-21
  - REMOVAL & INSTALLATION 6-21
- INSTRUMENT PANEL AND PAD 10-6
  - REMOVAL & INSTALLATION 10-6
- INSTRUMENTS AND SWITCHES 6-21**
- INTAKE AIR TEMPERATURE SENSOR 4-10
  - OPERATION 4-10
  - REMOVAL & INSTALLATION 4-10
  - TESTING 4-10
- INTAKE MANIFOLD 3-11
  - REMOVAL & INSTALLATION 3-11
- INTERIOR 10-6**
- JACKING 1-46**
- JACKING PRECAUTIONS 1-46
- JUMP STARTING A DEAD BATTERY 1-45**
- JUMP STARTING PRECAUTIONS 1-45
- JUMP STARTING PROCEDURE 1-45
- LIGHTING 6-23**
- LINCOLN VEHICLE IDENTIFICATION CHART 1-11
- LOW OIL LEVEL SENSOR 2-11
  - REMOVAL & INSTALLATION 2-11
  - TESTING 2-11
- LOWER BALL JOINT 8-9
  - INSPECTION 8-9
  - REMOVAL & INSTALLATION 8-9
- LOWER CONTROL ARM 8-10
  - CONTROL ARM BUSHING REPLACEMENT 8-11
  - REMOVAL & INSTALLATION 8-10
- MACPHERSON STRUTS 8-5
  - REMOVAL & INSTALLATION 8-5
- MAINTENANCE OR REPAIR? 1-2
- MALFUNCTION INDICATOR LAMP 4-22
- MANIFOLD AIR PRESSURE (MAP) SENSOR 4-11
  - OPERATION 4-11
- REMOVAL & INSTALLATION 4-12
- TESTING 4-11
- MANUAL LEVER POSITION (MLP) SENSOR/TRANSMISSION RANGE (TR) SENSOR 7-2
  - ADJUSTMENT 7-2
  - REMOVAL & INSTALLATION 7-2
- MANUFACTURER RECOMMENDED NORMAL MAINTENANCE INTERVALS 1-46
- MANUFACTURER RECOMMENDED SEVERE MAINTENANCE INTERVALS 1-47
- MASS AIRFLOW SENSOR 4-10
  - OPERATION 4-10
  - REMOVAL & INSTALLATION 4-11
  - TESTING 4-11
- MASTER CYLINDER (BRAKE OPERATING SYSTEM) 9-3
  - REMOVAL & INSTALLATION 9-3
- MASTER CYLINDER (FLUIDS AND LUBRICANTS) 1-42
  - FLUID LEVEL 1-42
  - FLUID RECOMMENDATION 1-42
- METERING VALVE 9-4
  - REMOVAL & INSTALLATION 9-4
- MULTI-FUNCTION/COMBINATION SWITCH 8-19
  - REMOVAL & INSTALLATION 8-19
- NEUTRAL SAFETY SWITCH (AUTOMATIC TRANSAXLE) 7-4
  - REMOVAL & INSTALLATION 7-4
- NEUTRAL SAFETY SWITCH (AUTOMATIC TRANSMISSION) 7-2
  - ADJUSTMENT 7-2
  - REMOVAL & INSTALLATION 7-2
- OIL PAN 3-29
  - REMOVAL & INSTALLATION 3-29
- OIL PRESSURE SENDER/SWITCH 2-11
  - REMOVAL & INSTALLATION 2-11
  - TESTING 2-11
- OIL PUMP 3-31
  - REMOVAL & INSTALLATION 3-31
- OUTSIDE MIRRORS 10-3
  - REMOVAL & INSTALLATION 10-3
- OVERHEAD CONSOLE 10-10
  - REMOVAL & INSTALLATION 10-10
- OXYGEN SENSOR 4-6
  - OPERATION 4-6
  - REMOVAL & INSTALLATION 4-7
  - TESTING 4-7
- PARKING BRAKE 9-15**
- PCV VALVE 1-18
  - REMOVAL & INSTALLATION 1-18
- PINION SEAL 7-12
  - REMOVAL & INSTALLATION 7-12
- POSITIVE CRANKCASE VENTILATION SYSTEM 4-2
  - OPERATION 4-2
  - REMOVAL & INSTALLATION 4-2
  - TESTING 4-2
- POWER RACK AND PINION STEERING GEAR 8-26
  - REMOVAL & INSTALLATION 8-26
- POWER STEERING GEAR 8-24
  - REMOVAL & INSTALLATION 8-24
- POWER STEERING PUMP (FLUIDS AND LUBRICANTS) 1-43
  - FLUID RECOMMENDATION 1-43
  - LEVEL CHECK 1-43
- POWER STEERING PUMP (STEERING) 8-25
  - BLEEDING 8-25
  - REMOVAL & INSTALLATION 8-25
- POWER WINDOW MOTOR 10-18
  - REMOVAL & INSTALLATION 10-18
- POWERTRAIN CONTROL MODULE (PCM) 4-6
  - OPERATION 4-6
- PRESSURE RELIEF VALVE 5-11
  - REMOVAL & INSTALLATION 5-11