

- RADIATOR 3-18
 - REMOVAL & INSTALLATION 3-18
- RADIO RECEIVER/AMPLIFIER/TAPE PLAYER/CD PLAYER 6-16
 - REMOVAL & INSTALLATION 6-16
- READING CODES (TROUBLE CODES—EEC-IV SYSTEM) 4-18
 - ELECTRONIC TESTING 4-18
 - VISUAL INSPECTION 4-18
- READING CODES (TROUBLE CODES—EEC-V SYSTEM) 4-22
- REAR DRUM BRAKE COMPONENTS 9-10
- REAR MAIN SEAL 3-40
 - REMOVAL & INSTALLATION 3-40
- REAR SUSPENSION 8-12**
- REGULATOR 2-9
 - REMOVAL & INSTALLATION 2-9
- RELIEVING FUEL SYSTEM PRESSURE 5-5
- ROCKER ARM (VALVE) COVER 3-8
 - REMOVAL & INSTALLATION 3-8
- ROCKER ARMS/ROLLER FOLLOWERS 3-10
 - REMOVAL & INSTALLATION 3-10
- ROUTINE MAINTENANCE 1-13**
- SEATS 10-19
 - REMOVAL & INSTALLATION 10-19
- SENDING UNITS AND SENSORS 2-10
- SENDING UNITS AND SENSORS 2-10**
- SERIAL NUMBER IDENTIFICATION 1-11**
- SERVICING YOUR VEHICLE SAFELY 1-6**
- SHOCK ABSORBERS (FRONT SUSPENSION) 8-5
 - REMOVAL & INSTALLATION 8-5
 - TESTING 8-5
- SHOCK ABSORBERS (REAR SUSPENSION) 8-17
 - REMOVAL & INSTALLATION 8-17
 - TESTING 8-18
- SIGNAL AND MARKER LIGHTS 6-25
 - REMOVAL & INSTALLATION 6-25
- SPARK PLUG WIRES 1-26
 - REMOVAL & INSTALLATION 1-26
 - TESTING 1-26
- SPARK PLUGS 1-22
 - INSPECTION & GAPPING 1-24
 - REMOVAL & INSTALLATION 1-23
 - SPARK PLUG HEAT RANGE 1-23
- SPEAKERS 6-17
 - REMOVAL & INSTALLATION 6-17
- SPECIAL TOOLS 1-4
- SPECIFICATION CHARTS**
- BRAKE SPECIFICATIONS 9-20
- CAPACITIES 1-48
- ENGINE IDENTIFICATION AND SPECIFICATIONS 1-12
- ENGINE MECHANICAL SPECIFICATIONS 3-2
- GASOLINE ENGINE TUNE-UP SPECIFICATIONS 1-29
- LINCOLN VEHICLE IDENTIFICATION CHART 1-11
- MANUFACTURER RECOMMENDED NORMAL MAINTENANCE INTERVALS 1-46
- MANUFACTURER RECOMMENDED SEVERE MAINTENANCE INTERVALS 1-47
- TORQUE SPECIFICATIONS (BODY AND TRIM) 10-20
- TORQUE SPECIFICATIONS (DRIVE TRAIN) 7-13
- TORQUE SPECIFICATIONS (ENGINE AND ENGINE OVERHAUL) 3-57
- TORQUE SPECIFICATIONS (SUSPENSION AND STEERING) 8-28
- SPEED SENSORS 9-17
 - REMOVAL & INSTALLATION 9-17
- SPINDLE 8-11
 - REMOVAL & INSTALLATION 8-11
- SPRING LOCK COUPLING 5-2
 - REMOVAL & INSTALLATION 5-2
- STABILIZER BAR (FRONT SUSPENSION) 8-9
 - REMOVAL & INSTALLATION 8-9
- STABILIZER BAR (REAR SUSPENSION) 8-18
 - REMOVAL & INSTALLATION 8-18
- STANDARD AND METRIC MEASUREMENTS 1-10
- STARTER 2-10
 - REMOVAL & INSTALLATION 2-10
 - SOLENOID/RELAY REPLACEMENT 2-10
 - TESTING 2-10
- STARTING SYSTEM 2-10**
- STEERING 8-18**
- STEERING LINKAGE 8-22
 - REMOVAL & INSTALLATION 8-22
- STEERING WHEEL 8-18
 - REMOVAL & INSTALLATION 8-18
- TANK ASSEMBLY 5-11
 - REMOVAL & INSTALLATION 5-11
- TEST EQUIPMENT 6-4
 - JUMPER WIRES 6-4
 - MULTIMETERS 6-5
 - TEST LIGHTS 6-5
 - TESTING 6-6
 - OPEN CIRCUITS 6-6
 - RESISTANCE 6-6
 - SHORT CIRCUITS 6-6
 - VOLTAGE 6-6
 - VOLTAGE DROP 6-6
- THERMOSTAT 3-10
 - REMOVAL & INSTALLATION 3-10
- THROTTLE BODY 5-5
 - REMOVAL & INSTALLATION 5-5
- THROTTLE POSITION SENSOR 4-12
 - OPERATION 4-12
 - REMOVAL & INSTALLATION 4-12
 - TESTING 4-12
- TIMING CHAIN AND GEARS 3-35
 - REMOVAL & INSTALLATION 3-35
- TIMING CHAIN COVER 3-34
 - REMOVAL & INSTALLATION 3-34
 - REMOVAL & INSTALLATION 3-35
- TIRES AND WHEELS 1-30
 - INFLATION & INSPECTION 1-31
 - TIRE DESIGN 1-31
 - TIRE ROTATION 1-31
 - TIRE STORAGE 1-31
- TOOLS AND EQUIPMENT 1-3**
- TORQUE 1-7
 - TORQUE ANGLE METERS 1-10
 - TORQUE WRENCHES 1-8
- TORQUE SPECIFICATIONS (BODY AND TRIM) 10-20
- TORQUE SPECIFICATIONS (DRIVE TRAIN) 7-13
- TORQUE SPECIFICATIONS (ENGINE AND ENGINE OVERHAUL) 3-57
- TORQUE SPECIFICATIONS (SUSPENSION AND STEERING) 8-28
- TRANSAXLE 7-5
 - REMOVAL & INSTALLATION 7-5
- TRANSMISSION/TRANSAXLE NUMBER 1-11
- TROUBLE CODES—EEC-IV SYSTEM 4-17**
- TROUBLE CODES—EEC-V SYSTEM (OBD-II) 4-21**
- TROUBLESHOOTING CHART**
- CRUISE CONTROL TROUBLESHOOTING 6-15
- TROUBLESHOOTING ELECTRICAL SYSTEMS 6-5
- TRUNK LID 10-3
 - ALIGNMENT 10-3
- UNDERHOOD COMPONENT LOCATIONS—3.8L ENGINE 1-13
- UNDERHOOD COMPONENT LOCATIONS—4.6L ENGINE 1-14
- UNDERHOOD COMPONENT LOCATIONS—5.0L ENGINE 1-15
- UNDERSTANDING AND TROUBLESHOOTING ELECTRICAL SYSTEMS 6-2**
- UPPER BALL JOINT 8-8