


The eighteen Groups found in this manual are:

- 00 – General Service Information
- 01 – Body
- 02 – Frame and Mounting
- 03 – Engine
- 04 – Suspension
- 05 – Driveline
- 06 – Brake System
- 07 – Transmission (rear-wheel drive) or Transaxle (front-wheel drive)
- 08 – Clutch System
- 09 – Exhaust System
- 10 – Fuel System
- 11 – Steering System
- 12 – Climate Control System
- 13 – Instrumentation and Warning Systems
- 14 – Battery and Charging System
- 15 – Audio Systems
- 17 – Lighting
- 18 – Electrical Distribution

## Section

Each Section covers a component or system. The second set of numbers on each page indicate the Section.

If the vehicle has more than one type of component, such as two types of engines or power steering systems, alpha suffixes are used.

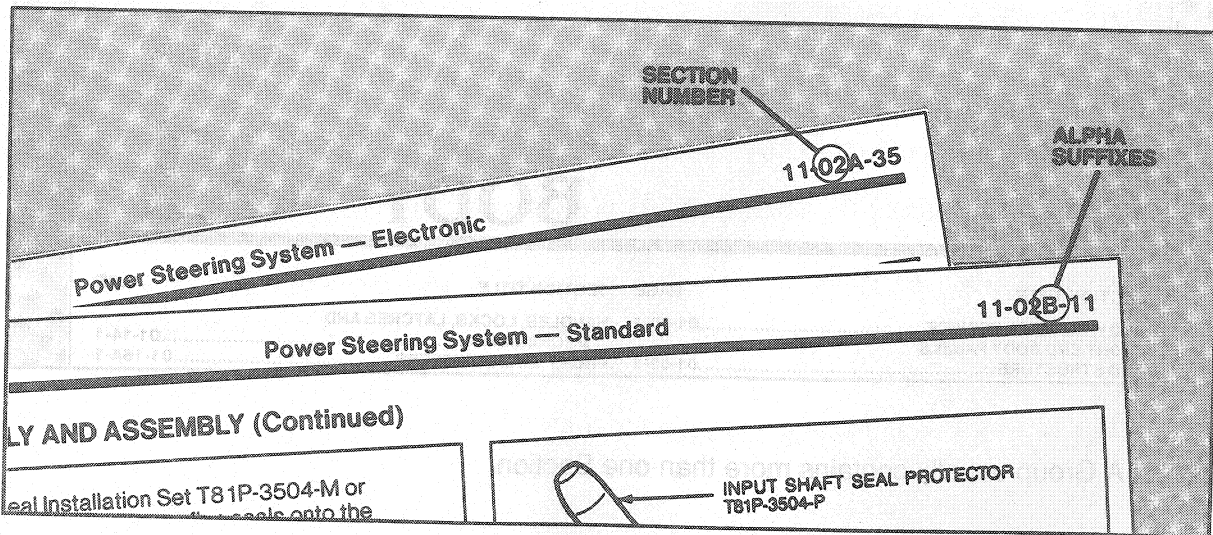

To assist in locating a subject, whenever feasible, Section titles have the subject first, followed by a descriptive word(s).

- Mirrors – Rearview
- Mirrors – Power