

GENERAL SERVICE INFORMATION

GROUP 00

SECTION TITLE	PAGE	SECTION TITLE	PAGE
IDENTIFICATION CODES	00-01-1	MAINTENANCE AND LUBRICATION	00-03-1
LIFTING, JACKING, SPARE TIRE STOWAGE AND EMERGENCY TOWING	00-02-1	NOISE, VIBRATION AND HARSHNESS	00-04-1

SECTION 00-01 Identification Codes

SUBJECT	PAGE	SUBJECT	PAGE
DESCRIPTION		IDENTIFICATION CODES	00-01-4
Official Vehicle Identification Number	00-01-1	VEHICLE APPLICATION	00-01-1
Vehicle Certification Label	00-01-1		

VEHICLE APPLICATION

Taurus / Sable.

DESCRIPTION

Official Vehicle Identification Number

The official Vehicle Identification Number (VIN) for title and registration purposes is stamped on a metal tab that is fastened to the instrument panel close to the windshield on the LH side of the vehicle and is visible from outside.

Vehicle Certification Label

The Vehicle Certification Label (V.C. Label) is affixed on the LH front door lock panel or door pillar. The upper half of the label contains the name of manufacturer, month and year of manufacture, Gross Vehicle Weight Rating (GVWR), Gross Axle Weight Rating (GAWR) and the certification statement.

The V.C. Label also contains a 17 character Vehicle Identification Number. This number is used for warranty identification of the vehicle, and indicates: manufacturer, type of restraint system, line, series, body type, engine, model year and consecutive unit number.

The last six digits of the Vehicle Identification Number indicate the Consecutive Unit Number of each unit built at each assembly plant. The Consecutive Unit Numbers begin as follows:

100 001 thru 600 000: Ford Division Vehicles.