

MAINTENANCE SCHEDULE AND RECORD LOG (Continued)

- Operating in severe dust conditions.
- Extensive idling, such as police, taxi or door-to-door delivery service.

Schedule B

Follow Maintenance Schedule B if, generally, you drive your vehicle on a daily basis for more than 10 miles (16 km) and NONE OF THE CONDITIONS NOTED ABOVE APPLY TO YOUR DRIVING HABITS.

Schedule A

SERVICE INTERVALS — PERFORM AT THE DISTANCES OR MONTHS SHOWN, WHICHEVER OCCURS FIRST.

NOTE: Items for Emission Control Service are shown in this type and style.

FOR ITEMS MARKED WITH A NUMBER IN PARENTHESES SUCH AS (1), SEE FOOTNOTE AT THE END OF THIS SECTION.

NOTE: Schedule A provides maintenance intervals for replacing your air cleaner filter if you drive in severe dust conditions. However, the conditions you drive in may require even more frequent air cleaner replacement intervals than those shown. Check with your Dealer.

EVERY 3 MONTHS / 3,000 MILES

- Oil and oil filter changes are for ALL engines (3.8L, 3.0L, 3.0L FF, 3.0L SHO and 3.2L SHO).

ONCE A YEAR

- Check engine coolant protection, hoses and clamps.

EVERY 36 MONTHS

- Replace engine coolant.

CAUTION: Engine oil, spark plugs and fuel filters for the flexible fuel vehicle (FF) are unique and not to be substituted with gasoline engine components.

NOTE: Replace FF fuel filters as required.

NOTE: Kilometers intervals are rounded off.

Regular Maintenance Intervals

3,000 MILES (5 000 Kilometers)

- Change engine oil and oil filter every 3,000 miles (5 000 km) or 3 months.

6,000 MILES (9 500 Kilometers)

- Change engine oil and oil filter every 3,000 miles (5 000 km) or 3 months.
- Rotate tires.

9,000 MILES (14 500 Kilometers)

- Change engine oil and oil filter every 3,000 miles (5 000 km) or 3 months.

12,000 MILES (19 000 Kilometers)

- Change engine oil and oil filter every 3,000 miles (5 000 km) or 3 months.

15,000 MILES (24 000 Kilometers)

- Change engine oil and oil filter every 3,000 miles (5 000 km) or 3 months.

18,000 MILES (29 000 Kilometers)

- Change engine oil and oil filter every 3,000 miles (5 000 km) or 3 months.

21,000 MILES (34 000 Kilometers)

- Change engine oil and oil filter every 3,000 miles (5 000 km) or 3 months.
- Rotate tires.

24,000 MILES (39 000 Kilometers)

- Change engine oil and oil filter every 3,000 miles (5 000 km) or 3 months.
- Check battery fluid level (SHO only) every 24 months.

27,000 MILES (43 000 Kilometers)

- Change engine oil and oil filter every 3,000 miles (5 000 km) or 3 months.

30,000 MILES (48 000 Kilometers)

- Change engine oil and oil filter every 3,000 miles (5 000 km) or 3 months.
- Replace engine coolant every 30,000 miles (48 000 km) or 36 months.
- Replace spark plugs 3.8L V-6, 3.0L FF (except 3.8L California).
- Replace air cleaner filter—(all engines). (1)
- Inspect exhaust heat shields.
- Change automatic transaxle fluid. (2)
- Inspect disc brake pads and rotors (front)—(4-wheel disc, if equipped). (3)
- Inspect brake linings and drums (rear). (3) (4)

33,000 MILES (53 000 Kilometers)

- Change engine oil and oil filter every 3,000 miles (5 000 km) or 3 months.

36,000 MILES (58 000 Kilometers)

- Change engine oil and oil filter every 3,000 miles (5 000 km) or 3 months.
- Rotate tires.

39,000 MILES (63 000 Kilometers)

- Change engine oil and oil filter every 3,000 miles (5 000 km) or 3 months.