

MAINTENANCE SCHEDULE AND RECORD LOG (Continued)

42,000 MILES (67 000 Kilometers)

- Change engine oil and oil filter every 3,000 miles (5 000 km) or 3 months.

45,000 MILES (72 000 Kilometers)

- Change engine oil and oil filter every 3,000 miles (5 000 km) or 3 months.

48,000 MILES (77 000 Kilometers)

- Change engine oil and oil filter every 3,000 miles (5 000 km) or 3 months.
- Check battery fluid level (SHO) every 24 months.

51,000 MILES (82 000 Kilometers)

- Change engine oil and oil filter every 3,000 miles (5 000 km) or 3 months.
- Rotate tires.

54,000 MILES (87 000 Kilometers)

- Change engine oil and oil filter every 3,000 miles (5 000 km) or 3 months.

57,000 MILES (92 000 Kilometers)

- Change engine oil and oil filter every 3,000 miles (5 000 km) or 3 months.

60,000 MILES (96 000 Kilometers)

- Change engine oil and oil filter every 3,000 miles (5 000 km) or 3 months.
- Replace engine coolant every 30,000 miles (48 000 km) or 36 months.
- Replace PCV valve—all engines.
- Replace spark plugs—3.8L; 3.0L, 3.0L FF; (3.0L/3.2L SHO platinum plugs).
- Inspect accessory drive belt(s).
- Replace air cleaner filter—3.8L, 3.0L, 3.0L FF, 3.0L SHO/3.2L SHO. (1)
- Replace cam belt and adjust valve lash (3.0L/3.2L SHO only).
- Inspect exhaust heat shields.
- Change automatic transaxle fluid. (2)
- Inspect disc brake pads and rotors (front) (4-wheel disc if equipped). (3)
- Inspect brake linings and drums (rear). (3) (4)

63,000 MILES (101 300 Kilometers)

- Change engine oil and oil filter every 3,000 miles (5 000 km) or 3 months.

66,000 MILES (106 000 Kilometers)

- Change engine oil and oil filter every 3,000 miles (5 000 km) or 3 months.
- Rotate tires.

69,000 MILES (111 000 Kilometers)

- Change engine oil and oil filter every 3,000 miles (5 000 km) or 3 months.

72,000 MILES (116 000 Kilometers)

- Change engine oil and oil filter every 3,000 miles (5 000 km) or 3 months.

75,000 MILES (121 000 Kilometers)

- Change engine oil and oil filter every 3,000 miles (5 000 km) or 3 months.

78,000 MILES (125 000 Kilometers)

- Change engine oil and oil filter every 3,000 miles (5 000 km) or 3 months.

81,000 MILES (130 300 Kilometers)

- Change engine oil and oil filter every 3,000 miles (5 000 km) or 3 months.
- Rotate tires.

84,000 MILES (135 000 Kilometers)

- Change engine oil and oil filter every 3,000 miles (5 000 km) or 3 months.

87,000 MILES (140 000 Kilometers)

- Change engine oil and oil filter every 3,000 miles (5 000 km) or 3 months.

90,000 MILES (145 000 Kilometers)

- Change engine oil and oil filter every 3,000 miles (5 000 km) or 36 months.
- Replace engine coolant every 30,000 miles (48 000 km) or 36 months.
- Replace spark plugs 3.8L V-6, 3.0L FFV (except 3.8L California).
- Inspect accessory drive belt(s).
- Replace air cleaner filter all engines. (1)
- Inspect exhaust heat shields.
- Change automatic transaxle fluid. (2)
- Inspect disc brake pads and rotors (front)—(4-wheel disc, if equipped). (3)
- Inspect brake linings and drums (rear). (3) (4)

93,000 MILES (150 000 Kilometers)

- Change engine oil and oil filter every 3,000 miles (5 000 km) or 3 months.

96,000 MILES (154 000 Kilometers)

- Change engine oil and oil filter every 3,000 miles (5 000 km) or 3 months.
- Rotate tires.

99,000 MILES (159 000 Kilometers)

- Change engine oil and oil filter every 3,000 miles (5 000 km) or 3 months.

102,000 MILES (164 000 Kilometers)

- Change engine oil and oil filter every 3,000 miles (5 000 km) or 3 months.