

MAINTENANCE SCHEDULE AND RECORD LOG (Continued)

105,000 MILES (169 000 Kilometers)

- Change engine oil and oil filter every 3,000 miles (5 000 km) or 3 months.

108,000 MILES (174 000 Kilometers)

- Change engine oil and oil filter every 3,000 miles (5 000 km) or 3 months.
- Check battery fluid level (SHO) every 24 months.

111,000 MILES (179 000 Kilometers)

- Change engine oil and oil filter every 3,000 miles (5 000 km) or 3 months.
- Rotate tires.

114,000 MILES (183 000 Kilometers)

- Change engine oil and oil filter every 3,000 miles (5 000 km) or 3 months.

117,000 MILES (188 000 Kilometers)

- Change engine oil and oil filter every 3,000 miles (5 000 km) or 3 months.

120,000 MILES (193 000 Kilometers)

- Change engine oil and oil filter every 3,000 miles (5 000 km) or 3 months.
- Replace engine coolant every 30,000 miles (48 000 km) or 36 months.
- Replace PCV valve all engines.
- Replace spark plugs—3.8L; 3.0L, 3.0L FFV; (3.0L / 3.2L SHO platinum plugs).
- Inspect accessory drive belts(s).
- Replace air cleaner filter—3.8L, 3.0L, 3.0L FFV, 3.0L SHO / 3.2L SHO.
- Replace cam belt and adjust valve lash (3.0L / 3.2L SHO only).
- Inspect exhaust heat shields.
- Change automatic transaxle fluid. (2)
- Inspect disc brake pads and rotors (front) (4-wheel disc if equipped). (3)
- Inspect brake linings and drums (rear). (3) (4)

(1) If operating in severe dust, more frequent intervals may be required. Consult your dealer.

(2) Change automatic transaxle fluid if your driving habits frequently include one or more of the following conditions:

- Operation during hot weather (above 90°F, 32°C), carrying heavy loads and in hilly terrain.
- Towing a trailer or using a car-top carrier.
- Police, taxi or door-to-door delivery service.

(3) If your driving includes continuous stop-and-go driving or driving in mountainous areas, more frequent intervals may be required.

(4) Rear disc brake pads and rotors—SHO Taurus.

Schedule B

SERVICE INTERVALS — PERFORM AT THE MONTHS OR DISTANCES SHOWN, WHICHEVER OCCURS FIRST.

NOTE: Items for Emission Control Service are shown in this type style.

FOR ITEMS MARKED WITH NUMBER IN PARENTHESES SUCH AS (1), SEE FOOTNOTE AT THE END OF THIS SECTION.

EVERY 3 MONTHS / 3,000 MILES

- Oil and oil filter changes are for all engines (3.8L, 3.0L, 3.0L FF, 3.0L SHO and 3.2L SHO).

ONCE A YEAR

- Check engine coolant protection, hoses and clamps.

EVERY 36 MONTHS

- Replace engine coolant.

CAUTION: Engine oil, spark plugs and fuel filters for the flex fuel vehicle (FF) are unique and are not to be substituted with gasoline engine components.

NOTE: Replace FF fuel filters as required.

NOTE: Kilometer intervals are rounded off.

Regular Maintenance Intervals For Schedule B

7,500 MILES (12 000 Kilometers)

- Change engine oil and oil filter every 7,500 miles (12 000 km) or 6 months.
- Rotate tires.

15,000 MILES (24 000 Kilometers)

- Change engine oil and oil filter every 7,500 miles (12 000 km) or 6 months.

22,500 MILES (36 000 Kilometers)

- Change engine oil and oil filter every 7,500 miles (12 000 km) or 6 months.
- Check battery fluid level (SHO only) every 24,000 miles or (3).
- Rotate tires.

30,000 MILES (48 000 Kilometers)

- Change engine oil and oil filter every 7,500 miles (12 000 km) or 6 months.
- Replace engine coolant every 30,000 miles (48 000 km) or 36 months.
- Replace spark plugs—3.8L V-6, 3.0L FF vehicles (except 3.8L California).
- Replace air cleaner filter—(all engines). (1)
- Inspect disc brake pads and rotors (front) (all four, if equipped). (2)