

MAINTENANCE SCHEDULE AND RECORD LOG (Continued)

- Inspect exhaust heat shields.
- Inspect brake linings and drums (rear). (2) (4)
- Inspect and repack rear wheel bearings.

37,500 MILES (60 000 Kilometers)

- Change engine oil and oil filter every 7,500 miles (12 000 km) or 6 months.
- Rotate tires.

45,000 MILES (72 000 Kilometers)

- Change engine oil and oil filter every 7,500 miles (12 000 km) or 6 months.

52,500 MILES (84 000 Kilometers)

- Change engine oil and oil filter every 7,500 miles (12 000 km) or 6 months.
- Check battery fluid level (SHO only) every 24,000 miles or (3).
- Rotate tires.

60,000 MILES (96 000 Kilometers)

- Change engine oil and oil filter every 7,500 miles (12 000 km) or 6 months.
- Replace engine coolant every 30,000 miles (48 000 km) or 36 months.
- Replace spark plugs—3.8L V-6; 3.0L V-6, 3.0L FF; 3.0L and 3.2L SHO (platinum plugs).
- Inspect accessory drive belt(s).
- Replace air cleaner filter (all engines). (1)
- Replace cam belt and adjust valve lash (3.0L / 3.2L SHO only).
- Replace PCV valve—all engines.
- Inspect exhaust heat shields.
- Inspect disc brake pads and rotors (all four, if equipped). (2)
- Inspect brake linings and drums (rear). (2) (4)

67,500 MILES (109 000 Kilometers)

- Change engine oil and oil filter every 7,500 miles (12 000 km) or 6 months.
- Rotate tires.

75,000 MILES (121 000 Kilometers)

- Change engine oil and oil filter every 7,500 miles (12 000 km) or 6 months.

82,500 MILES (133 000 Kilometers)

- Change engine oil and oil filter every 7,500 miles (12 000 km) or 6 months.
- Rotate tires.

90,000 MILES (145 000 Kilometers)

- Change engine oil and oil filter every 7,500 miles (12 000 km) or 6 months.
- Replace engine coolant every 30,000 miles (48 000 km) or 36 months.

- Replace spark plugs—3.8L V-6, 3.0L FF (except 3.8L California).

- Inspect accessory drive belt(s).

- Replace air cleaner filter—all engines. (1)

97,500 MILES (157 000 Kilometers)

- Change engine oil and oil filter every 7,500 miles (12 000 km) or 6 months.

- Rotate tires.

105,000 MILES (169 000 Kilometers)

- Change engine oil and oil filter every 7,500 miles (12 000 km) or 6 months.

112,500 MILES (181 000 Kilometers)

- Change engine oil and oil filter every 7,500 miles (12 000 km) or 6 months.

- Rotate tires.

120,000 MILES (193 000 Kilometers)

- Change engine oil and oil filter every 7,500 miles (12 000 km) or 6 months.
- Replace engine coolant every 30,000 miles (48 000 km) or 36 months.
- Replace spark plugs—3.8L V-6; 3.0L V-6 3.0L FF 3.0L and 3.2L SHO (platinum plugs).
- Change automatic transaxle fluid. (3)
- Inspect accessory drive belt(s).
- Replace air cleaner filter (all engines). (1)
- Replace cam belt and adjust valve lash (3.0L / 3.2L SHO only).
- Replace PCV valve (all engines).
- Inspect exhaust heat shields.
- Inspect disc brake pads and rotors (all four, if equipped). (2)
- Inspect brake linings and drums (rear). (2) (4)

(1) If operating in severe dust, more frequent intervals may be required. Consult your dealer.

(2) If your driving includes continuous stop-and-go driving or driving in mountainous / hilly areas, more frequent intervals may be required.

(3) If operating in temperatures above 90°F (32°C), check more often.

(4) Rear disc brake pads and rotors—SHO Taurus.

LUBRICATION

Lubrication Charts

The illustrations show typical chassis and engine lubrication points. Vehicles with optional or special equipment may have slightly different or additional lubrication points.

A table of recommended lubricants is included at the end of this Section.