


LUBRICATION (Continued)

Engine Lubrication Service Points

3.0L Base Engine

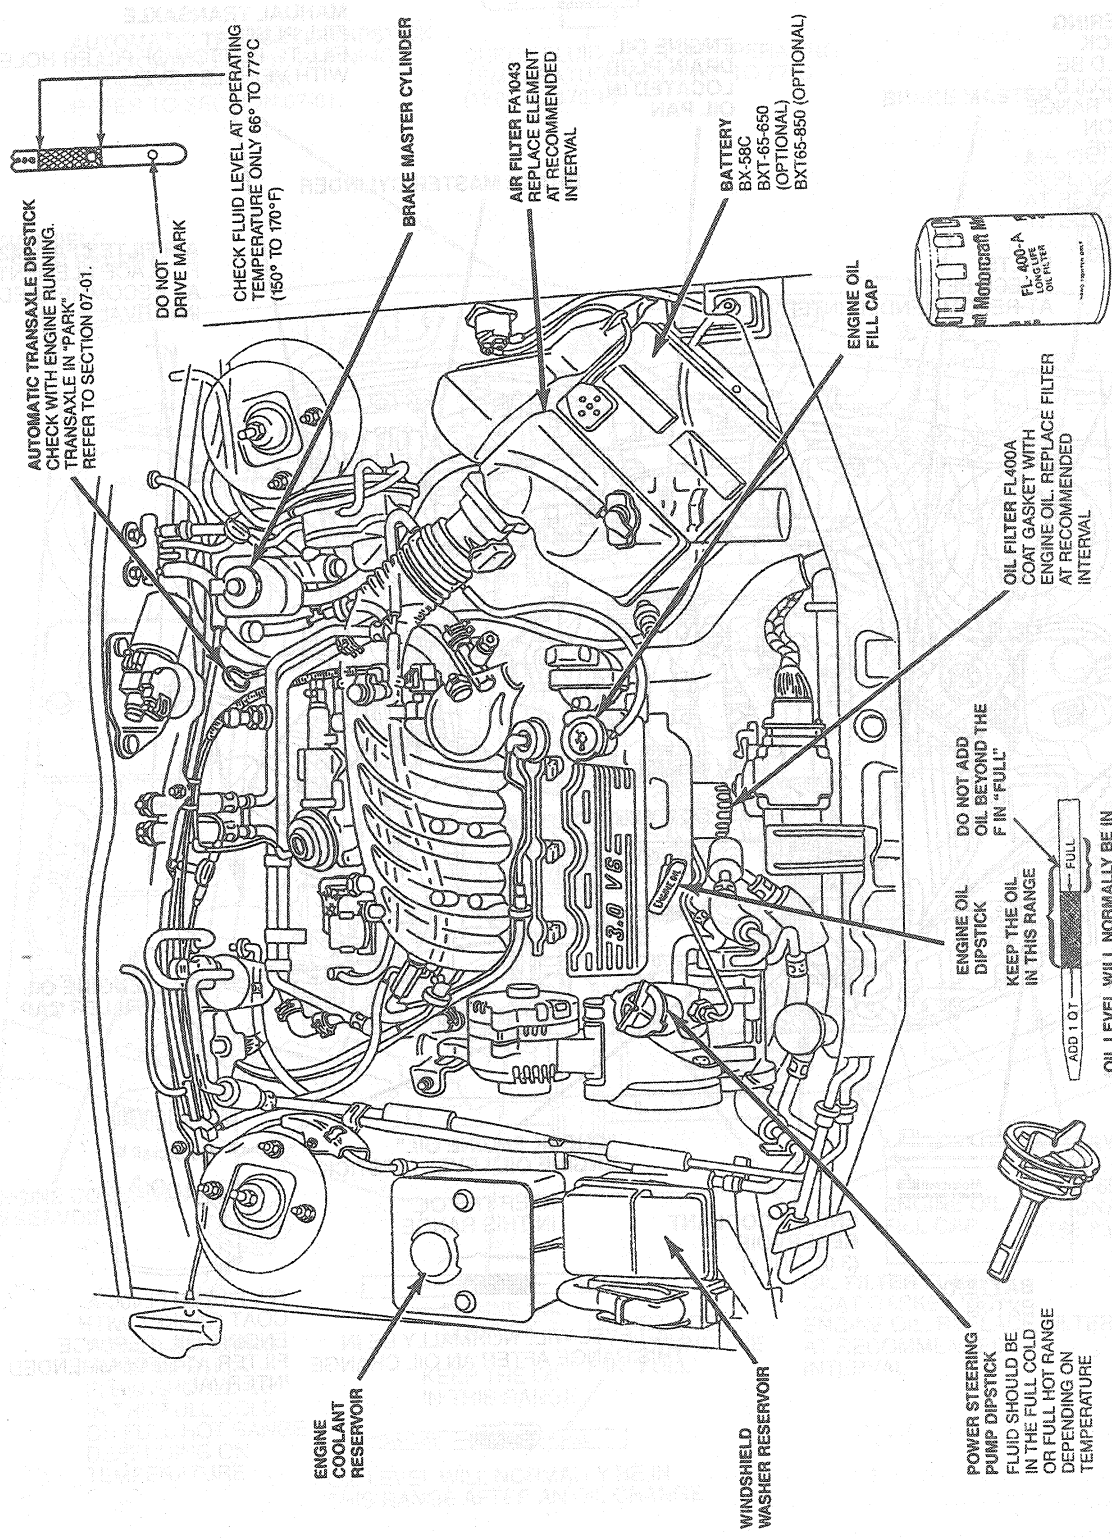

AUTOMATIC TRANSAXLE DIPSTICK
CHECK WITH ENGINE RUNNING.
TRANSAXLE IN "PARK"
REFER TO SECTION 07-01.

DO NOT
DRIVE MARK


CHECK FLUID LEVEL AT OPERATING
TEMPERATURE ONLY 66° TO 77°C
(150° TO 170°F)

BRAKE MASTER CYLINDER

AIR FILTER FA1043
REPLACE ELEMENT
AT RECOMMENDED
INTERVAL


BATTERY
BX-58C
BXT-65-650
(OPTIONAL)
BXT-65-850 (OPTIONAL)

**ENGINE OIL
FILL CAP**

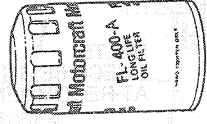


OIL FILTER FL-400A
COAT GASKET WITH
ENGINE OIL - REPLACE FILTER
AT RECOMMENDED
INTERVAL

 **ENGINE OIL
DIPSTICK**
DO NOT ADD
OIL BEYOND THE
F IN "FULL"



OIL LEVEL WILL NORMALLY BE IN
THIS RANGE AFTER AN OIL CHANGE.

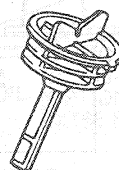

**POWER STEERING
PUMP DIPSTICK**
FLUID SHOULD BE
IN THE FULL COLD
OR FULL HOT RANGE
DEPENDENT ON
TEMPERATURE

**ENGINE
COOLANT
RESERVOIR**

**WINDSHIELD
WASHER RESERVOIR**

Y3964-C