

LUBRICATION (Continued)

 
3.0L Flexible Fuel (FF) Vehicle

3.0L Engine

Check Lubrication Points

**AUTOMATIC TRANSAXLE DIPSTICK**  
CHECK WITH ENGINE RUNNING.  
TRANSAXLE IN "PARK"  
REFER TO SECTION 07-01.

DO NOT DRIVE MARK




CHECK FLUID LEVEL AT OPERATING  
TEMPERATURE ONLY 66° TO 77°C  
(150° TO 170°F)


**BRAKE MASTER CYLINDER**

**AIR FILTER FA1043**  
REPLACE ELEMENT  
AT RECOMMENDED  
INTERVAL

**WINDSHIELD  
WASHER RESERVOIR**

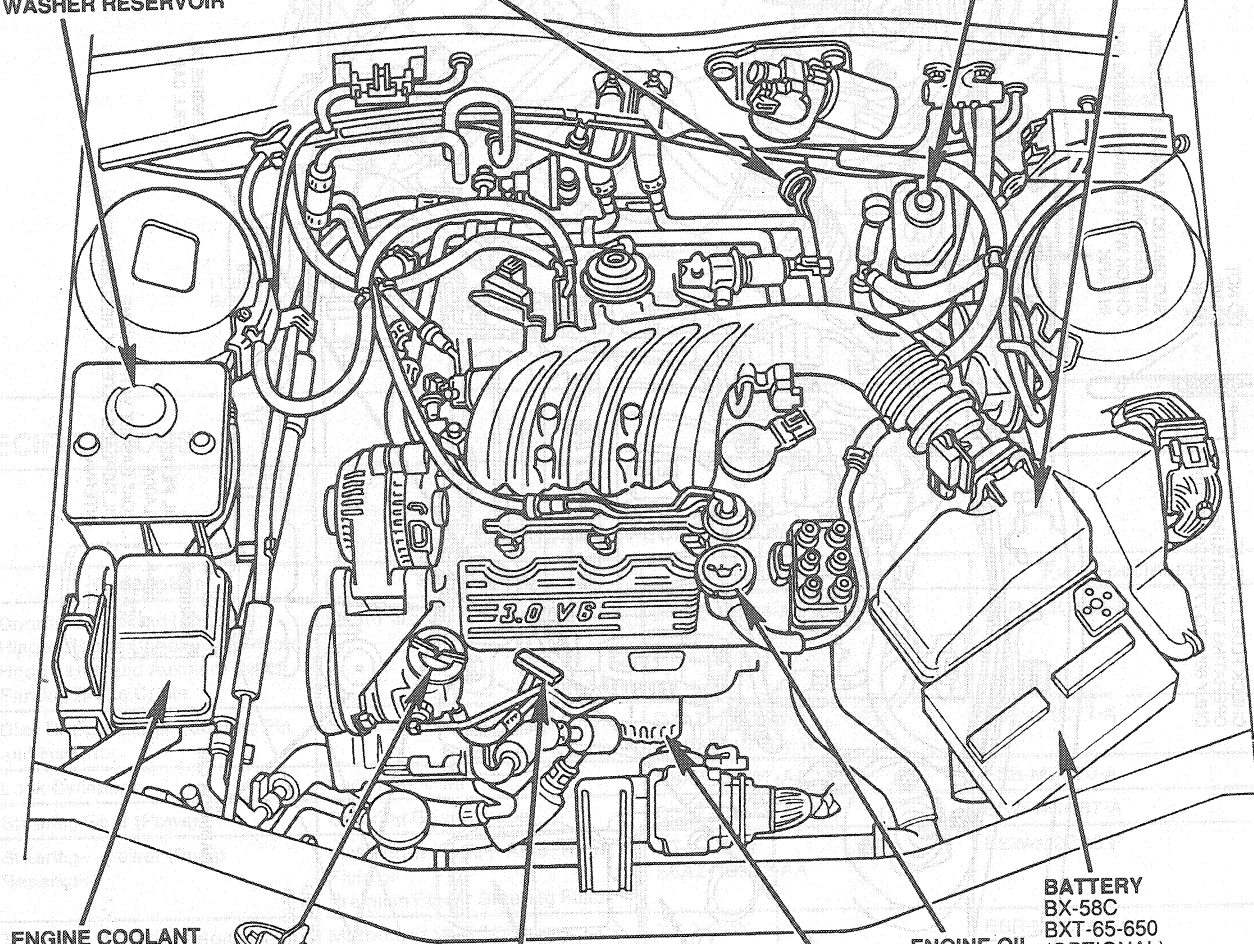

**ENGINE COOLANT  
RESERVOIR**

 

**POWER STEERING  
PUMP DIPSTICK**  
FLUID SHOULD BE  
IN THE FULL COLD  
OR FULL HOT RANGE  
DEPENDING ON  
TEMPERATURE

**ENGINE OIL  
DIPSTICK**

DO NOT ADD  
OIL BEYOND THE  
F IN "FULL"

KEEP THE OIL  
IN THIS RANGE

 


OIL LEVEL WILL NORMALLY BE IN  
THIS RANGE AFTER AN OIL CHANGE

**ENGINE OIL  
FILL CAP**

**BATTERY**  
BX-58C  
BXT-65-650  
(OPTIONAL)  
BXT65-850 (OPTIONAL)

**OIL FILTER FL400A**  
COAT GASKET WITH  
ENGINE OIL. REPLACE FILTER  
AT RECOMMENDED  
INTERVAL



Y4244-A

(Continued)