


REMOVAL AND INSTALLATION (Continued)

REMOVAL AND INSTALLATION (Continued)

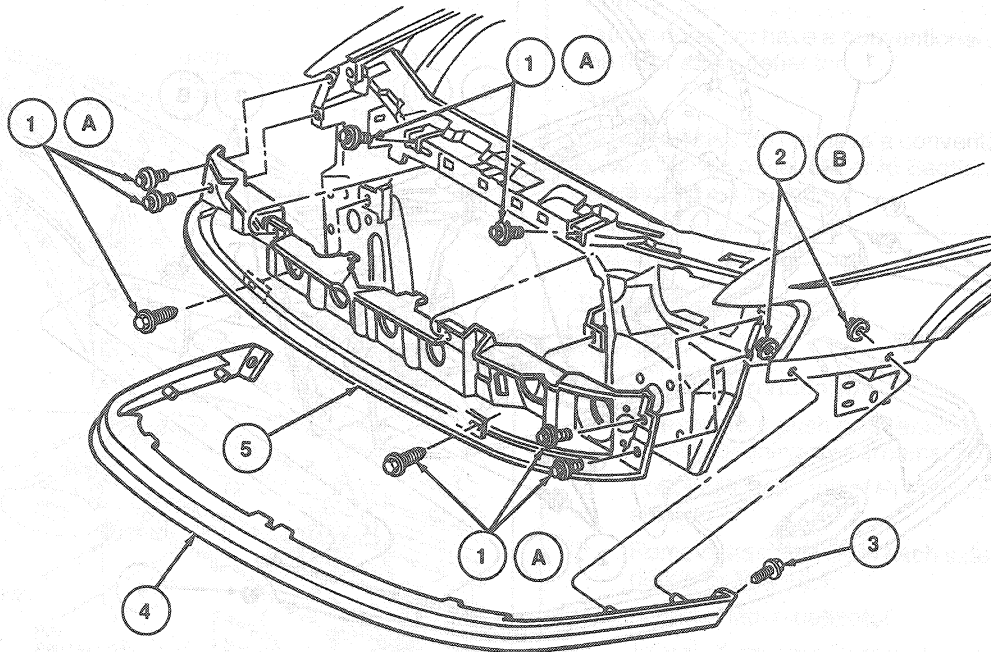

N9626-A

Item	Part Number	Description
1A	N606676-S55	Screw and Washer Assy (8 Req'd)
2B	621906-S36	Nut and Washer (2 Req'd Each Side)
3	388577-S	Push Pin (1 Req'd Each Side)
4	17A878	Front Bumper Stone Deflector Assy

(Continued)

Item	Part Number	Description
5	8A164	Grille Opening Panel Reinforcement
A		Tighten to 5.3-7.1 N·m (4-5 Lb·Ft)
B		Tighten to 4.5-6.9 N·m (3-5 Lb·Ft)

TN9626A

Splash Shield and Insulator**Removal and Installation**

1. Remove pins securing splash shield to body.
2. Remove screws securing splash shield to fender and lower rear attachment to body side. Remove splash shield.

3. Remove insulator assembly from fender by removing retaining pins. Remove insulator.
4. To install, reverse Removal procedure.