

ADJUSTMENTS (Continued)

Item	Part Number	Description
4	N8D1839-S53	Nut
5A	16797	Hinge Pivot Nut
6A	N606689-S36	Screw and Washer Assy (2 Req'd Each Hinge)
A		Tighten to 22-34 N·m (17-25 Lb·Ft)

Hood Bumpers

Hood bumpers, located on the top RH and top LH surfaces of the radiator support, can be adjusted up and down to provide a flush surface alignment of the hood panel with the front fenders as follows:

1. Loosen hood bumper locknut.

2. Screw hood bumper in or out, as necessary.
3. Install bumper locknut.

SPECIFICATIONS

TORQUE SPECIFICATIONS

Description	N·m	Lb·Ft
Hood Pivot Nut	22-34	17-25
Hinge-to-Body Retaining Bolts	22-34	17-25
Hinge-to-Hood Retaining Bolts	22-34	17-25
Battery Tray Screws	8-12	6-9
Battery Hold Down Brace Nut	10-16	7-12
Stone Deflector Screws	5.3-7.1	4-5
Stone Deflector Nuts	4.5-6.9	3-5