

SECTION 01-03 Doors, Deck Lid and Liftgate

SUBJECT	PAGE	SUBJECT	PAGE
ADJUSTMENTS		REMOVAL AND INSTALLATION (Cont'd.)	
Door Alignment.....	01-03-8	Doors.....	01-03-2
Hinge, Liftgate.....	01-03-9	Hinge.....	01-03-2
Luggage Compartment Deck Lid.....	01-03-8	Hinge, Liftgate.....	01-03-6
Torsion Bar Loading.....	01-03-9	Liftgate.....	01-03-6
Torsion Bar, Deck Lid Hinge.....	01-03-8	Luggage Compartment Deck Lid.....	01-03-6
DESCRIPTION		Luggage Compartment Deck Lid Weatherstrip.....	01-03-6
Deck Lid Hinges—Lubricant.....	01-03-1	Weatherstrips.....	01-03-4
Door and Roof Rail Weatherstrip Lubricant.....	01-03-1	SPECIAL SERVICE TOOLS	01-03-9
Door Hinge.....	01-03-1	SPECIFICATIONS	01-03-9
REMOVAL AND INSTALLATION		VEHICLE APPLICATION	01-03-1
Door Hinge Check.....	01-03-4		

VEHICLE APPLICATION

Taurus/Sable.

DESCRIPTION

Door and Roof Rail Weatherstrip Lubricant

Silicone Lubricant COAZ-19553-AA (Jelly) and D7AZ-19553-AA (Spray) (ESR-M13P4-A)

Use this lubricant on the door and window weatherstrips. It is recommended that silicone lubricant be applied to the weatherstrips whenever necessary. Silicone lubricant helps avoid weatherstrip squeaks and retards excess weatherstrip wear from chafing between the door glass upper frame and the weatherstrip. It also helps to retain door window alignment by reducing friction between the glass frame and the rubber weatherstrip.


Deck Lid Hinges—Lubricant

Multi-Purpose Grease Spray D7AZ-19584-AA (ESR-M1C159-A and ESB-M1C93-A)

Use this lubricant on deck lid hinges. Apply evenly to all movable hinge surfaces when a binding condition occurs.

Door Hinge

Use Multi-Purpose Grease Spray D7AZ-19584-AA (ESR-M1C159-A and ESB-M1C93-A) or equivalent to lubricate door hinges.

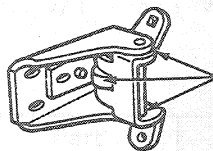

LUBRICATE
BUSHINGS
AND ROLLER
PIN

N6585-B