
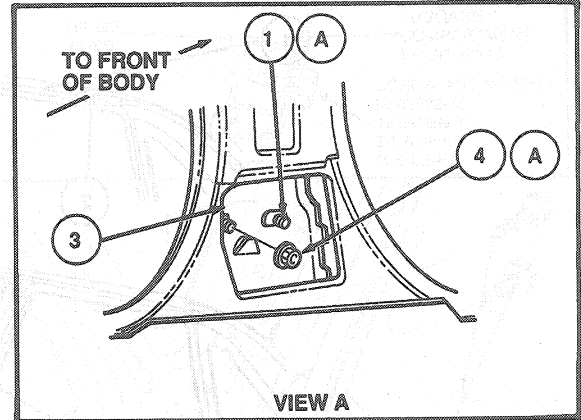


REMOVAL AND INSTALLATION (Continued)

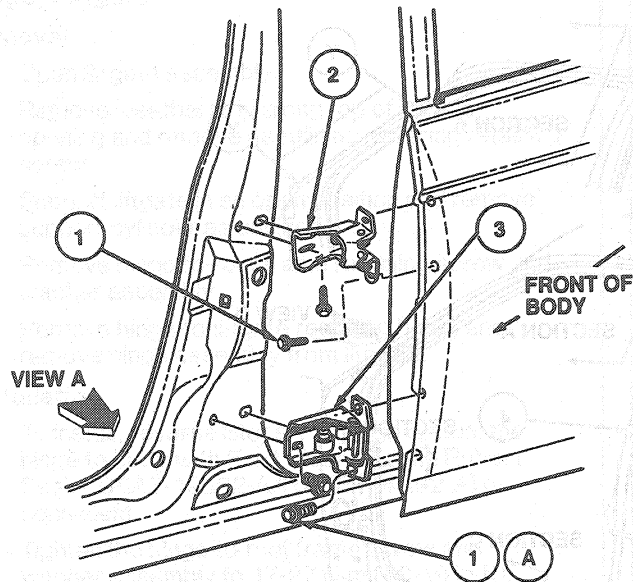

N6618-E

Item	Part Number	Description
1A	N803417-S2	Bolt
2	26800	Upper Hinge Assy
3	26866	Lower Hinge Assy
4A	N801193-S2	Nut
A		Tighten to 25-35 N·m (18-26 Lb·Ft)

Door Hinge Check

NOTE: The front door hinge check can be serviced without removing the complete hinge assembly. Perform the following procedure:

Removal

1. Open front door with broken hinge check.
2. Remove exposed hinge-to-body retaining bolt and retain.
3. Insert a chisel, 267mm (10-1/2 inches) long with a 19mm (3/4 inch) cutting blade, between hinge half on body and back side of hinge check. Hammer until chisel unseats rivet securing hinge check-to-body side hinge.
4. Remove broken hinge check and discard.

Installation

1. Loosely place new door check and elastomer reinforcement into body door hinge.
2. Install hinge-to-body retaining bolt to secure new hinge check and reinforcement-to-body side hinge. Tighten bolt to 25-35 N·m (18-26 lb-ft).

Weatherstrips**Removal**

1. Remove interior garnish mouldings that cover weatherstrip.
2. Remove one weatherstrip retaining screw at base of A-pillar.
3. Pull weatherstrip off weld flange around door opening.

Installation

1. Inspect weatherstrip mounting flange for distortion. Flatten any distortions by using vise grips or pair of hammers.
 2. Begin installation at point X as shown.
 3. Continue installing weatherstrip around door opening. Weatherstrip must not be stretched during installation.
 4. Cut weatherstrip approximately 6.35-12.7mm (1/4-1/2 inch) longer than needed and butt ends together.
 5. Install retaining screw on A-pillar.
 6. Install garnish mouldings. Refer to Section 01-05.
- NOTE:** Add a dab of Instant Adhesive E8AZ-19554-A (WSK-M2G402-A4 or 414) or equivalent to secure end of weatherstrip (except Sable sedan).