



REMOVAL AND INSTALLATION (Continued)

- Remove rear corner upper finish panel retaining screws. Disconnect electrical connectors and remove panel.

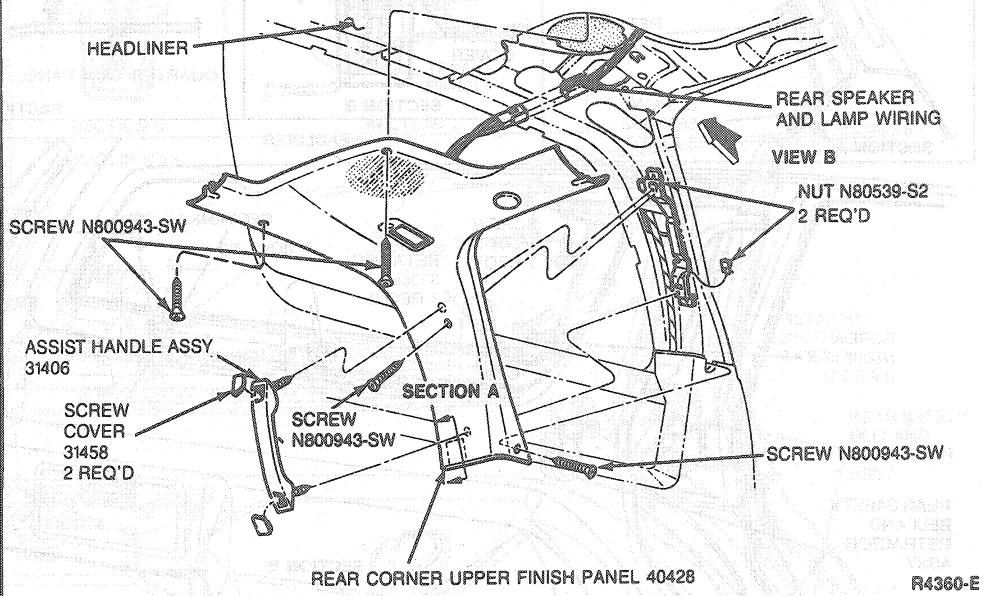

- Remove center body pillar mouldings and roof side mouldings as outlined.
- Remove liftgate scuff plate retaining screws and scuff plate.
- Remove spare wheelcover retaining screws and cover (LH side, if so equipped).
- Remove quarter trim panel retaining screws and panel.
- To install, reverse Removal procedure.

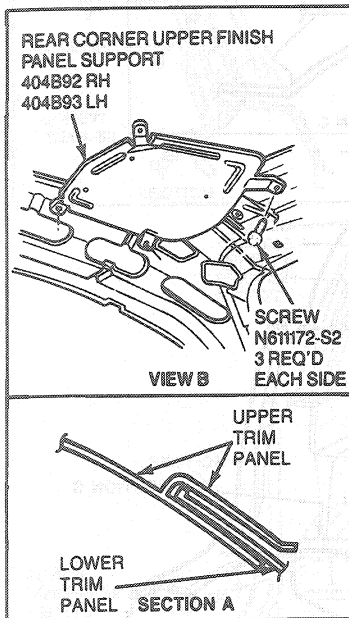