
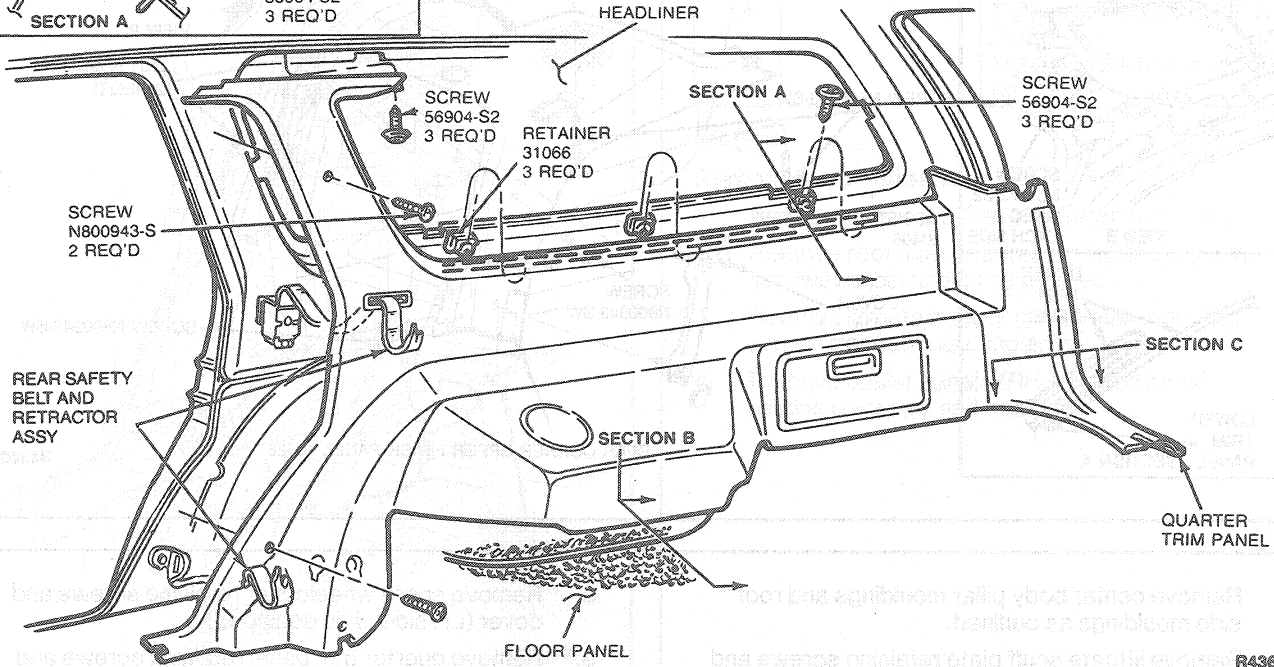


REMOVAL AND INSTALLATION (Continued)

REMOVAL AND INSTALLATION (Continued)

RH

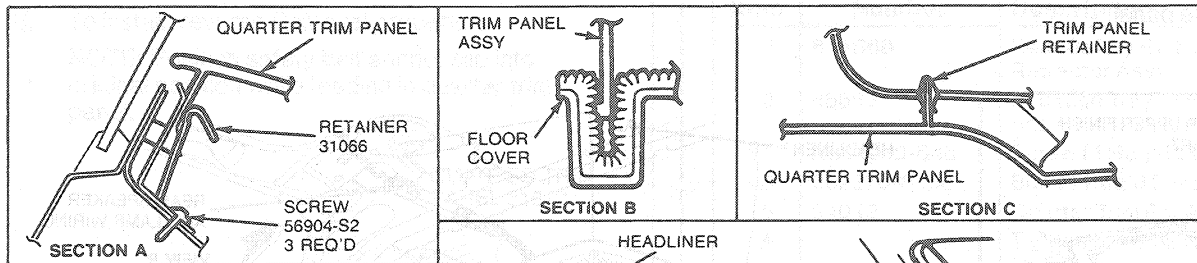

R4362-C