

REMOVAL AND INSTALLATION (Continued)

Sun Visors

Sun visors are attached to the vehicle on both the RH and LH side over the windshield. Some vehicles have lighted visor vanities on both the driver's and the passenger's side. Both sun visors and center retaining clips must be removed prior to headlining removal.

Sun Visor—With Lamp

RH

Removal and Installation

1. Remove visor assembly from vehicle.

2. Remove six screws retaining vanity mirror, lamp and back cover to visor and remove vanity mirror assembly.

NOTE: To replace one or more of the bulbs, it is only necessary to snap out the bulb cover lenses using a small screwdriver, and pull the bulb from the socket.

3. To install, reverse Removal procedure.

Sun Visor

