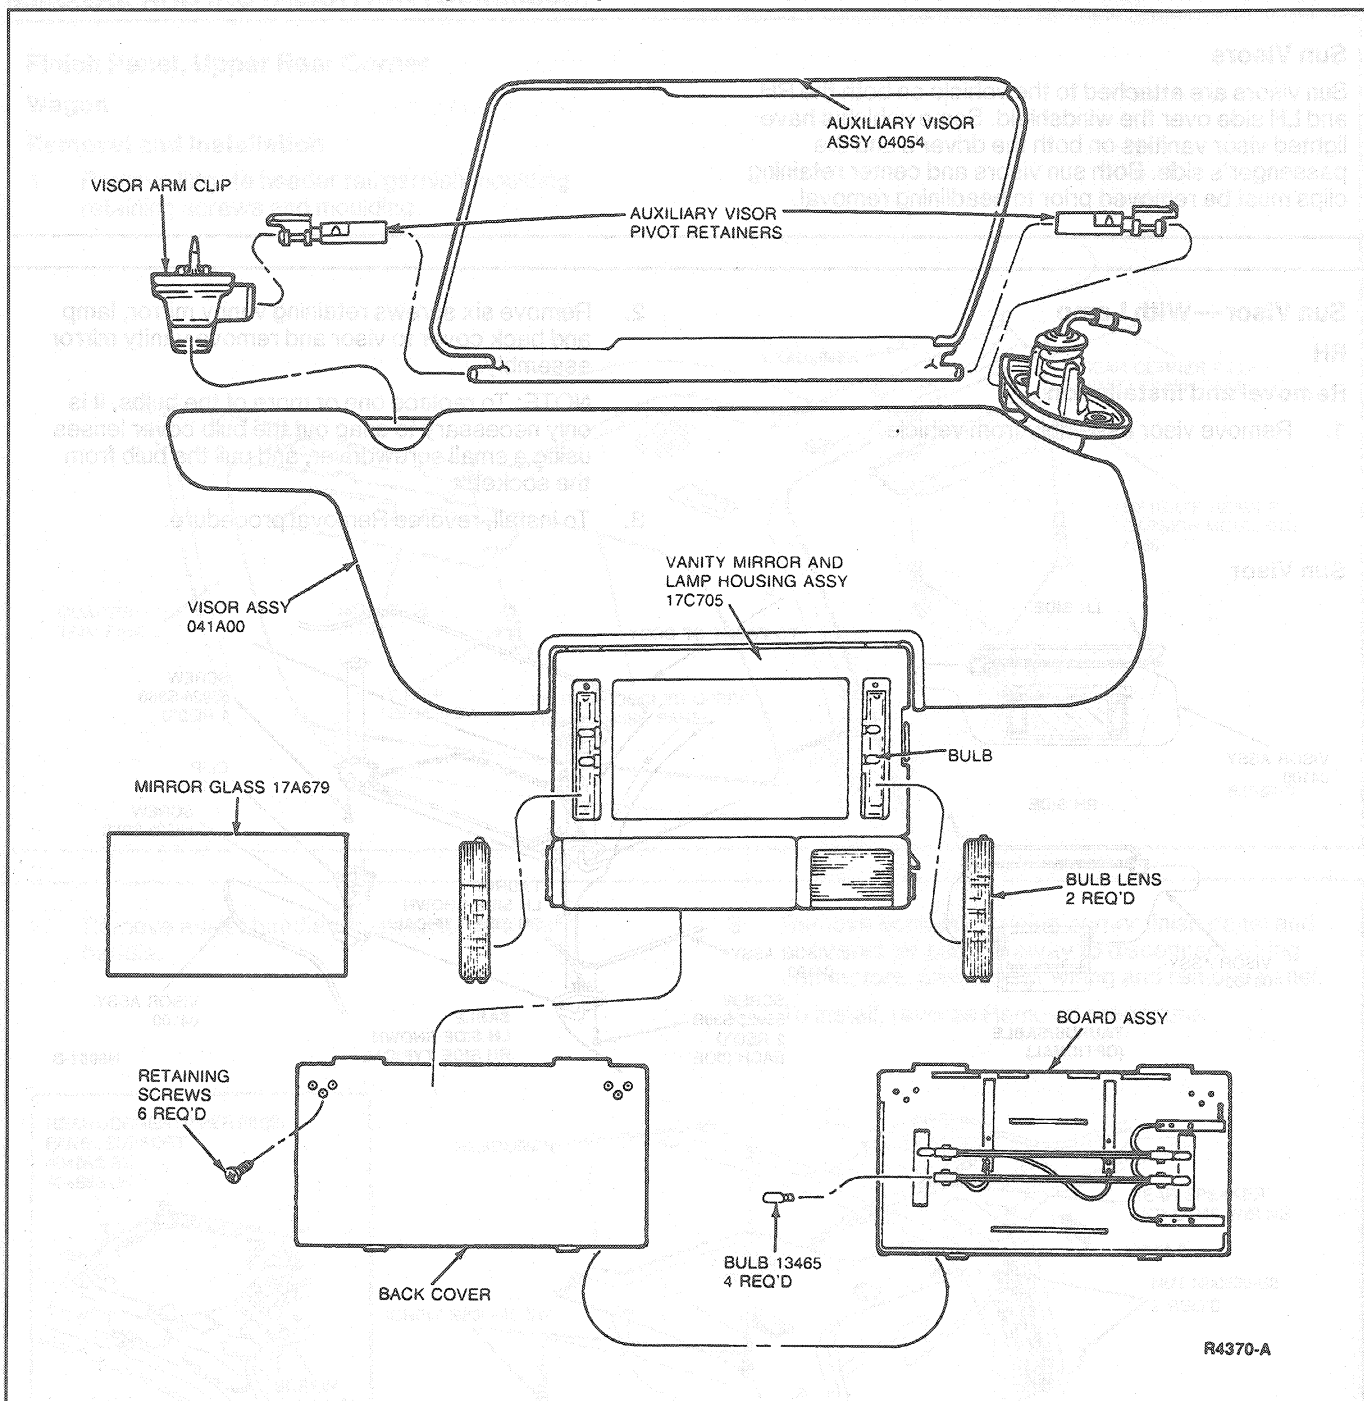


REMOVAL AND INSTALLATION (Continued)

**Auxiliary Visor Assembly**

RH

Removal and Installation

1. Swing main visor assembly to side.
2. Remove screw retaining visor arm clip to headlining. Refer to illustration under Sun Visor with Lamp, RH.
3. Pull both visor arm clip and auxiliary visor pivot retainer away from auxiliary visor assembly.

4. Pull the auxiliary visor assembly away from opposite side auxiliary visor pivot retainer.

5. To install, reverse Removal procedure.

LH

Removal and Installation

1. Snap out the bulb cover lenses using a small screwdriver. Pull the bulb from socket.

NOTE: The vanity assembly cannot be replaced.