
REMOVAL AND INSTALLATION (Continued)

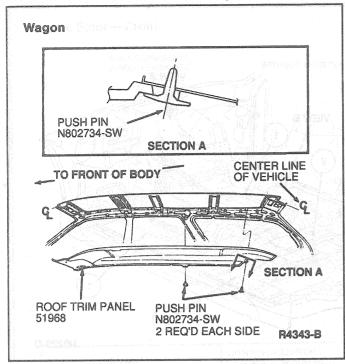

Carpets and Floor Mats

Front and Rear - One-Piece

Removal

- 1. Remove front seats. Refer to Section 01-10A.
- 2. Remove rear seat. Refer to Section 01-10A.

- Remove console assembly. Refer to Section 01-12.
- Remove scuff plate / lower body center pillar trim panels as outlined.
- 5. Remove cowl side trim panels as outlined.
- 6. Remove quarter trim panels as outlined.
- 7. Remove safety belts, as required. Refer to Section 01-20A.
- 8. Remove pushnut from weld stud on dash panel (underneath accelerator pedal).
- 9. Remove fuel filler remote release cover.
- 10. Remove floor mats and carpets.

Installation

- 1. Position carpet and floor mats in vehicle.
- 2. Install pushnut on weld stud on dash panel (underneath accelerator pedal).
- 3. Install safety belts. Refer to Section 01-20A.
- 4. Install quarter trim panels as outlined.
- 5. Install cowl side trim panels as outlined.
- 6. Install scuff plate / lower body center pillar trim panels as outlined.
- 7. Install fuel filler remote release cover.
- 8. Install console assembly. Refer to Section 01-12.
- 9. Install rear seat. Refer to Section 01-10A.
- 10. Install front seats. Refer to Section 01-10A.